



evoqua
WATER TECHNOLOGIES



WALLACE & TIERNAN[®] CHLORINE MEMBRANE
ELECTROLYSIS SYSTEM
OSEC-NXT 12 - 60

INSTRUCTION MANUAL



Note

Original manual!

 
Contents

1.	Introduction	7
1.1	Documentation	7
1.2	Conventions	8
2.	Safety	11
2.1	Intended use	11
2.2	General safety instructions	12
2.3	Handling chemicals	14
2.4	Liability for defects	19
2.5	Replacement of electrolysis cells	20
3.	Description	21
3.1	Process	21
3.2	System configuration	24
3.3	Versions	27
3.4	Required accessories	28
3.5	PLC controller	30
3.6	Functions	32
3.7	Technical data	34
4.	Installation	39
4.1	Scope of supply	39
4.2	Transport and storage	40
4.3	Ambient conditions	42
4.4	Mechanical installation	46
4.5	Electrical installation	52
4.6	Completing the acceptance certificate	55

4.7	Start up	56
4.8	Connecting to PROFIBUS DP	71
4.9	RS485 bus interface	87
5.	Operation	105
5.1	Control and display unit	105
5.2	Password protection	107
5.3	Automatic mode	109
5.4	Turning on automatic mode	111
5.5	Turning off automatic mode	111
5.6	Activating preparation manually	113
5.7	Stopping preparation manually	114
5.8	Operating messages	115
5.9	Warning messages	123
5.10	Error messages	131
5.11	Reading the cell voltage and electrolysis current	133
5.12	Menus	134
5.13	Maintenance by the operator	159
5.14	Faults	168
6.	Maintenance by a service technician	177
6.1	Performing maintenance	177
6.2	Maintenance parts sets	179
6.3	Detailed maintenance work	185
6.4	Replacing the electrolysis cell	200
6.5	Shut-down	203
6.6	Starting the system up again	205



7. Dimension drawing	207
8. Arrangement of Components	209
9. Wiring diagram	213
10. Operating journal	247
11. Index	249



1. Introduction

1.1 Documentation

1.1.1 Target groups

This instruction manual provides the responsible personnel with information that is required for the installation, operation and maintenance of the chlorine membrane electrolysis system.

It contains information that is important to the secure, fault-free, and economical operation of the chlorine membrane electrolysis system. Carefully observing these instructions will help to prevent danger, reduce repair costs and downtimes, and increases the reliability and service life of the chlorine membrane electrolysis system.

The chapters Installation and Maintenance by service technicians are intended exclusively for Evoqua service personnel or for personnel who have been trained and authorized by Evoqua. These chapters contain important information on the assembly, configuration, commissioning, maintenance and repair of the chlorine membrane electrolysis system, which can only be performed by this target groups.

Anyone working with the chlorine membrane electrolysis system must have read and understood the instruction manual, and, in particular, the safety instructions.

Please consult the table of contents and the index to find the information you require quickly.

1.2 Conventions


Notes This operating manual contains a number of notes with different priorities, which are marked with symbols.

Pictogram	Note	Meaning
	<i>Danger!</i>	Immediate danger to life and limb! If the situation is not handled properly, death or serious injury is the result.
	<i>Warning!</i>	Danger to life and limb! If the situation is not handled properly, death or serious injury may be the result.
	<i>Attention!</i>	If this warning is not observed, medium or slight injury or damage to the equipment may be the result.
	<i>Warning!</i>	Electrical hazard!
	<i>Attention!</i>	Risk of injury! Smoking, fire, naked light, welding, and work causing sparks are forbidden.
	<i>Attention!</i>	Risk of injury! Leaks can release dangerous fluids or gasses, which can cause chemical burns and unconsciousness. Use respiratory protection!
	<i>Attention!</i>	Risk of injury! Leaks can release dangerous fluids or gasses. Use face mask!
	<i>Attention!</i>	Risk of injury! Leaks can release dangerous fluids or gasses. Wear protective gloves!
	<i>Attention!</i>	Risk of injury! Leaks can release dangerous fluids or gasses. Wear an apron!

Pictogram	Note	Meaning
	<i>Attention!</i>	Risk of injury! Leaks can release dangerous fluids or gasses. Use protective footwear!
	<i>Note</i>	These notes assist in the operation of the chlorine membrane electrolysis system.

Main screen
 MENU
 Menu selection
 System
 Clean display

SYSTEM

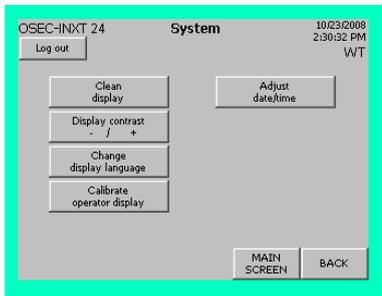

Screenshots of the various controller screens are shown, with the name immediately above the screenshot. The preceding screens are listed in the margin to show the user how to access the current screen.

2. Safety

2.1 Intended use

The chlorine membrane electrolysis system is intended exclusively for the production of sodium hypochlorite solution using saturated brine used to disinfect water.

The operational safety of the system can only be guaranteed if it is used in accordance with its intended purpose. It may only be used for the purpose defined in the contract and under the installation, operating and environmental conditions stated in this operating manual. No substances (chemicals) may be used other than those described in this operating manual. All inspection and maintenance work must be carried out at the prescribed intervals.

Compliance with the intended use also includes reading this operating manual and observing all the instructions it contains.

The operator bears full and sole responsibility if this unit is put to any use which does not comply strictly and exclusively with this intended use.

2.2 General safety instructions

Evoqua Water Technologies attaches great importance to the safety of all work relating to the chlorine membrane electrolysis system. This was already taken into account in the design of the system, by the integration of safety features.

Safety instructions

The safety instructions in this documentation must always be observed. These do not affect the validity of any additional national or company safety instructions.

Safety instructions printed on the system

All safety instructions attached to the chlorine membrane electrolysis system must be observed. They must always be complete and easily legible.

Technical standard

The chlorine membrane electrolysis system has been constructed using the best available technology and according to the accepted safety regulations. However, danger to the life and limbs of users or third parties or damage to the chlorine membrane electrolysis system or other property cannot be ruled out if the system is used by personnel who have not received suitable training and instruction. Installation and maintenance, as well as any work that is not described in this operating manual may only be performed by trained and authorized personnel.

Personnel

The operator of the overall system must ensure that only authorized and qualified personnel can work on or with the chlorine membrane electrolysis system, and within their specified area of responsibility.

"Authorized and qualified personnel" include:

Operation

- Users who have been trained and instructed by the operator, by Evoqua or by a service partner.

Installation, Start up

- Evoqua service personnel or personnel who have been trained and authorized by Evoqua for installation and start-up work. Installation and start-up may only be performed by such personnel

Maintenance

- Maintenance level 1:
Performed by trained and instructed operators
- Maintenance level 2:
Evoqua service personnel or personnel who have been trained and authorized by Evoqua for maintenance work. Level 2 maintenance may only be performed by such personnel

Electrical work

Authorized and qualified electrical technicians. All electrical work on the chlorine membrane electrolysis system may only be performed by qualified electricians

<i>Spare parts / components</i>	The trouble-free operation of the chlorine membrane electrolysis system can only be guaranteed, if original spare parts and components are used in the combination described in this instruction manual. Otherwise there is a danger of malfunction or damage to the chlorine membrane electrolysis system.
<i>Modifications and extensions</i>	Never attempt to rebuild, modify or extend the chlorine membrane electrolysis system without written approval from the manufacturer!
<i>Electrical power</i>	During normal operation, the control cabinet must remain closed. Connect cables in accordance with the terminal diagram in chapter 9..
<i>Disposal</i>	Ensure safe and environmentally-friendly disposal of agents and replaced parts.

2.3 Handling chemicals

2.3.1 General



Warning!

Chemical hazard!

A substantial quantity of chemicals is produced in the chlorine membrane electrolysis system. For safe operation and to prevent harm to persons, be sure to follow the safety instructions and warnings on the system and in this operating manual.

Everyone involved must be informed about the dangers arising from fluids and gases in the chlorine membrane electrolysis system and the connected pipes, and be instructed regarding the first aid measures to be employed. For further details see the EC safety data sheets regarding the specified CAS numbers.

The installation site and the areas where dangerous chemicals are stored or decanted must be clearly identified and labeled in accordance with the regulation (e.g. GUV).



The door outside the installation room and the vent opening of the hydrogen exhaust pipe must carry signs prohibiting fire, naked light and smoking. (The accessories set includes two signs.)

During maintenance and repair work, the following protective clothing must be worn and a gas mask must be available close by:



- Face mask



- Protective gloves



- Apron



- Protective footwear



- Gas mask

The following chemicals are produced in the chlorine membrane electrolysis system:

- | | |
|------------------------------|-----------------------|
| <i>Product</i> | • Sodium hypochlorite |
| <i>Side products</i> | • Hydrogen |
| <i>Intermediate products</i> | • Sodium hydroxide |
| | • Chlorine gas |
| | • Anolyte |

The intermediate products are produced as part of the process and as such remain temporarily in the system.



Warning!

Chemical hazard!

Leaks can release chemicals that can cause chemical burns. Wear protective clothing. Follow the safety instructions and warnings on the system or on the product and in this operating manual. Consult and follow the EC safety data sheets.

The occurrence and properties of the individual substances are given below. Details on the individual substance can be found in the EC safety data sheet relating to the specified CAS number.

2.3.2 Sodium hypochlorite solution (NaClO)

- | | |
|-------------------------------|---|
| <i>Product identification</i> | • CAS No.: 7681-52-9 |
| <i>Properties</i> | • concentration approx. 25 g/l (- 10 %) chlorine |
| | • develops toxic gasses on contact with acid |
| | • irritates eyes and skin |
| <i>Occurrence</i> | • in the reaction zone of the reactor |
| | • in the connection pipe between the reactor and the storage tank |
| | • in the sodium hypochlorite storage tank |



Warning!

Chemical hazard!

When sodium hypochlorite meets acids or acid-reacting substances, chlorine gas is released. Chlorine gas is toxic when inhaled and may cause loss of consciousness Use gas mask!

2.3.3 Hydrogen (H₂)

- Product identification*
- CAS No.: 1333-74-0
- Properties*
- highly flammable
 - gaseous
 - colorless and odorless
- Occurrence*
- in the cathode chamber of the electrolysis cell
 - in the connection pipe between the electrolysis cell and the reactor
 - in the degassing zone of the reactor
 - in the hydrogen exhaust pipe



Warning!

Risk of explosion!

Hydrogen combines with air to create an explosive mixture and is highly flammable. In the vicinity of the system, smoking, fire, naked light, welding, and work causing sparks are forbidden.

2.3.4 Sodium hydroxide (Sodium hydroxide solution)

- Product identification*
- CAS No.: 1310-73-2
- Properties*
- concentration approx. 4 %
 - caustic
 - colorless and odorless
 - temperature in the process about 104° F - 140° F
- Occurrence*
- in the cathode chamber of the electrolysis cell
 - in the connection pipe between the electrolysis cell and the reactor



Attention!

Chemical hazard!

Sodium hydroxide is caustic and hot in the system (approx. 140° F). Wear protective clothing!

2.3.5 Chlorine gas (Cl₂)

Product identification

- CAS No.: 7782-50-5

Properties

- chlorine gas saturated with steam
- toxic when inhaled
- irritates the eyes, respiratory organs and skin
- hazardous to the environment
- highly-toxic to aquatic organisms
- green-yellow; pungent odor
- temperature in the process about 104° F - 122° F

Occurrence

- in the anode chamber of the electrolysis cell
- in the connection pipe between the electrolysis cell and the chlorine gas separator
- in the connection pipe between the chlorine gas separator and the reactor
- in the reactor



Attention!

Chemical hazard!

Chlorine gas is toxic when inhaled and may cause loss of consciousness. Use gas mask!

2.3.6 Anolyte

Properties

- reduced brine with approx. 4 to 8 g/l dissolved chlorine
- string chlorine smell
- temperature in the process about 104° F - 122° F

Occurrence

- in the anode chamber of the electrolysis cell
- in the connection pipe between the electrolysis cell and the chlorine gas separator
- in the connection pipe between the chlorine gas separator and the electrolysis cell



Attention!

Chemical hazard!

Chlorine gas is toxic when inhaled and may cause loss of consciousness. Use gas mask!

2.3.7 Prevention of risks

The following applies to all substances:

- avoid all contact. Wear protective clothing.
- do not open any screw fittings while the system is preparing the product
- only work on the pipes when the system has been emptied and rinsed
- smoking and naked light are prohibited near the system

Especially for sodium hypochlorite:

- do not bring sodium hypochlorite in contact with acids or acid-reacting substances

2.3.8 First aid measures

The following applies to all substances:

- remove contaminated clothes immediately
- after skin contact, rinse thoroughly with lots of water
- after eye contact, immediately hold squinting eyes under flowing water or wash out with lots of water, call a doctor straight away
- after swallowing, immediately drink plenty of water, call a doctor straight away
- after inhalation, provide fresh air immediately
- if loss of consciousness is a possibility, the person must lie down or be carried in a stable recovery position
- when any accident or illness occurs immediately call a doctor

2.3.9 Environmental protection measures

Avoid release of chemicals into the environment. Consult the relevant directives regarding this matter. Follow the instructions in the EC safety data sheets and substance data sheets.



Please note

If necessary, you can order a copy of the EU Safety Data Sheet for sodium hypochlorite solution from Evoqua Water Technologies.

2.4 Liability for defects

Liability for defects is regulated by general terms and conditions of supply (recommended by the "German Electrical and Electronics Manufacturers Association" (ZVEI)) and by special contractual agreements.

The defect liability excludes temporary parts and wearable parts which have to be replaced at the annual service:

Temporary parts

- Solenoid valves
- Fan (thinning air)
- Cooling fans in the rectifier
- Brine pump
- Rectifier
- Electrolysis cells

Wear parts

- Filter inserts for brine, electrolysis water, operating water
- Level switch of the chlorine separator
- Hydrogen vent hose



Please note

To preserve the liability for defects, the operating and environmental conditions and the operating and maintenance regulations described in this operating manual must be observed (see below for further details). If they are not observed the liability for defects claim is rendered invalid.

Liability for defects conditions

- Installation, start up, shut-down, level 2 maintenance and training of operating personnel by Evoqua service personnel or by personnel that have been trained and authorized by Evoqua
- Return the signed original of the start up checklist to Evoqua Water Technologies
- Intended use
- Adhere to operating parameters and default values
- The chlorine membrane electrolysis system may only be controlled by the operator, by Evoqua or, if necessary, by personnel who have been trained and instructed by the service partner
- Keep an operating journal
- Use only the salt prescribed by the manufacturer (e. g. Evoqua OSEC® Salin)
- Do not turn off the chlorine membrane electrolysis system at the main switch or disconnect it from the external power supply for longer than four hours.

- If the system must be shutdown for longer than four weeks or disconnected from the mains for longer than four hours, the chlorine membrane electrolysis system must be shut-down.
- Do not drain fluid in the electrolysis cells. The membranes must not dry out
- Do not expose chlorine membrane electrolysis system to frost.
- Maintenance level 1 is carried out by the operator
- Conclude a maintenance contract
- Maintenance level 2 performed by Evoqua service personnel or by personnel trained and authorized by Evoqua for maintenance work

2.5 Replacement of electrolysis cells

PRO-RATA

The electrolysis cells are subject to technical wear and are therefore temporary parts. If the operating and maintenance regulations are observed, the expected operating life of the electrolysis cells is four years (48 months).

For the electrolysis cells, Evoqua Water Technologies offers an exchange on a PRO-RATA basis.

3. Description

3.1 Process

3.1.1 Description of the process

(See also chapter 3.1.2 "Process diagram")

The chlorine membrane electrolysis system uses saturated brine, softened water and a direct current to produce sodium hypochlorite solution directly at the site of installation.

The electrolysis cell is the core of the chlorine membrane electrolysis system. The electrolysis cell consists of an anode chamber and a cathode chamber, which are separated from each other by an ion exchange membrane.

The water softener produces completely softened water from drinking water. In the salt dissolving tank, a saturated brine solution is produced from salt and softened water. A dosing pump supplies the brine via the chlorine separator to the anode chamber. Softened water is fed to the cathode chamber.

During operation, a DC voltage is applied to the electrolysis cells, causing the electrochemical reactions to start. Sodium hydroxide and hydrogen gas are produced in the cathode chamber. The brine is reduced and chlorine gas is produced in the anode chamber. This mixture in the anode chamber is called anolyte for short.

At the upper end of the anode chamber, the anolyte is fed into the chlorine separator, where the chlorine gas is separated from the anolyte. The chlorine gas is fed directly to the reactor, while the anolyte is returned to the anode chamber in a closed circuit, entering at the bottom of the electrolysis cell. Saturated brine is fed automatically into the anode chamber depending on the level in the chamber.

The sodium hydroxide-hydrogen mixture produced in the cathode chamber is fed to the reactor's degassing chamber, where the hydrogen is released from the sodium hydroxide. A fan dilutes the separated hydrogen with air and safely blows it out through the hydrogen vent pipe.

The sodium hydroxide from which the hydrogen has been separated then flows into the reactor's reaction chamber, where the chlorine gas and the sodium hydroxide react, forming sodium hypochlorite. From the reactor, the sodium hypochlorite solution flows into the storage tank, from where it is extracted using a dosing pump and added to the water being treated. Sodium hypochlorite preparation stops once the storage tank is full. Once the "Storage tank min." level is reached, sodium hypochlorite preparation starts again.

3.1.2 Process diagram

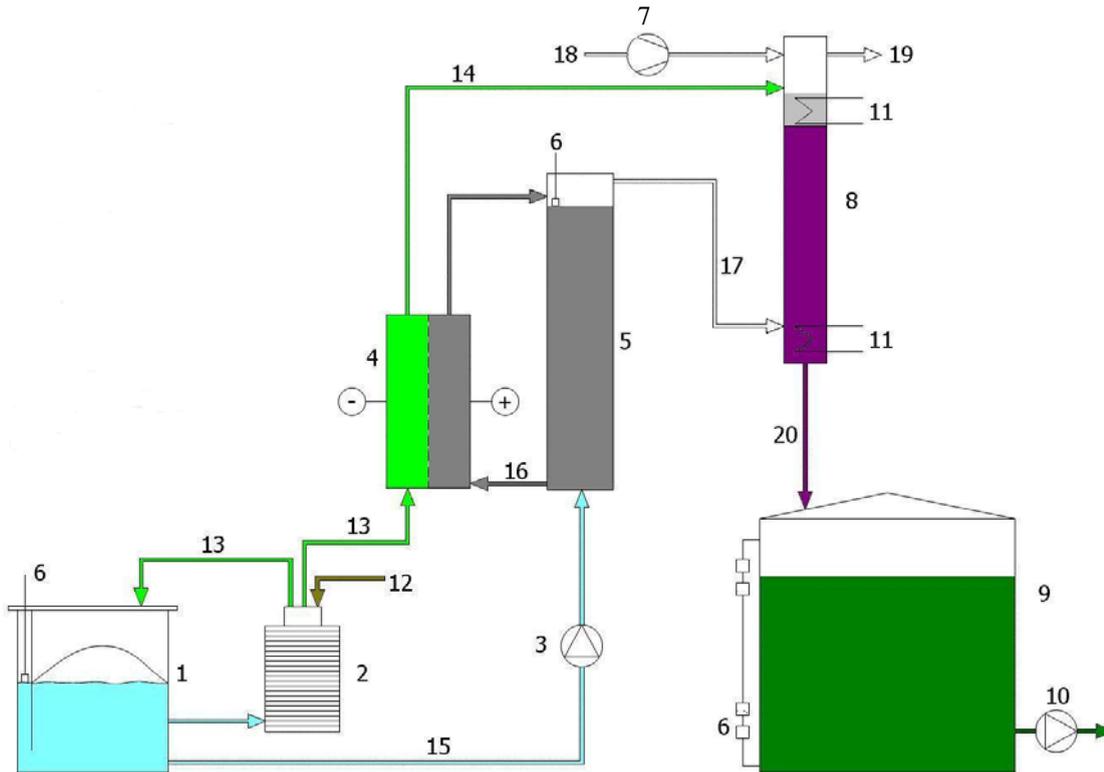


Fig. 1 Chlorine membrane electrolysis system
OSEC-NXT 12- 60 with salt dissolving tank and storage tank

- 1 Salt dissolving tank
- 2 Water softener
- 3 Brine pump
- 4 Electrolysis cell
- 5 Chlorine separator
- 6 Level probe
- 7 Fan
- 8 Reactor
- 9 Storage tank
- 10 NaClO pump
- 11 Heat exchanger/cooling water
- 12 Operating water
- 13 Softened water
- 14 Sodium hydroxide + hydrogen
- 15 Saturated brine
- 16 Anolyte
- 17 Chlorine gas
- 18 Dilution air
- 19 Dilution air + hydrogen
- 20 Sodium hypochlorite

3.2 System configuration




The chlorine membrane electrolysis system is designed as a compact unit, built around an electrolysis cell, with the following main system components mounted on a frame.

- Electrolysis cell(s)
- Water softener
- Brine pump
- Chlorine separator
- Reactor with heat exchangers
- Control cabinet with control and display unit
- Control cabinet containing a rectifier

The electrolysis cell is protected from unauthorized access by a cell cover, as shown in detail in chapter 8. Arrangement of components.

Fig. 2 Chlorine membrane electrolysis system 36 kg/d chlorine

3.2.1 Electrolysis cell

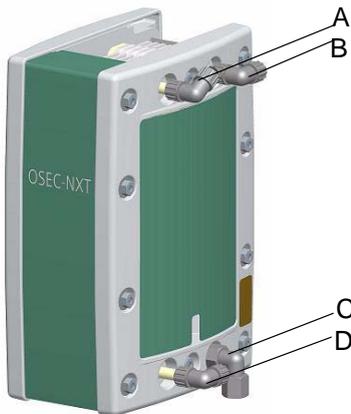

The electrolysis cell consists of an anode chamber and a cathode chamber, which are separated from each other by an ion exchange membrane. The cell housing has four connections:

- A Sodium hydroxide / hydrogen outlet (gray)
- B Anolyte / chlorine gas outlet (white)
- C Softened water inlet (gray)
- D Anolyte inlet (white)

Fig. 3 Electrolysis cell

3.2.2 Water softener

To produce sodium hypochlorite solution completely softened water must be used. The usage of water not being softened results in irreparable damage to the chlorine membrane electrolysis system and the electrolysis cells. The water softener produces completely softened water from drinking water. Automatic regeneration is usage-based and depends on the hardness of the water.

3.2.3 Brine pump

Regulated by level, the brine pump supplies concentrated brine to the chlorine separator. No settings are necessary at the brine pump.

3.2.4 Chlorine separator

In the chlorine separator, the chlorine gas generated in the anode chamber is separated from the anolyte and the anolyte is returned to the anode chamber, entering at the bottom of the electrolysis cell.

A level probe in the chlorine separator controls the brine pump.

3.2.5 Reactor

The reactor is divided into two main parts:

- Upper-reactor or the degassing zone. Here, the hydrogen gas escapes out of the sodium hydroxide.
- Lower-reactor or reaction zone. Here, the chlorine gas reacts with the sodium hydroxide to become sodium hypochlorite.

The reactor is equipped with two heat exchangers. They are found:

- In the upper-reactor to cool the sodium hydroxide.
- In the lower-reactor for cool the product.

3.2.6 Control cabinet with control and display unit

Housing The control system (details in chapter 3.5 Control unit) of the chlorine membrane electrolysis system are housed in a sheet steel housing on the left narrow side of the mounting frame. The main switch and the control and display unit are arranged on the front side of the control cabinet.

Main switch The main switch turns the power off for the entire chlorine membrane electrolysis system. The power supply to the gas monitoring system is not switched off.



Danger!

Risk of injury or death!

The system may still be live, even if the main switch is off!



Attention!

Damage to the system!

Only in emergencies turn off the main switch! Otherwise, important safety functions are deactivated. If the system is switched off and disconnected from the power supply for a prolonged period (> 4 h) the electrolysis cells may be permanently damaged.

Control and display unit The control and display unit is used to configure and display the system settings and to display operating messages, warning messages and error messages.

3.2.7 Rectifier cabinet

The rectifier is housed in a steel housing mounted on the right hand side of the frame.

The rectifier converts the mains AC current into the DC current required by the electrolysis cells.

3.3 Versions

The chlorine membrane electrolysis system is available with five different rated output capacities.

Part No.	Nominal performance rating	Number of electrolysis cells
W3T158931	12 kg/d (26.5 lbs/d) Cl ₂	1
W3T158932	24 kg/d (53 lbs/d) Cl ₂	2
W3T158933	36 kg/d (79 lbs/d) Cl ₂	3
W3T158934	48 kg/d (106 lbs/d) Cl ₂	4
W3T158935	60 kg/d (132 lbs/d) Cl ₂	5

3.4 Required accessories

One brine tank and one storage tank are required accessories.

3.4.1 Salt dissolving tank

Brine that has been saturated using a salt prescribed by the manufacturer (e. g. Evoqua OSEC[®] Salin salt pellets) is deposited and stored in the brine tanks. Evoqua brine tanks are designed as a cylindrical containers made of PE and are equipped with the following parts:

- Sieve tray
- Level control
- Sliding cover
- Accessories

The following tank sizes can be used:

System size	Nominal volume	Quantity of salt
12 kg/d (26.5 lbs/d) Cl ₂	50 gal (200 l)	240 lbs (130 kg)
24 kg/d (53 lbs/d) Cl ₂	130 gal (500 l)	610 lbs (330 kg)
36 kg/d (79 lbs/d) Cl ₂	130 gal (500 l)	610 lbs (330 kg)
48 kg/d (106 lbs/d) Cl ₂	200 gal (750 l)	920 lbs (500 kg)
60 kg/d (132 lbs/d) Cl ₂	200 gal (750 l)	920 lbs (500 kg)
2 x 36 kg/d (79 lbs/d) Cl ₂	260 gal (1000 l)	1300 lbs (700 kg)
2 x 48 kg/d (106 lbs/d) Cl ₂	400 gal (1500 l)	1200 lbs (2200 kg)
2 x 60 kg/d (132 lbs/d) Cl ₂	400 gal (1500 l)	1200 lbs (2200 kg)



Please note

Further details can be found in chapter 7. Dimension drawing.

3.4.2 Storage tank

The sodium hypochlorite solution produced is stored in the storage tank. The Evoqua storage tank is equipped with the following:

- Limit value switch
- Activated-carbon filter
- Connections for filling, extraction and ventilation
- Over-flow system
- Level control
- 20 m of control cables

The following tank sizes can be used:

System size	Usable Volume
12 kg/d (26.5 lbs/d) Cl ₂	60 gal (220 l)
24 kg/d (53 lbs/d) Cl ₂	125 gal (480 l)
36 kg/d (79 lbs/d) Cl ₂	225 gal (850 l)
48 kg/d (106 lbs/d) Cl ₂	290 gal (1100 l)
60 kg/d (132 lbs/d) Cl ₂	450 gal (1700 l)
2 x 36 kg/d (79 lbs/d) Cl ₂	450 gal (1700 l)
2 x 48 kg/d (106 lbs/d) Cl ₂	530 gal (2000 l)
2 x 60 kg/d (132 lbs/d) Cl ₂	660 gal (2500 l)

The storage tanks can optionally be supplied with collecting basins.



Please note

Further details can be found in chapter 7. Dimension drawing.

3.5 PLC controller

The PLC controller is used to log, display and process measurement data as well as to control the process.

A touch panel is used as the control and display unit. The system is controlled using the buttons. All of the settings and operating parameters can be read by all users, in any user group, without requiring the user to enter a password. Some of the functions are password protected and are only accessible to certain users. See chapter 3.6 for details.

Measurements

The following measurements can be recorded and processed:

- Cell voltage
- Protective voltage
- Electrolysis current
- Operating water pressure
- Flow rates
- Ambient temperature
- Switching state of the connected sensor system (e.g. leak sensor)
- Mains overvoltage
- Mains undervoltage
- Phase sequence
- Phase failure/neutral conductor failure

Displays

- Operating states and operating messages
- Warning messages and error messages
- Settings and operating parameters

Functions

Functions integrated in the control system:

- Water softener system control
- Salt dissolving tank replenishment controller
- Electrolysis water controller
- Cooling water controller
- Evaluation and processing of the level switch signal
- Brine pump controller
- Electrolysis current controller
- Automatic siphoning controller (optional)
- Metering lock for dosing pumps (optional)

- Safety functions*
- Monitoring of salt dissolving tank replenishment
 - Monitoring of replenishment of the chlorine separator
 - Monitoring of water softening regeneration
 - Monitoring of hydrogen dilution
 - Monitoring of electrolysis current and cell voltage
 - Monitoring of cooling water and electrolysis water
 - Monitoring of operating water pressure
 - Monitoring of ambient temperature
 - Monitoring of automatic siphoning
 - Monitoring of rectifier
 - Monitoring of power supply
 - Control of automatic stopcock in the event of leaks, overfilling or chlorine gas alarm
 - Control of alarm light/alarm horn
 - Digital input EMERGENCY STOP
 - Password protection

- Interfaces*
- The control system provides interfaces to the bus systems Wallace & Tiernan RS485 bus and Profibus DP.
- Evoqua RS485 bus interface
The serial RS485 Bus interface is used for data transfer to the optional Process Monitoring System. In addition to this, it is also possible to connect other Evoqua devices with an RS485 bus interface.
 - Profibus DP interface
The Profibus DP interface is a standardized interface (EN50170) for data transmission. Using the Profibus DP interface the chlorine membrane electrolysis system can be connected to an existing Profibus DP network.

Process Monitoring System

The Process Monitoring System, which is installed as an option, is used to log and display the measurements taken, for remote diagnosis, and to provide remote access via a standard browser with Internet and e-mail capability.

There is a separate operating manual for Process Monitoring System, which can be ordered from Evoqua Water Technologies if required.

Part No.	Language
W3T238913	English

3.6 Functions

All of the settings and operating parameters can be read by all users, in any user group, without requiring the user to log in. Certain functions are protected, requiring entry of a username and password, so that they can only be performed by certain groups.

There are three user levels:

- Level 1: No password required. For operators and service personnel.
- Level 2: Password required. For operators and service personnel.
- Level 3: Password required. Only for service personnel.

Level 1 No password or username required. All of the functions of this level may be used by the operators.

The functions include:

- Displaying all of the settings and operating parameters as well as the operating messages, warning messages and error messages
- Clean display
- Decreasing/increasing the display contrast
- Change display language

Level 2 Password and username required. All of the functions of this level may be used by the operators. The username is WT and the password is 9040.

The functions include:

- All functions of level 1
- Selecting the mode (automatic or manual)
- Starting and stopping preparation manually
- Resetting the system

Outputs

- Configuring the alarm relay assignment
- Configuring the alarm relay switching function (NO or NC)
- Configuring the alarm relay switching function delay

Diagnostics

- Resetting the operating hours (Day uptime counter)
- Checking the total soft water hardness

- Service*
 - Setting the max. filling time for the salt dissolving tank
 - Setting the slowdown time for the salt dissolving tank
 - Carrying out monthly maintenance
 - Starting manual overfilling of the chlorine separator
 - Configuring the anolyte compensation interval
 - Configuring the total operating water hardness
 - Calibrating the electrolysis water flow meter
- System*
 - Calibrating the display
 - Adjust date/time
- Manual functions*
 - Switching the electrolysis water on and off
 - Switching the cooling water on and off
 - Switching brine filling on and off
 - Regenerating the water softener
 - Testing the water softener inlet
 - Testing the water softener flushing
 - Testing the water softener injector



Please note

The operator functions are described in full detail in chapter 5. Operation.

Level 3

Password and username required. All of the functions on this level are to be found in the main "Service" menu and may only be used by Evoqua service personnel or by personnel who have been trained and authorized by Evoqua . This password is only available to this group of users.

The functions include:

- Service*
 - All functions of level 1 and 2
 - Parameter reset
 - Carrying out annual maintenance
 - Configuring the values



Please note

Details on entering the passwords are found in chapter 5.2.2 Operation. Logging in.

3.7 Technical data

3.7.1 OSEC-NXT 12

Nominal performance rating	12 kg/d (26.5 lbs/d) chlorine
Number of cell blocks	1
Electrolysis water	20 l/h (5.3 gal/h)
Cooling water	200 l/h (53 gal/h)
Max. cell voltage	20 V, DC
Max. electrolysis current	160 A
Power consumption in operating state „Stand-by“ approx.	150 W
Mains connection	3/PE AC 480 V 60 Hz
Max. permissible voltage tolerance V_{eff}	+ 10 % / - 10 %
Power supply capacity	6.1 kVA
Max. permissible pre-fuse	3 x 20 A
Dimensions (WxHxD)	47.2" x 74.6" x 31.7"
Weight, filled, approx.	750 lbs
Protection type	IP 43

3.7.2 OSEC-NXT 24

Nominal performance rating	24 kg/d (53 lbs/d) chlorine
Number of cell blocks	2
Electrolysis water	40 l/h (10.6 gal/h)
Cooling water	200 l/h (53 gal/h)
Max. cell voltage	40 V, DC
Max. electrolysis current	160 A
Power consumption in operating state „Stand-by“, approx.	150 W
Mains connection	3/PE AC 480 V 60 Hz
Max. permissible voltage tolerance V_{eff}	+ 10 % / - 10 %
Power supply capacity	10.3 kVA
Max. permissible pre-fuse	3 x 25 A
Dimensions (WxHxD)	47.2" x 74.6" x 31.7"
Weight, filled, approx.	860 lbs
Protection type	IP 43

3.7.3 OSEC-NXT 36

Nominal performance rating	36 kg/d (79 lbs/d) chlorine
Number of cell blocks	3
Electrolysis water	60 l/h (15.9 gal/h)
Cooling water	200 l/h (53 gal/h)
Max. cell voltage	60 V, DC
Max. electrolysis current	160 A
Power consumption in operating state „Stand-by“, approx.	150 W
Mains connection	3/PE AC 480 V 60 Hz
Max. permissible voltage tolerance V_{eff}	+ 10 % / - 10 %
Power supply capacity	14.8 kVA
Max. permissible pre-fuse	3 x 32 A
Dimensions (WxHxD)	47.2" x 74.6" x 31.7"
Weight, filled, approx.	970 lbs
Protection type	IP 43

3.7.4 OSEC-NXT 48

Nominal performance rating	48 kg/d (106 lbs/d) chlorine
Number of cell blocks	4
Electrolysis water	80 l/h (21.2 gal/h)
Cooling water	250 l/h (66 gal/h)
Max. cell voltage	80 V, DC
Max. electrolysis current	160 A
Power consumption in operating state „Stand-by“, approx.	150 W
Mains connection	3/PE AC 480 V 60 Hz
Max. permissible voltage tolerance V_{eff}	+ 10 % / - 10 %
Power supply capacity	18.8 kVA
Max. permissible pre-fuse	3 x 40 A
Dimensions (WxHxD)	59" x 74.6" x 31.7"
Weight, filled, approx.	1080 lbs
Protection type	IP 43

3.7.5 OSEC-NXT 60

Nominal performance rating	60 kg/d (132 lbs/d) chlorine
Number of cell blocks	5
Electrolysis water	100 l/h (26.5 gal/h)
Cooling water	300 l/h (80 gal/h)
Max. cell voltage	100 V, DC
Max. electrolysis current	160 A
Power consumption in operating state „Stand-by“, approx.	150 W
Mains connection	3/PE AC 480 V 60 Hz
Max. permissible voltage tolerance V_{eff}	+ 10 % / - 10 %
Power supply capacity	23.3 kVA
Max. permissible pre-fuse	3 x 50 A
Dimensions (WxHxD)	71" x 74.6" x 31.7"
Weight, filled, approx.	1210 lbs
Protection type	IP 43

3.7.6 Profibus DP

Hardware	SIMATIC S7-300 controller CPU314C - 2DP V3.x
Transmission technology	RS-485 in accordance with the Profibus specifications
Baud rate	Max. 12 Mbit/s, autodetect
Bus address	Default setting 20, Adjustable from 3 - 125
Bus connection	9 pin D-Sub socket
Communication	Cyclic I/O data exchange between the DP master and the DP slave(s).
Configuration	6 x 16 words, data consistency over the entire length 1 x 13 words, data consistency over the entire length

4. Installation

4.1 Scope of supply

Depending on the chosen design type (for details see chapter Description, 3.3 Versions), the scope of supply includes:

- Chlorine membrane electrolysis system compact design, mounted on a frame
- Accessory set, comprising:
 - Drum pump
 - Water hardness test kit
 - Air flow monitor
 - Ventilation hood including fastening material
 - 4 hinged feet
 - PVDF fittings (sodium hypochlorite pipe)
 - Information signs
- 8 gal of 4 - 6 % sodium hydroxide
- 8 gal of 9 - 11 % hydrochloric acid
- Operating manual

Optional:

- Salt dissolving tank
- Storage tank, optionally available with a collecting basin

4.2 Transport and storage

Transport/Storage

The chlorine membrane electrolysis system is correctly packaged by Evoqua Water Technologies and delivered on a palette that is suitable for vertical transport.

The electrolysis cells are filled with softened water.

During transport, the chlorine membrane electrolysis system must be handled with care.



Attention!

Risk of injury or damage to the system!

Follow the instructions and warnings on the packaging relating to transport.

Please note the following:

- The system must be secured against tilting
- The system must not be exposed to frost, damp weather or wet
- The system must be lifted using an appropriate lifting device, e.g. fork-lift truck
- When transporting by crane, the lifting lugs provided on the system must be used
- Transport and storage temperature between min. 40° F and max. 105° F

Unpacking



Attention!

Risk of injury or damage to the system!

Follow the instructions and warnings on the packaging.

Check that the transport packaging is undamaged. In the event of damage, please inform the transport company immediately, as your rights to compensation will otherwise be lost. Keep the packaging until the chlorine membrane electrolysis system has been put successfully into operation.

If the system is damaged, please contact Wallace & Tiernan immediately.

Check the shipment for completeness based on the delivery note. Any missing items must be reported to the transport company and the supplier immediately.

Internal transport

The chlorine membrane electrolysis system is equipped with four transport rollers specifically for internal transport. At the installation site they must be exchanged for the hinged feet provided in the accessories set.



Please note

Please note that, with attached ventilator hood, the chlorine membrane electrolysis system does not fit through a standard door! If necessary, detach the ventilation hood.

Shut-down

The chlorine membrane electrolysis system may only be taken out of operation by trained and authorized personnel or by Evoqua service personnel. A shut-down is necessitated by the following:

- a standstill period of the sodium hypochlorite preparation for more than four weeks
- a disconnection from the power supply for longer than four hours (e.g. anticipated power failure)

For further details see chapter Maintenance, 6.5 Shut-down.



*Attention!***Damage to the system!**

If the system is switched off and disconnected from the power supply for a prolonged period (> 4 h) the electrolysis cells may be permanently damaged.

4.3 Ambient conditions



Please note

Trouble-free operation of the chlorine membrane electrolysis system is only guaranteed if the environmental requirements are met. Observe the applicable local and national regulations!

4.3.1 Installation room

The following requirements apply to the installation room of the chlorine membrane electrolysis system:

General

- The place of installation must not be accessible to the public
- The place of installation must not be used as anybody's permanent workplace
- The door to the room must carry a sign prohibiting fire, naked light and smoking. (Included in the accessories set.)
- In the vicinity of the system, smoking, fire, naked light, welding work, and work causing sparks are forbidden
- Make sure there is a supply of fresh air (min. 75,525 gal/h)
- The system must be installed on a flat and stable surface. A gentle slope due to floor drainage is acceptable, as long as the part of the floor where the system is located is within the specified limits
- Provide floor drainage
- The system must be accessible and visible from all sides. It must be possible to fully open both control cabinet doors. See dimension drawing chapter 7.
- Hydrogen vent pipes must be installed in a continuous upward gradient

Temperature and humidity

- During operation of the system, the temperature in the installation room must be between min. 50° F and max. 86° F



Please note

Note the heat emission from the system!

- Temperature drops of greater than 59° F (e.g. caused by fresh air inlets) are not permitted in the immediate vicinity of the system
- Humidity from 5% to 95%, non condensing

4.3.2 Operating water

The following requirements apply to the operating water:

- | | |
|---------------------------|---|
| <i>Water quality</i> | <ul style="list-style-type: none"> • only drinking water as per WHO Guidelines for Drinking Water Quality, third edition |
| <i>Water temperature</i> | <ul style="list-style-type: none"> • minimum temp. 45° F • maximum temp. 68° F |
| <i>Admission pressure</i> | <ul style="list-style-type: none"> • at least 3.7 bar (53.7 psi) for a max. supply rate of 265 gal/h • maximum 10 bar (145 psi) |
| <i>Connection</i> | <ul style="list-style-type: none"> • according to DIN EN 1717 |



Attention!

Damage to the system!

The minimum admission pressure of 3.7 bar (53.7 psi) (at a max. supply rate of 265 gal/h) must always be adhered to, even if water is taken by other on-site users. Otherwise the correct functioning of the system can be disturbed!

4.3.3 Interface brine / salt dissolving tank

The following requirements apply to the brine and to the salt dissolving tank:

- | | |
|-----------------------------|---|
| <i>Brine quality</i> | <ul style="list-style-type: none"> • salt approved by the manufacturer of the chlorine membrane electrolysis system (e. g. Evoqua special salt, OSEC® Salin) |
| <i>Brine temperature</i> | <ul style="list-style-type: none"> • corresponding to room temperature of the chlorine membrane electrolysis system or lower |
| <i>Salt dissolving tank</i> | <ul style="list-style-type: none"> • suitable for salt tablets • filling with softened water only via the water softener of the chlorine membrane electrolysis system |
| <i>Level switches</i> | <ul style="list-style-type: none"> • the salt dissolving tank must provide one level switch for controlling the liquid level |
| <i>Installation height</i> | <ul style="list-style-type: none"> • same floor level as the chlorine membrane electrolysis system |

4.3.4 Interface storage tank

The following requirements apply to the storage tank and to the sodium hypochlorite pipe:

- | | |
|---------------------------------|--|
| <i>Material</i> | <ul style="list-style-type: none"> • suitable for storage of sodium hypochlorite (2,5 %) |
| <i>Sodium hypochlorite pipe</i> | <ul style="list-style-type: none"> • the sodium hypochlorite pipe must follow a downwards gradient from the system to the storage tank • minimum diameter 1" |
| <i>Venting</i> | <ul style="list-style-type: none"> • the storage tank must either be connected to an activated carbon filter or a discharge to atmosphere |



Danger!

Risk of injury!

Connection to the hydrogen exhaust pipe is not allowed!

- | | |
|--------------------------|---|
| <i>Level switches</i> | <ul style="list-style-type: none"> • the storage tank must provide four level switches for min., max., empty and overfilled |
| <i>Feeding mechanism</i> | <ul style="list-style-type: none"> • if the sodium hypochlorite solution produced in the chlorine membrane electrolysis system is dosed into a circulation, the feeding mechanism (e. g. metering pump) is required to be interlocked with the circulation pump and/or a flow measuring device. Feeding of sodium hypochlorite into a static water pipe has to be prevented. Furthermore, the feeding mechanism must either have an adjustable output or be controlled automatically (e. g. analyzer and controller). The chlorine membrane electrolysis system is designed for on/off operation only. |

4.3.5 Interface hydrogen vent pipe

The following requirements apply to the hydrogen vent pipe:

- | | |
|---------------------|---|
| <i>Material</i> | <ul style="list-style-type: none"> • gas-tight plastic vent pipe, PVC, PE or PP, 4" (DN 100) |
| <i>Installation</i> | <ul style="list-style-type: none"> • a separate air vent is required for each chlorine membrane electrolysis system • installed in a continuous upward gradient, gas tight, secure against damage • max. 200' long, with max. 20 bends (no elbows) • the use of flue dampers or shut-off devices is not permitted • position opening above roof level or at least 10' above ground level |

- the opening must not be accessible to the public or in the direct vicinity of access areas. Minimum distance from doors, windows or other openings: 10'. Minimum distance from other air vents: 33'
- keep the openings clear and protect against ingress of debris or rainwater by means of a hood or a bend
- the opening must be accessible for start-up and yearly maintenance
- labels with warning notices



Warning!

Risk of explosion!

Leaks may release hydrogen. Hydrogen combines with air to create an explosive mixture and is highly flammable. To ensure safe, trouble-free operation, it is imperative to follow the assembly instructions given in this chapter.

4.3.6 Interface cooling water drain

Pressure

- non-pressurized



Please note

The cooling water does not change between inlet and outlet, except for the temperature (warming up to 95° F possible), and can be used to top up the pool. (Back pressure 0,5 bar max.)

4.3.7 Interface water softener drain

Pressure

- non-pressurized

4.3.8 Additional tools

The following additional tools are required for start-up and for maintenance:

- Rotating field measuring device
- Multimeter
- Clamp-on ammeter
- Flow-rate measuring device, e.g. Kestrel 1000
- Thermometer
- Salinometer, density range 1.180 to 1.240 g/cm³
- Titration kit for chlorine
- Stop watch

4.4 Mechanical installation



Warning!

Risk of injury or damage to the system!

Only authorized specialized personnel qualified for installation and start-up may install the chlorine membrane electrolysis system. All electrical work on the chlorine membrane electrolysis system may only be performed by qualified electricians. Modifications to the system which go beyond those described in this manual are not permissible. (See also chapter 2.2 General safety instructions)



Please note

The basis of all installation work are the drawings contained in chapter 7. and 8.. Components and hose connections that are mechanically or electrically operated are labeled on the system with abbreviations (e.g. M 3). To facilitate their identification, these abbreviations are repeated at relevant points in the operating instructions and on the drawings.

4.4.1 Setup

Taking into account the requirements on the setup location listed in chapter 4.3.1 Installation room, set up the chlorine membrane electrolysis system and its necessary accessories, such as the salt dissolving tank and storage tank, as shown in the dimension drawing in chapter 7. and by observing the permissible distances:

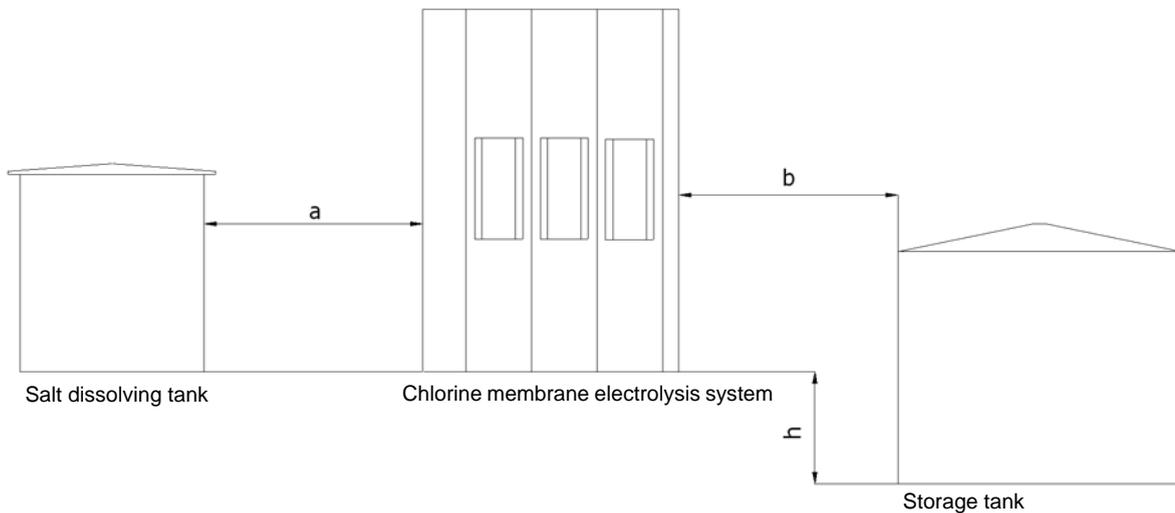


Fig. 1 Setup of the chlorine membrane electrolysis with accessories, permissible distances

	Permissible distance
a	1 to 5 m (40 to 200 inch)
b	1 to 4 m (40 to 160 inch)
h	0 to 1 m (0 to 40 inch) below system level

Chlorine membrane electrolysis system



- 1 Move the chlorine membrane electrolysis system to its final position.

Please note

Install chlorine membrane electrolysis system so that it is accessible and visible from all four sides and so that sufficient space is available for maintenance work.

- 2 Replace transport rollers with hinged feet (provided in accessories set); to do this
- 3 Jack-up the system using a lifting truck or another suitable device.
- 4 Dismantle the four transport rollers using a spanner.

- 5 Assemble the four hinged feet using spanners. Minimum screw-in depth 0.6'.
- 6 Lower chlorine membrane electrolysis system to the floor.
- 7 Level the system using a spirit level.
- 8 Tighten the nuts to secure the hinged feet.
- 9 Mount ventilation hood.

Salt dissolving tank

The salt dissolving tank is an essential accessory (see chapter Description, 3.4.1 Salt dissolving tank).

When setting up the salt dissolving tank the following must generally be observed:

- Temperature gradients of more than 59° F (e.g. due to fresh air inlets) are not permitted, as this may cause the salt to precipitate
- The floor of the installation room must be level and stable
- The distance from the chlorine membrane electrolysis system may not exceed 16'
- Allow enough space for maintenance purposes and salt refilling. The lid of the salt dissolving tank must be removable
- Apply the set of labels W3T269284 for the salt dissolving tank (included in the accessories set) correctly:
 - Label 1 on the front side of the salt dissolving tank from the operator's view
 - Label 2 in the middle of the salt dissolving tank cover



Proceed as follows when setting up a salt dissolving tank.

- 1 Create connections to the chlorine membrane electrolysis system as described in the following chapter 4.4.2 Installation of the connections.
- 2 Create connection between overflow mechanism and sewage water system.
- 3 Check that the discharge tap on the salt dissolving tank is closed and close if necessary.
- 4 Electrical installation of the level probe, see chapter 4.5 Electrical installation

Storage tank

The storage tank, optionally with a collecting basin, is a required accessory (for details see chapter Description, 3.4.2 Storage tank).

When setting up the storage tank the following general points must be observed:

- Install in the same room as chlorine membrane electrolysis system. The same conditions apply as for the chlorine membrane electrolysis system.
- Position the storage tank so that the fluid level measuring tube is visible.
- Allow enough space for maintenance purposes and inspections. The storage tank must be accessible and visible from all sides.

Proceed as follows when setting up a storage tank.

- 1 Create connections to the chlorine membrane electrolysis system as described in the following chapter 4.4.2 Installation of the connections.
- 2 Assemble the overflow system and outlet drain.
- 3 If it has not yet been connected to the dosing unit, close the tap.
- 4 Electrical installation of the level probes, see chapter 4.5 Electrical installation



Please note

The sodium hypochlorite solution must be disposed of in accordance with the local regulations!

Collecting basin

For setting up a collecting basin the same conditions apply as for the storage tank and the chlorine membrane electrolysis system.



Please note

The leak sensor of the chlorine membrane system works along with a collecting basin only. We recommend always installing a collecting basin. In this matter, observe the local regulations!

Remove transport plugs

Remove all of the transport plugs from the hose connections and the chlorine membrane electrolysis system.

4.4.2 Installation of the connections

See chapter 8. Arrangement of Components.



Please note

All transport plugs have to be removed!
The electrolysis cells are filled with softened water during transport. Water may therefore escape when the connections are installed!

The following connections must be made in accordance with the drawings and the instructions (yellow labels) on the system:

Connection	DN	d	Connection type	Comments
Operating water inlet (A1)	15 mm (0.6")	20 mm (0.8")	1/2" female-thread	
Cooling water outlet (A2)	15 mm (0.6")	20 mm (0.8")	1/2" female-thread	non-pressurized
Brine inlet (A3)	15 mm (0.6")	20 mm (0.8")	1/2" female-thread	
Salt dissolving tank filling (A4)	15 mm (0.6")	20 mm (0.8")	1/2" female-thread	
Hypochlorite pipe (A5)	32 mm (1 1/4")	40 mm (1 1/2")	3/4" female-thread	
Softening process flush (A6)	15 mm (0.6")	20 mm (0.8")	1/2" female-thread	Waste water connection without pressure into sewage system
Hydrogen vent pipe (A7)	100 mm (4")	110 mm (4.3")	Pipe 110 x 5.3 (4.3" x 0.21")	Connect hydrogen vent hose to blow-out head. Connect hydrogen vent hose to plastic pipe DN 100 and use a hose clamp to prevent the hydrogen vent hose from slipping off.



Please note

When setting up connections, please note the ambient conditions, chapter 4.3.



Warning!

Risk of explosion!

Leaks may release hydrogen. Hydrogen combines with air to create an explosive mixture and is highly flammable. To ensure safe, trouble-free operation, it is imperative to follow the assembly instructions given in chapter 4.3.5, Hydrogen vent pipe interface.

4.4.3 Installing air the flow monitor

Install the air flow monitor immediately before the position where the hydrogen vent pipe leaves the building. The air flow monitor may only be installed in a vertical tube.


Proceed as follows:



Attention!

Risk of injury!

Note the flow rate according to the red arrow on the air flow monitor!

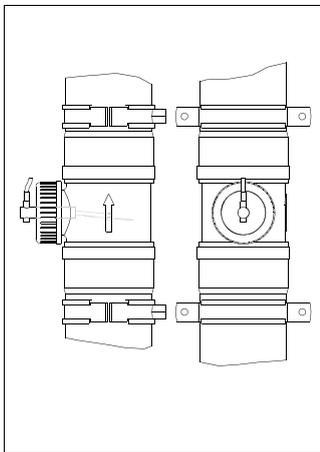

- 1 Connect the hydrogen vent pipe to the air flow monitor from below using a plug-in sleeve or slip-on sleeve.
- 2 Install air flow monitor in a vertical tube.
- 3 Reconnect the air flow monitor to the hydrogen vent pipe after or above the air flow monitor using a plug-in sleeve or slip-on sleeve.
- 4 Attach a pipe clamp directly before and after the air flow monitor.
- 5 Concerning the electrical installation of the air flow monitor see chapter 4.5.2 Connecting inputs, and chapter 9. Wiring diagram.

Fig. 2 Installation position of the air flow monitor



Please note

Push the plug-in sleeve or slip-on sleeve all the way onto the air flow monitor. Ensure that the plug-in sleeve or slip-on sleeve and the seals are all securely seated!

4.5 Electrical installation



Warning!

Risk of injury!

Only authorized and qualified electrical technicians may electrical-ly connect the chlorine membrane electrolysis system. Connect the control cabinet in accordance with the electrical terminal diagrams and the applicable national and local regulations.

4.5.1 Checking the power supply

Check that the required power supply 3/PE AC 480 V 60 Hz (max. permitted voltage tolerance $V_{\text{eff}} + 10 \% / - 10 \%$) is available and whether the necessary external protective devices are installed.

4.5.2 Connecting the inputs

Arrange the inputs of the relevant design type in accordance with the specifications in the electrical terminal diagram in chapter 9..

There are inputs that must be connected and inputs which it is optional to connect:

Input	Contact	Voltage	State	Switching function	Need
Chlorine gas alarm	Closer	potential-free	closed	opens on gas alarm	optional
External water softener	Closer	potential-free	closed	opens on occurrence of fault	optional
External residual hardness control device	Closer	potential-free	closed	opens on occurrence of residual hardness > 0	optional
Salt dissolving tank level switch	Opener	potential-free	closed	opens when level is reached	required
Storage tank "empty"	Closer	potential-free	open	closes when level is > empty	required
Storage tank "min."	Closer	potential-free	open	closes when level is > min.	required
Storage tank "max."	Opener	potential-free	closed	opens when level is > max.	required
Storage tank "overfilled"	Opener	potential-free	closed	opens when level is > overfilled	required

Input	Contact	Voltage	State	Switching function	Need
Storage tank leak monitoring	Opener	potential-free	closed	opens when leaks occur	optional
Dosing area leak monitoring	Opener	potential-free	closed	opens when leaks occur	optional
Air flow monitor	Closer	potential-free	closed	opens on occurrence of fault	required
Automatic siphoning tank "min."	Closer	potential-free	open	closes when level is > min.	optional
Automatic siphoning tank "max."	Closer	potential-free	open	closes when level is > max.	optional
Release preparation / preparation off	Closer	potential-free	closed	open to end preparation	optional
Release system / EMERGENCY STOP	Closer	potential-free	closed	opens for EMERGENCY STOP system	optional



Please note

In case not bridged by the manufacturer, all unnecessary connections must be bridged.

The following power supplies are provided for the optional and necessary equipment.

Consumer units	Voltage	max. power
Storage tank sensor "empty"	DC 24 V	8 VA
Storage tank sensor "min."	DC 24 V	8 VA
Storage tank sensor "max."	DC 24 V	8 VA
Storage tank sensor "overfilled"	DC 24 V	8 VA
Storage tank leak monitoring sensor	DC 24 V	8 VA
System leak monitoring sensor	DC 24 V	8 VA
Dosing leak monitoring sensor	DC 24 V	8 VA



Please note

Evoqua Water Technologies recommends that you should always use a chlorine gas leak detector!

4.5.3 Connecting the outputs

Arrange the outputs of the relevant design type in accordance with the specifications in the electrical terminal diagram in chapter 9..

Connection of all outputs is optional:

Output	Contact	Voltage	State	Switching function	Need
Flashing alarm light	Transistor output	DC 24 V	inactive	active when faults occur	optional
Chlorine gas alarm	Change-over contact	voltage-free	active	inactive on gas alarm	optional
Alarm relay 1	Change-over contact	voltage-free	inactive	active in the "preparation active!" state	optional
Alarm relay 2	Change-over contact	voltage-free	active	inactive when fault occurs	optional
Release Dosing/decanting	Change-over contact	voltage-free	inactive	active when the level is < storage tank fill level "min."	optional
Release Dosing/decanting	Change-over contact	voltage-free	inactive		optional

4.5.4 Connecting the Process Monitoring System

The Evoqua visualization system is installed in the control cabinet as an option and is connected to the chlorine membrane electrolysis system via the RS485 bus interface.

Connect the Process Monitoring System locally to an analog telephone line with its own number.

If you wish, you can also connect the Process Monitoring System to the local network via a network cable.

There is a separate operating manual for Process Monitoring System, which can be ordered from Evoqua Water Technologies if required.

Part No.	Language
W3T238913	English

4.5.5 Connecting the interfaces

Connect the interfaces for the Evoqua RS485 bus and the Profibus DP as specified in the wiring diagram which can be found in chapter 9.. Connection to a Profibus DP network is described in detail in chapter 4.8 Connecting to Profibus DP, the RS485 bus interface in chapter 4.9 .

4.5.6 Connecting the power supply

Connect the mains cable in accordance with the specifications of the wiring diagram in chapter 9..



Attention!

The main switch must remain sealed until start up begins! Only Evoqua service personnel or personnel who have been trained and authorized by Evoqua may open the seal on the main switch and start the chlorine membrane electrolysis system.

4.6 Completing the acceptance certificate

The installation work must be checked against the acceptance certificate for the installation VD300 by Evoqua service personnel or personnel who have been trained and authorized by Evoqua . The acceptance certificate must be correctly completed, signed and returned to Evoqua Water Technologies.

The chlorine membrane electrolysis system may only be put into operation if it has a correctly completed, signed acceptance certificate that is free of complaints or objections.

4.7 Start up



Attention!

Risk of injury or damage to the system!

Only Evoqua service personnel or authorized personnel who have been trained by Evoqua for installation and start-up may open the seal on the main switch and put the chlorine membrane electrolysis system into operation..



Please note

The chlorine membrane electrolysis system may only be put into operation on presentation of the acceptance certificate for the installation VD300 that is free of complaints or objections. In the event of any complaints, contact Evoqua customer services immediately.



Warning!

Chemical hazard!

A substantial quantity of chemicals is produced in the chlorine membrane electrolysis system. For safe operation and to prevent harm to persons, be sure to follow the safety instructions and warnings on the system and in this operating manual. (See also the chapter Safety, 2.3 Handling chemicals)



Please note

When planning your schedule, please allow time to wait for 4 hours after filling the salt dissolving tank with softened water to allow the brine to become sufficiently concentrated.



Please note

Components and hose connections that are mechanically or electrically operated are labeled on the system with abbreviations (e.g. M 3). To facilitate their identification, these abbreviations are repeated at relevant points in the operating manual and on the drawings.

4.7.1 Procedure

The procedure of the start-up is specified in the start-up checklist VD302. Always perform the steps in the process in the order specified. Details on performing the various steps of the start-up procedure are given in the following chapters.

The start-up checklist must be correctly completed, signed and returned to Evoqua Water Technologies (this is a precondition for the customer to be able to make claims for defects).

4.7.2 Preparing tools for start up

The following accessories are required for start-up:

- Drum pump complete
- Sodium hydroxide, 4 - 6 %, 8 gal
- Hydrochloric acid, 9 - 11 %, 8 gal
- Water hardness test kit

The following additional tools are also required:

- Flow-rate measuring device (e.g. Kestrel 1000)
- Thermometer
- Multimeter
- Rotating field measuring device
- Salinometer, density range 1.180 to 1.240 g/cm³

4.7.3 Preparing the salt dissolving tank



Attention!

To ensure fault-free, safe operation, use only the salt prescribed by the manufacturer (e. g. Evoqua OSEC® Salin) and completely softened water produced by the chlorine membrane electrolysis system.

Proceed as follows:

- 1 Insert sieve tray into the salt dissolving tank.
- 2 Fill the salt dissolving tank with salt. The minimum fill level is 16" above the top of the sieve tray.
- 3 Open the filling ball valve.
- 4 The extraction ball valve remains closed.

4.7.4 Removing the seal on the main switch



Attention!

Only authorized personnel who have been trained by Evoqua for installation and start-up may remove the seal on the main switch!



4.7.5 Turning the chlorine membrane electrolysis system on

Proceed as follows:

- 1 Turn on chlorine membrane electrolysis system at main switch.

The following will happen:

- The internal initialization is displayed. Then the language selection dialog box is displayed for 10 seconds. The factory default setting is German.
 - At the same time the automatic stopcock (E1) is opened.
- 2 Select the required language. The display then switches to the start-up menu.

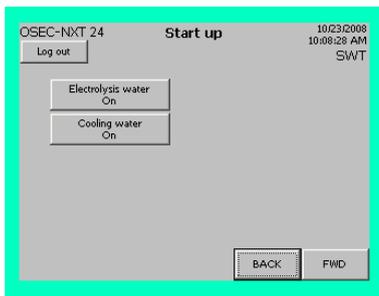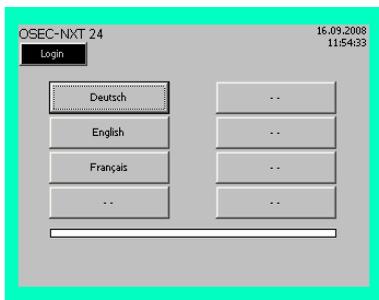

- 3 Log in. Enter the level 3 "Service personnel" password and user name. (For details, see chapter 5.2.2 Logging in.)



Please note

Next, check the pressures and adjust if necessary. See next chapter 4.7.6 Pressure checking.

4.7.6 Checking the pressures

Check pressures and adjust if necessary:


Designation	Ref.	Setting
Operating water pressure reducing valve	M3	3.5 bar (50.8 psi)
Electrolysis water pressure reducing valve	M4	0.8 bar (11.6 psi)



Please note

Follow the instructions on the display.

4.7.7 Setting the cooling water flow rate

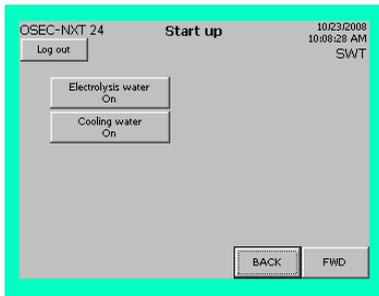

Proceed as follows:

- 1 Press the "Cooling water On" button on the display. The button will then change to "Cooling water Off".
- 2 At the cooling water membrane valve (M6) set the system-specific cooling water flow rate. See the information label on the chlorine membrane electrolysis system.

	OSEC-NXT 12	OSEC-NXT 24	OSEC-NXT 36	OSEC-NXT 48	OSEC-NXT 60
Cooling water		200 l/h (52.6 gal/h)		250 l/h (66.1 gal/h)	300 l/h (79.4 gal/h)


- 3 Press the "Cooling water Off" button on the display. The button will then change to "Cooling water On".



Please note

Check the operating water pressure on the operating water pressure reducing valve (M3) and adjust if necessary.

4.7.8 Setting the electrolysis water flow rate

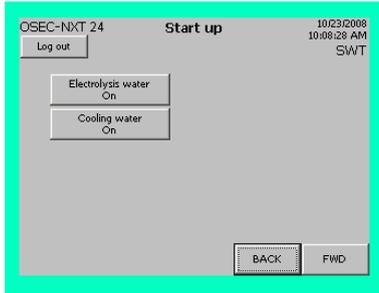

Proceed as follows:

- 1 Press the "Electrolysis water On" button on the display. The button will then change to "Electrolysis water Off".
- 2 Set the system-specific electrolysis water flow rate using the electrolysis water ball valve (M7). See the information label on the chlorine membrane electrolysis system.

	OSEC-NXT 12	OSEC-NXT 24	OSEC-NXT 36	OSEC-NXT 48	OSEC-NXT 60
Electrolysis water	20 l/h (5.3 gal/h)	40 l/h (10.6 gal/h)	60 l/h (15.9 gal/h)	80 l/h (21.2 gal/h)	100 l/h (26.5 gal/h)



Please note

Check the pressures on the on the operating water pressure reducing valve (M3) and the electrolysis water pressure reducing valve (M4) and adjust if necessary.

- 3 Then measure the total water hardness of the softened water.

4.7.9 Measuring the softened water hardness

Proceed as follows:

- 1 Take water sample at the soft water sample ball valve (M8).
- 2 Flush cuvette of the test kit provided with sample water.
- 3 Fill cuvette up to 20 ml marker with sample water.
- 4 Add one drop of the indicator. The color of the sample must remain green (0 - 0.25° dH)! If the color of the sample turns red, repeat the test. If the color of the sample is red again, abort start-up!
- 5 Enter the result in the start-up checklist.




Attention!

The soft water hardness should be < 0.25° dH. If not, contact Evoqua customer services.

- 6 Press the "Electrolysis water Off" button on the display. The button will then change to "Electrolysis water On".
- 7 Press the "FWD" button to continue.


4.7.10 Measuring the operating water hardness

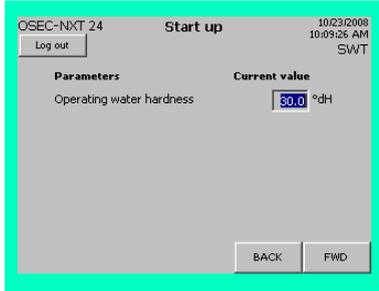

Proceed as follows:

- 1 Take a water sample at the filter drain tap of the pressure reducing valve (M5).
- 2 Flush cuvette of the test kit provided with sample water.
- 3 Fill cuvette up to 5 ml marker with sample water.
- 4 Add indicator drop by drop. Twist cuvette after each drop to make sure the indicator is completely dissolved.
- 5 Count the number of drops until the color changes from red to green. Number of drops = ° dH.
- 6 Enter the measured value on the display. It should be between 0 and 66° dH. The factory default setting is 30° dH. The regeneration counts of the water softener are determined on the basis of the entered water hardness value.
- 7 Enter the measured value in the start-up checklist.
- 8 Press the "FWD" button to continue. This also starts filling the salt dissolving tank.

4.7.11 Filling the salt dissolving tank

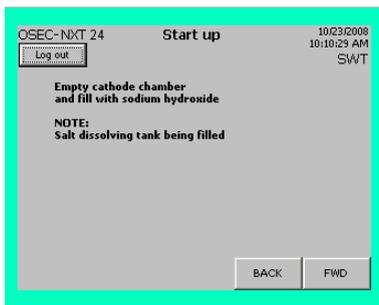

Next, the salt dissolving tank is filled with softened water up to the level limit.



Please note

When planning your schedule, please allow time to wait for 4 hours after filling the salt dissolving tank with softened water to allow the brine to become sufficiently concentrated.


4.7.12 Emptying the water-filled cathode chamber and filling with sodium hydroxide



Attention!

Damage to the electrolysis cell(s)!

Empty the cathode chamber and refill immediately!
Never empty the cathode and anode chambers at the same time!
The membrane could dry out and damage the electrolysis cell!

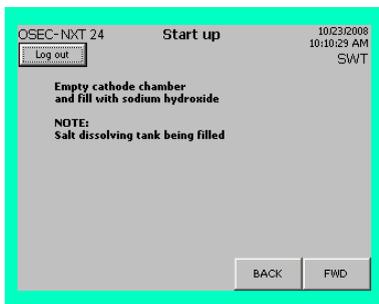

Proceed as follows:

- 1 Prepare sodium hydroxide and the drum pump from the standard accessories.
- 2 Connect the cathode-side outlet and the sewage system with a hose.
- 3 Open the ball valve (M11) and allow the cathode chamber to run completely empty (softened water from the transport filling).
- 4 Using the drum pump, add sodium hydroxide via the cathode-side drain until it runs out of the sodium hypochlorite pipe into the sodium hypochlorite tank.
- 5 Close the ball valve (M1) on the cathode-side outlet immediately after filling to prevent it flowing back into the canister.




Please note

Keep the sodium hydroxide canister for subsequent use.


- 6 Rinse the drum pump with approx. 1.5 gal of softened water.
- 7 Press the "FWD" button to continue.

4.7.13 Checking the hydrogen vent pipe


Proceed as follows:

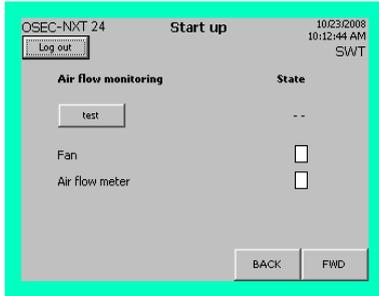


- 1 Check the hydrogen vent pipe is correctly installed and check for leaks (see chapter 4.3.5, Interface hydrogen vent pipe and chapter 4.4.2, Installing the connections).
- 2 Check correct assembly of the air flow monitor (see chapter 4.4.3 Installing the air flow monitor).

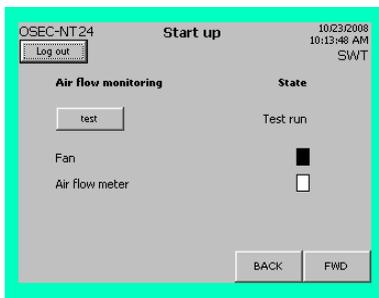


- 3 Press the "test" button to check that the air flow monitor is working correctly. The fan starts turning and the corresponding status indicator changes from white to black.

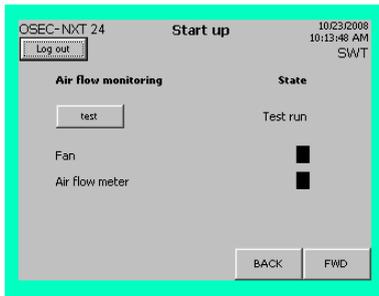


Check that the air flow monitor is working correctly when the fan is on. If air is flowing, the corresponding status indicator changes from white to black.

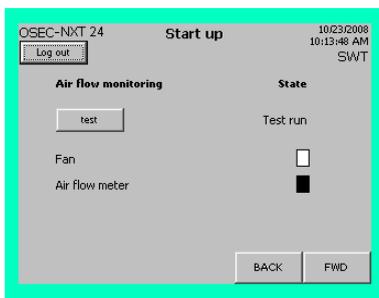

The fan stops. The status indicator changes back from black to white.

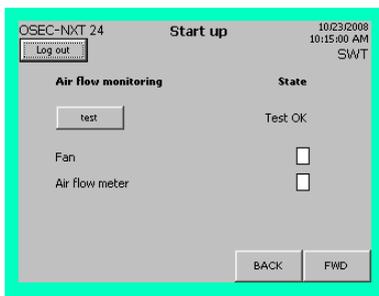

Check that the air flow monitor is working correctly when the fan is off. If air is not flowing, the status indicator changes from black to white. This means that the air flow monitor is working correctly, and the message "Test OK" is displayed.

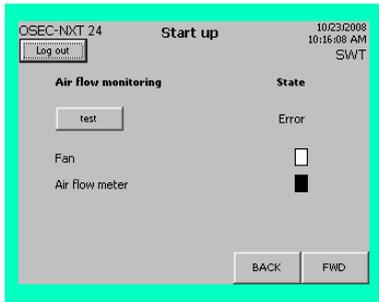

The test takes between 30 seconds and 6 minutes at most. If there is an error once the time limit has been reached, the message "Error" is displayed.

If there is an error:

- Check the installation position of the air flow monitor, see chapter 4.4.3 Installing the air flow monitor and 4.3.5 Hydrogen vent pipe interface.
- Check the electrical connection to the air flow monitor
- Discuss further measures with Evoqua Water Technologies


Warning!

Risk of injury!

If the air flow monitor is not working, abort start-up.

- 4 Enter the result of the test in the start-up checklist.
- 5 Press the "FWD" button to continue.

4.7.14 Setting and testing the level switch on the the storage tank

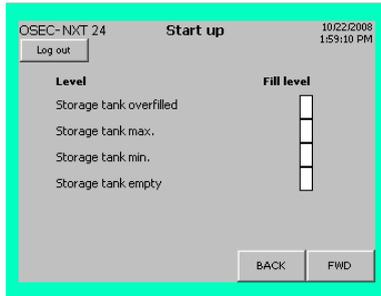

If the level switches are correctly adjusted and the storage tank is empty, the display should appear as shown on the left.

Proceed as follows:

Actuate each of the four level switches by hand. The corresponding level indicator on the display must change from white to black.

Press the "FWD" button to continue.

4.7.15 Checking the brine concentration



Please note

The chlorine membrane electrolysis system may only be operated with saturated brine. The 4 hour waiting period must be observed after filling the salt dissolving tank with softened water!

The brine must have a density of greater than 1.202 g/cm³.

Proceed as follows:

- 1 Take a brine sample at the extraction pipe of the salt dissolving tank and fill into a transparent vessel with a minimum fluid level of 12".
- 2 Insert salinometer into the brine sample and allow to float freely.
- 3 Read the concentration value at the fluid level from the scale.
- 4 If the measured value is less than 1.202 g/cm³, take further measurements every 15 minutes until the required value has been reached.
- 5 Enter a comment in the checklist.

4.7.16 Emptying the water-filled anode chamber and rinse with acid



Attention!

Damage to the electrolysis cell(s)!

Empty the anode chamber and then rinse with acid immediately to prevent damage to the electrolysis cell.

Proceed as follows:

- 1 Prepare the acid and the drum pump from the standard accessories.
 - 2 Connect the chlorine separator drain (M9) to the sewage system using a hose.
 - 3 Open the chlorine separator drain (M9) and allow the anode chamber to drain completely (softened water which the system was filled with for transportation).
 - 4 Connect the chlorine separator drain and the drum pump using a hose.
 - 5 Pump 9% hydrochloric acid into the anode chamber using the drum pump until the fill level in the chlorine separator is steady above the top of the electrolysis cell.
 - 6 Switch the pump off as soon as the fill level is reached.
-



Attention!

Risk of injury!

Make sure that no acid enters the reactor via the overflow pipe!

- 7 Close the chlorine separator drain (M9) again immediately after draining the chamber to prevent it from flowing back into the canister.
 - 8 Rinse the drum pump with approx. 1.5 gal of softened water.
 - 9 Wait 15 minutes, then open the chlorine separator drain (M9) and drain and dispose of the acid from the anode chamber.
 - 10 Close the chlorine separator drain (M9).
-



Please note

The anode chamber must be refilled with brine immediately after being rinsed with acid and the system should resume preparation immediately thereafter (within approx. 1 h)!

4.7.17 Filling the anode chamber with brine




Attention!

Damage to the system!

The anode chamber must be refilled with brine immediately after being rinsed with acid! The anode chamber may only be filled with saturated brine!

Proceed as follows:

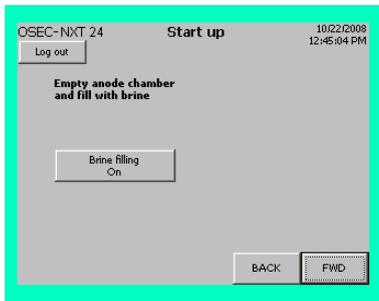

- 1 Press the "Brine filling On" button on the display. The button will then change to "Brine filling Off". When the fluid level limit is reached in the chlorine separator the brine pump stops automatically. The manual brine pump function is simultaneously turned off. The button will then change back to "Brine filling On".
- 2 Press the "FWD" button to continue.



Please note

The system must be started immediately (within approx. 1 hour) after being rinsed with acid!


4.7.18 Finishing start-up



Attention!

Damage to the electrolysis cell(s)!

Start-up must be completed within two hours of the anode chamber having been filled with saturated brine to prevent damage to the electrolysis cell.

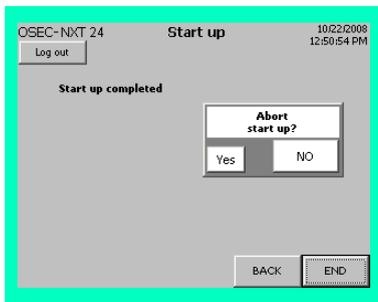

Start-up is now complete.

If necessary, press "BACK" to go back to any stage of the process.


If all of the tasks have been completed, leave the start-up menu:

- 1 Press the "END" button.
- 2 "Finish start-up?" Press "Yes".



Please note

If you exited the start-up process accidentally you can resume it by pressing "Shut-down" in the service menu.

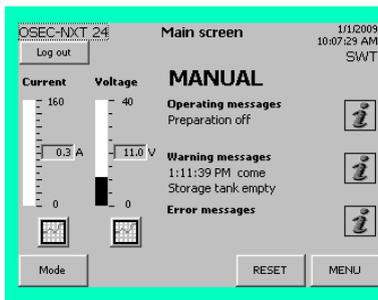


The chlorine membrane electrolysis system is in "MANUAL" mode in the "Preparation off" operating state. The system is now ready to operate.

The following will happen:

- All of the control system's control functions are activated.
- Protection potential is switched on.
- If the storage tank is empty the warning "Storage tank empty" is displayed.
- If there is a fault, an error message is displayed. Correct the fault then cancel the error message. For details see chapter Operation, 5.14 "Errors".


If there are no faults, press the "Mode" button to switch the chlorine membrane electrolysis system to automatic mode. The automatic preparation process starts.

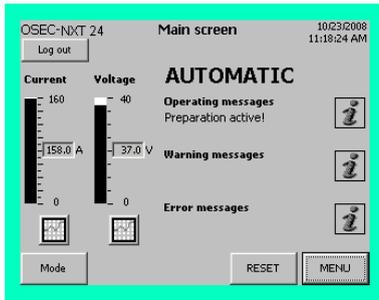

If the level in the storage tank is below "Storage tank min." the chlorine membrane electrolysis system will switch to the "Preparation active" state.

If the fluid level limit in the chlorine separator has not been reached, the brine pump starts. Once the fill level limit is reached, the following process is initiated:

- The brine pump will stop.
- The electrolysis water solenoid valve (E2) will open.
- The cooling water solenoid valve (E3) opens
- The electrolysis current will switch on and the voltage will increase until the electrolysis power is reached.

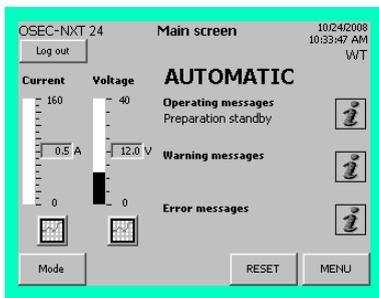

Once electrolysis power is reached, the chlorine membrane electrolysis system switches to the product preparation state and prepares sodium hypochlorite until the "Storage tank max." level is reached in the sodium hypochlorite storage tank. Then the system remains in the "Preparation standby" state. For details see chapter Operation, 5.3 Automatic operation.

4.7.19 Completing the final tasks

- Measure the air flow at the vent opening.
- Check and, if necessary, adjust pressures and flow rates.
- Perform titration once the system has been running for approx. 30 min. For further details see chapter Maintenance, 6.3.3 Checking the product concentration.
- Replace covers
- Complete and sign the start-up checklist and send to Evoqua Water Technologies (this constitutes part of the liability for defects).

Measure the air flow at the vent opening

Proceed as follows:

- 1 Measure the air current using an air flow meter, e.g. the Kestrel 1000. Proceed as described in the instruction manual of the measuring device.



Please note

The measured value must correspond to the required flow rate of at least 3.5 m/s.



Please note

Before leaving the installation site, monitor the system for at least 30 minutes!

4.7.20 Training and instructing operators

Train and instruct the operators with the help of the operating manual, and in particular the chapters on Safety, Operation and Faults.

Training and instruction must be checked against the instruction acceptance certificate VD307. The acceptance certificate must be correctly completed, signed and returned to Evoqua Water Technologies (this is a precondition for the customer to be able to make claims for defects).



Attention!

Damage to the system!

Before commencing training, log out of the service level and log in using the level 2 user name and password (WT, 9040).



Please note

The operator of the overall system must ensure that only authorized and qualified personnel can work on or with the chlorine membrane electrolysis system, and within their specified area of responsibility. (See also chapter 2.2 General safety instructions, Personnel).



Please note

Anyone working with the chlorine membrane electrolysis system must have read and understood the instruction manual, and, in particular, the safety instructions.

4.8 Connecting to PROFIBUS DP

The chlorine membrane electrolysis system controller, a Siemens SIMATIC S7-300, is capable of data exchange with a higher level PROFIBUS DP network via PROFIBUS DP. The PROFIBUS DP provides the process data as input and output data (see chapter 4.8.4 Data exchange table). The higher level automation system acts as the PROFIBUS DP master.

4.8.1 Technical data

Hardware	SIMATIC S7-300 controller CPU314C - 2DP V3.x
Transmission technology	RS-485 in accordance with the PROFIBUS specifications
Baud rate	Max. 12 Mbit/s, autodetect
Bus address	Default setting 20, Adjustable from 3 - 125
Bus connection	9 pin D-Sub socket
Communication	Cyclic I/O data exchange between the DP master and the DP slave(s).
Configuration	6 x 16 words, data consistency over the entire length 1 x 13 words, data consistency over the entire length 1 x 4 words, data consistency over the entire length

4.8.2 Connecting PROFIBUS DP



Please note

Follow the setup guidelines for PROFIBUS networks such as on network topology, the properties of the bus lines, line termination, max. segment lengths, max. number of stations, transmission rate, use/number of repeaters etc. For information, contact the PROFIBUS User Organization, Evoqua Water Technologies GmbH or the manufacturer of the automation system you are using.



Warning!

Risk of injury or damage to the system!

Electrical work on the chlorine membrane electrolysis system may only be performed by qualified electricians.

Proceed as follows:

- 1 Shut-down the chlorine membrane electrolysis system, see chapter Maintenance, 6.5 Shut-down.
- 2 Open control cabinet.
- 3 Connect the PROFIBUS DP bus cable to interface X2 on the SIMATIC S7-300 using the bus system's 9-pin PROFIBUS DP plug connector.

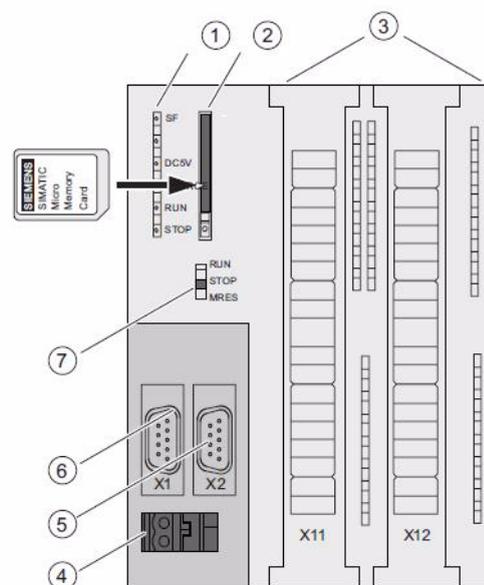


Fig. 3 CPU SIMATIC S7-300

- 1 Status and error messages
- 2 Slot for SIMATIC Micro Memory Card incl. ejector
- 3 Connection to the integrated inputs and outputs
- 4 Power supply connection
- 5 Interface X2 (PtP or DP)
- 6 Interface X1 (MPI)
- 7 Mode selector switch



Please note

Both of the status LEDs "SF" and "BF" on the SIMATIC S7-300 will light up if the chlorine membrane electrolysis system is not connected to a higher level PROFIBUS DP network. This indicates that there is no communication partner (master) connected. This does not have any effect on or prevent the operation of the chlorine membrane electrolysis system.

- 4 Start the chlorine membrane electrolysis system up again, see chapter Maintenance, 6.6 Starting the system up again.

4.8.3 Configuring the PROFIBUS DP master

Data is sent via the PROFIBUS DP in 226 Byte packets (see chapters 4.8.4 Data exchange table and 4.8.5 Data formats for further information).

218 Byte data can be read by the PROFIBUS DP Master (6 x 16 words with data consistency over the entire length and 1 x 13 words with data consistency over the entire length). 8 Byte data can be written by the PROFIBUS DP Master (1 x 4 words, data consistency over the entire length).

Below is a description of how to connect the chlorine membrane electrolysis system to a Siemens SIMATIC S7-300 automation system with a PROFIBUS DP interface.

The PROFIBUS DP master is configured using the device master file (GSD file) for the SIMATIC S7-300 CPU314C - 2DP V3.




Please note

If you wish to connect the system to an automation system made by any other manufacturer, e.g. ABB, Mitsubishi, Moeller, etc., please refer to the documentation provided by the manufacturer for the necessary information.

Proceed as follows:


- 1 Download the driver for the GSD file SIMATIC S7-300 CPU314C - 2DP V3.
- 2 Insert the controller (A) and connect it to the network.

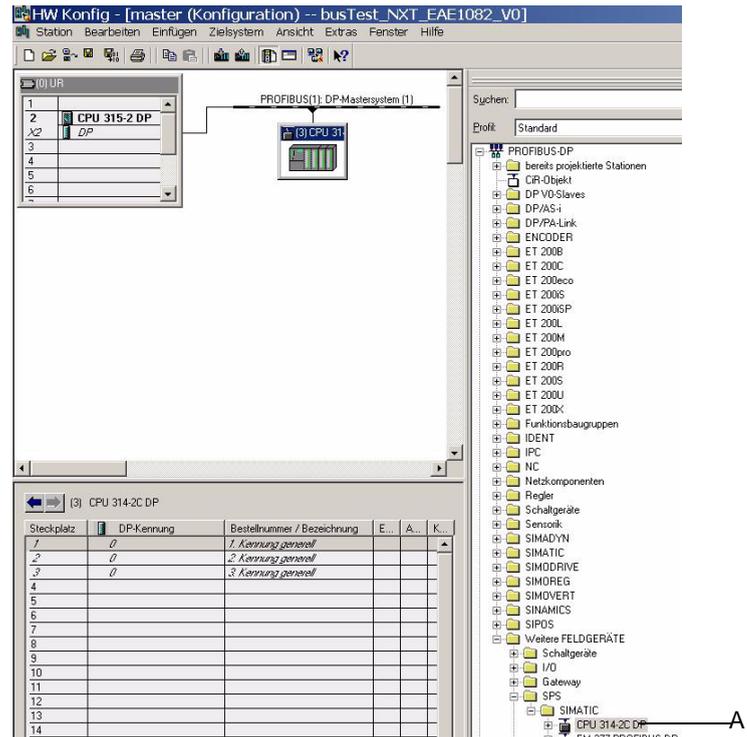

A Control unit

3 Enter the following configuration:

- 6 x 16 words, data consistency over the entire length
- 1 x 13 words, data consistency over the entire length
- 1 x 14 words, data consistency over the entire length

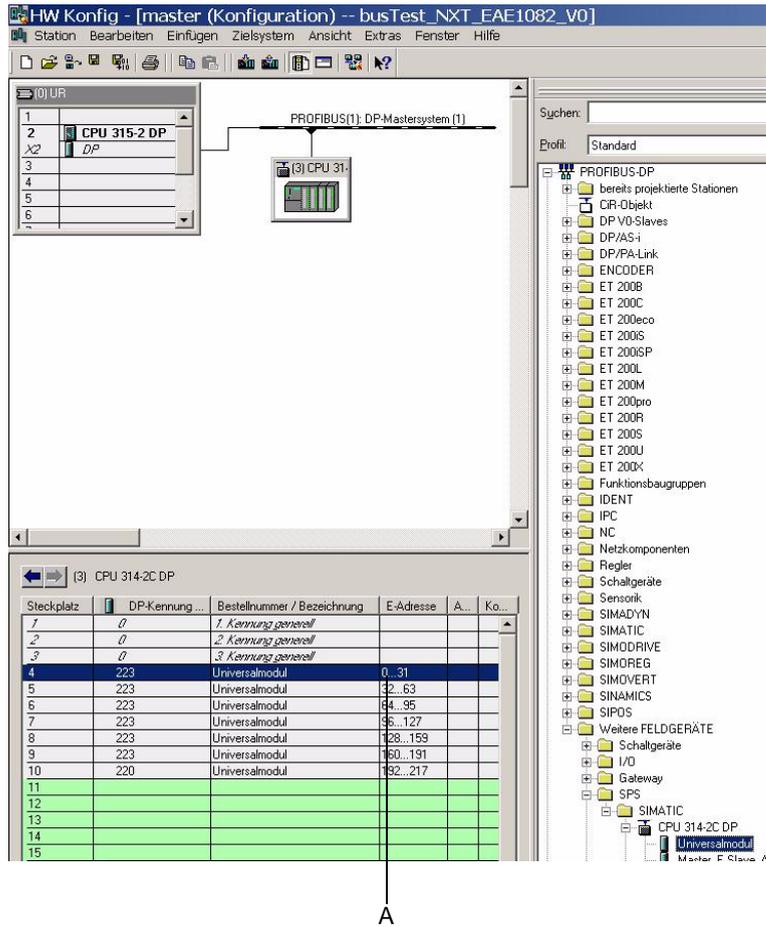

A E-address: Input byte "n" equals "0"



Please note

In the example shown, "n" = "0" (input byte 0). Starting address of the input range for the master.

6 x 16 words

The screenshot shows the 'Eigenschaften - DP-Slave' dialog box. The 'Adresse / Kennung' field is empty. The 'E/A Typ:' dropdown is set to 'Eingang'. The 'Direkteingabe...' button is visible. In the 'Eingang' section, the 'Adresse:' field is empty, 'Länge:' is 16, 'Einheit:' is 'Worte', and 'Konsistent über:' is 'gesamte Länge'. The 'Anfang:' is 0 and 'Ende:' is 31. The 'Prozeßabbild:' dropdown is set to 'OB1-PA'. At the bottom, there are 'OK', 'Abbrechen', and 'Hilfe' buttons.

1 x 13 words

The screenshot shows the 'Eigenschaften - DP-Slave' dialog box. The 'Adresse / Kennung' field is empty. The 'E/A Typ:' dropdown is set to 'Eingang'. The 'Direkteingabe...' button is visible. In the 'Eingang' section, the 'Adresse:' field is empty, 'Länge:' is 13, 'Einheit:' is 'Worte', and 'Konsistent über:' is 'gesamte Länge'. The 'Anfang:' is 192 and 'Ende:' is 217. The 'Prozeßabbild:' dropdown is set to '...'. At the bottom, there are 'OK', 'Abbrechen', and 'Hilfe' buttons.

1 x 4 words

The screenshot shows the 'Eigenschaften - DP-Slave' dialog box. The 'Adresse / Kennung' field is empty. The 'E/A Typ:' dropdown is set to 'Ausgang'. The 'Direkteingabe...' button is visible. In the 'Ausgang' section, the 'Adresse:' field is empty, 'Länge:' is 4, 'Einheit:' is 'Worte', and 'Konsistent über:' is 'gesamte Länge'. The 'Anfang:' is 0 and 'Ende:' is 7. The 'Prozeßabbild:' dropdown is set to 'OB1-PA'. At the bottom, there are 'OK', 'Abbrechen', and 'Hilfe' buttons.

4.8.4 Data exchange table

The data exchange table below lists the data points provided by the chlorine membrane electrolysis system.

Byte address	Bit address	Length (in bytes)	Format	Access	Description
n		10	STRING[8]	R	RS485 bus scan ID
n + 10		6	STRING[4]	R	RS485 bus scan ID
n + 16		12	STRING[10]	R	System type designation
n + 28		10	STRING[8]	R	Software item No.
n + 38		8	STRING[6]	R	Software Version
n + 46		8	STRING[6]	R	Software date, MM/YY
n + 54		18	STRING[16]	R	Serial number
n + 72		18	STRING[16]	R	System location
n + 90		18	STRING[16]	R	System name
n + 108		18	STRING[16]	R	Order number
n + 126		2	WORD	R	**Internal usage, n.c.**
n + 128	0	1	BOOL	R	Message "AUTOMATIC"
n + 128	1		BOOL	R	Message "Preparation standby"
n + 128	2		BOOL	R	Message "Preparation active!"
n + 128	3		BOOL	R	Message "Preparation start up"
n + 128	4		BOOL	R	Message "Preparation running"
n + 128	5		BOOL	R	Message "Preparation shut down"
n + 128	6		BOOL	R	Message "Preparation ext. locked!"
n + 128	7		BOOL	R	Message "Water softener regeneration running"
n + 129	0	1	BOOL	R	Message "Water softener adding brine"
n + 129	1		BOOL	R	Message "Water softener reacting"
n + 129	2		BOOL	R	Message "Water softener washing"
n + 129	3		BOOL	R	Message "Manual mode active!"
n + 129	4		BOOL	R	Message "MANUAL Electrolysis water!"
n + 129	5		BOOL	R	Message "MANUAL Cooling water!"
n + 129	6		BOOL	R	Message "MANUAL Top-up brine!"
n + 129	7		BOOL	R	Unused

Byte address	Bit address	Length (in bytes)	Format	Access	Description
n + 130	0	1	BOOL	R	Warning message "Unstable mains voltage/mains failure"
n + 130	1		BOOL	R	Warning message "Check water softener brine flow rate"
n + 130	2		BOOL	R	Warning message "Storage tank empty"
n + 130	3		BOOL	R	Warning message "Electrolysis water check flow rate"
n + 130	4		BOOL	R	Warning message "Cooling water check flow rate"
n + 130	5		BOOL	R	Warning message "Power off for less than 4 hours!"
n + 130	6		BOOL	R	Warning message "Power off for more than 4 hours!"
n + 130	7		BOOL	R	Warning message "Perform monthly maintenance!"
n + 131	0	1	BOOL	R	Warning message "Perform annual maintenance! Service required"
n + 131	1		BOOL	R	Warning message "Ambient temperature too high"
n + 131	2		BOOL	R	Warning message "Operating water pressure too low"
n + 131	3		BOOL	R	Warning message "Operating water pressure too high"
n + 131	4		BOOL	R	Unused
n + 131	5		BOOL	R	Unused
n + 131	6		BOOL	R	Unused
n + 131	7		BOOL	R	Unused
n + 132	0	1	BOOL	R	Error message "Dosing leak"
n + 132	1		BOOL	R	Error message "Brine pump run time exceeded"
n + 132	2		BOOL	R	Error message "Brine pump wait time exceeded"
n + 132	3		BOOL	R	Error message "Chlorine gas alarm"
n + 132	4		BOOL	R	Error message "Water softener brine flow meter plausibility"
n + 132	5		BOOL	R	Error message "Check air flow monitor" (plausibility)
n + 132	6		BOOL	R	Error message "Fan failure"
n + 132	7		BOOL	R	Error message "Rectifier not ready"
n + 133	0		BOOL	R	Error message "System leak"

Byte address	Bit address	Length (in bytes)	Format	Access	Description
n + 133	1	1	BOOL	R	Error message "Storage tank leak"
n + 133	2		BOOL	R	Error message "Storage tank overfilled"
n + 133	3		BOOL	R	Error message "Electrolysis water check flow meter" (no signal)
n + 133	4		BOOL	R	Error message "Electrolysis water flow meter plausibility"
n + 133	5		BOOL	R	Error message "Air flow rate too low"
n + 133	6		BOOL	R	Error message "Cell voltage too high"
n + 133	7		BOOL	R	Error message "Electrolysis current too low"
n + 134	0	1	BOOL	R	Error message "Cooling water flow switch plausibility"
n + 134	1		BOOL	R	Error message "Cooling water flow rate too low"
n + 134	2		BOOL	R	Error message "Electrolysis water flow rate too low"
n + 134	3		BOOL	R	Error message "Electrolysis water flow rate too high"
n + 134	4		BOOL	R	Error message "Storage tank level probes plausibility"
n + 134	5		BOOL	R	Error message "EMERGENCY STOP"
n + 134	6		BOOL	R	Error message "External water softener / hardness control failure"
n + 134	7	BOOL	R	Error message "Salt dissolving tank filling time exceeded"	
n + 135	0	1	BOOL	R	Error message "Automatic stopcock will not open! Plausibility check?"
n + 135	1		BOOL	R	Error message "Automatic stopcock will not close! Plausibility check?"
n + 135	2		BOOL	R	Error message "Siphon device level probes plausibility"
n + 135	3		BOOL	R	Error message "Siphon device vacuum pump running time exceeded"
n + 135	4		BOOL	R	Error message "Rectifier not ready! Ambient temperature & warning"
n + 135	5		BOOL	R	Error message "Rectifier not ready! Mains & warning"
n + 135	6		BOOL	R	Error message "Electrolysis water flow rate too low! Pressure & warning"

Byte address	Bit address	Length (in bytes)	Format	Access	Description
n + 135	7		BOOL	R	Error message "Cooling water flow rate too low! Pressure & warning"
n + 136	0	1	BOOL	R	Error message "Salt dissolving tank filling time exceeded! Pressure & warning"
n + 136	1		BOOL	R	Error message "Water softener brine flow rate too low! Pressure & warning"
n + 136	2		BOOL	R	Error message "Water softener brine flow rate too low"
n + 136	3		BOOL	R	Unused
n + 136	4		BOOL	R	Unused
n + 136	5		BOOL	R	Unused
n + 136	6		BOOL	R	Unused
n + 136	7		BOOL	R	Unused
n + 137	0	1	BOOL	R	Unused
n + 137	1		BOOL	R	Unused
n + 137	2		BOOL	R	Unused
n + 137	3		BOOL	R	Unused
n + 137	4		BOOL	R	Unused
n + 137	5		BOOL	R	Unused
n + 137	6		BOOL	R	Unused
n + 137	7		BOOL	R	Unused
n + 138		4	REAL	R	Preparation total [h]
n + 142		4	REAL	R	Preparation avg. [h]
n + 146		4	REAL	R	Preparation count
n + 150		4	REAL	R	Operating hours total [h]
n + 154		4	REAL	R	Cell voltage [V]
n + 158		4	REAL	R	Electrolysis current [A]
n + 162		4	REAL	R	Electrolysis water [l/h]
n + 166		4	REAL	R	Operating water pressure [bar]
n + 170		4	REAL	R	Ambient temperature [°C]
n + 174		4	REAL	R	Unused
n + 178		4	REAL	R	Unused
n + 182		4	REAL	R	Unused

Byte address	Bit address	Length (in bytes)	Format	Access	Description
n + 186		4	REAL	R	Unused
n + 190		4	REAL	R	Unused
n + 194		4	REAL	R	Unused
n + 198		4	REAL	R	Unused
n + 202	0	1	BOOL	R	Digital IN, EMERGENCY STOP
n + 202	1		BOOL	R	Digital IN, ext. Water softener/hardness control
n + 202	2		BOOL	R	Digital IN, Release preparation
n + 202	3		BOOL	R	Digital IN, Electrolysis water
n + 202	4		BOOL	R	Unused
n + 202	5		BOOL	R	Digital IN, Vacuum container max
n + 202	6		BOOL	R	Digital IN, Vacuum container min
n + 202	7		BOOL	R	Digital IN, Cooling water
n + 203	0	1	BOOL	R	Digital IN, Chlorine separator
n + 203	1		BOOL	R	Digital IN, Air flow monitor
n + 203	2		BOOL	R	Digital IN, Fan
n + 203	3		BOOL	R	Digital IN, Dosing leak
n + 203	4		BOOL	R	Digital IN, System leak
n + 203	5		BOOL	R	Digital IN, Storage tank leak
n + 203	6		BOOL	R	Digital IN, Storage tank overfilled
n + 203	7		BOOL	R	Digital IN, Storage tank max.
n + 204	0	1	BOOL	R	Digital IN, Storage tank min.
n + 204	1		BOOL	R	Digital IN, Storage tank empty
n + 204	2		BOOL	R	Digital IN, Salt dissolving tank level
n + 204	3		BOOL	R	Digital IN, Brine flow
n + 204	4		BOOL	R	Digital IN, Rectifier
n + 204	5		BOOL	R	Digital IN, Automatic stopcock open
n + 204	6		BOOL	R	Digital IN, Automatic stopcock closed
n + 204	7		BOOL	R	Digital IN, Chlorine gas alarm
n + 205	0		BOOL	R	Unused
n + 205	1		BOOL	R	Unused
n + 205	2		BOOL	R	Unused

Byte address	Bit address	Length (in bytes)	Format	Access	Description
n + 205	3	1	BOOL	R	Unused
n + 205	4		BOOL	R	Unused
n + 205	5		BOOL	R	Unused
n + 205	6		BOOL	R	Unused
n + 205	7		BOOL	R	Digital IN, Mains monitoring
n + 206	0	1	BOOL	R	Digital OUT, Brine pump
n + 206	1		BOOL	R	Digital OUT, Alarm horn
n + 206	2		BOOL	R	Digital OUT, Alarm light
n + 206	3		BOOL	R	Digital OUT, Release metering/decanting
n + 206	4		BOOL	R	Digital OUT, Vacuum pump
n + 206	5		BOOL	R	Digital OUT, Cooling water
n + 206	6		BOOL	R	Digital OUT, Electrolysis water
n + 206	7		BOOL	R	Digital OUT, Fan
n + 207	0	1	BOOL	R	Digital OUT, Salt dissolving tank
n + 207	1		BOOL	R	Digital OUT, Water softener flush
n + 207	2		BOOL	R	Digital OUT, Water softener injector
n + 207	3		BOOL	R	Digital OUT, Water softener inlet
n + 207	4		BOOL	R	Digital OUT, Rectifier
n + 207	5		BOOL	R	Digital OUT, Alarm relay 2
n + 207	6		BOOL	R	Digital OUT, Alarm relay 1
n + 207	7		BOOL	R	Digital OUT, Automatic stopcock
n + 208		1	BYTE	R	Unused
n + 209		1	BYTE	R	Unused
n + 210		1	BYTE	R	Unused
n + 211		1	BYTE	R	Unused
n + 212		1	BYTE	R	Unused
n + 213		1	BYTE	R	Unused
n + 214		1	BYTE	R	Unused

Byte address	Bit address	Length (in bytes)	Format	Access	Description
n + 215	0	1	BOOL	R	User registered via HMI
n + 215	1		BOOL	R	User registered via PROFIBUS DP
n + 215	2		BOOL	R	Unused
n + 215	3		BOOL	R	Unused
n + 215	4		BOOL	R	Unused
n + 215	5		BOOL	R	Unused
n + 215	6		BOOL	R	Unused
n + 215	7		BOOL	R	Unused
n + 216		2	WORD	R	Unused
n + 218		4	DWORD	W	Set password (wt) via PROFIBUS DP
n + 222	0	1	BOOL	W	Change operating mode via PROFIBUS DP
n + 222	1		BOOL	W	Start/stop preparation via PROFIBUS DP
n + 222	2		BOOL	W	Turn on/off manual function electrolysis water via PROFIBUS DP
n + 222	3		BOOL	W	Turn on/off manual function cooling water via PROFIBUS DP
n + 222	4		BOOL	W	Turn on/off manual function brine filling via PROFIBUS DP
n + 222	5		BOOL	W	Activate manual function water softener regeneration via PROFIBUS DP
n + 222	6		BOOL	W	Activate test injector via PROFIBUS DP
n + 222	7		BOOL	W	Unused
n + 223		1	BYTE	W	Unused
n + 224		1	BYTE	W	Unused
n + 225		1	BYTE	W	Unused

- Legend*
- n: Starting address of the input range for the master
 - R: Read access permission
 - W: Write access permission



Please note

In the example shown, "n" = "0" (input byte 0). Starting address of the input range for the master.

4.8.5 Data formats

The table below lists the data formats used to transmit the process data.

Data type	Size (bits)	Typically called	Signed	Value range	
				min.	max.
BOOL	1	Bit, Bool	No	0	1
BYTE	8	Unsigned char, byte	No	00 _{HEX}	FF _{HEX}
WORD	16	Unsigned integer, word	No	00 _{HEX}	FFFF _{HEX}
REAL	32	Float, real, floating point	Yes	1.175 495E-38	3.402 823E+38
STRING	(n×8) + 16	ASCII, string, character string	No		

n = number of characters

The byte order in the various data types saved in or transferred to the memory is shown below.

BYTE Example: 7B_{hex} = 123_{dec}

BYTE 0							
7B _{hex}							
7	Bit						0
0	1	1	1	1	0	1	1

WORD Example: 3039_{hex} = 12345_{dec}

BYTE 0				BYTE 1											
3039 _{hex}															
15	Bit						8	7	Bit		0				
0	0	1	1	0	0	0	0	0	0	1	1	1	0	0	1

REAL Example: 3,141593


BYTE 0								BYTE 1								BYTE 2								BYTE 3											
3,141593																																			
Sign	Exponent								Mantissa																										
31								24	23	Bit							16	15	Bit							8	7	Bit							0
V	e	e	e	e	e	e	e	e	e	m	m	m	m	m	m	m	m	m	m	m	m	m	m	m	m	m	m	m	m	m	m	m	m		
0	1	0	0	0	0	0	0	0	0	1	0	0	1	0	0	1	0	0	0	0	0	1	1	1	1	1	1	1	1	0	1	1	1	0	0

STRING Example: 'From' STRING[2]

BYTE 0								BYTE 1								BYTE 2								BYTE 3											
From																																			
max. string length								Actual string length								ASCII value A								ASCII value b											
31	Bit							24	23	Bit							16	15	Bit							8	7	Bit							0
0	0	0	0	0	0	0	1	0	0	0	0	0	0	0	0	1	0	0	1	0	0	0	0	0	0	0	1	0	1	1	0	0	0	1	0

4.8.6 Setting the PROFIBUS DP slave bus address

Proceed as follows:

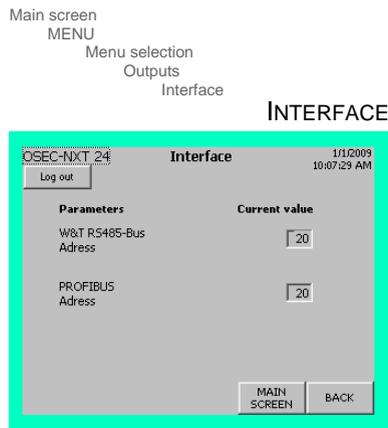


- 1 Switch to the "Interface" screen on the chlorine membrane electrolysis system's control and display unit. The factory setting for the bus addresses is 20. If necessary change the PROFIBUS address. You will be asked to enter a username and password. For details, see chapter 5.2.2 Logging in.



Attention!

Damage to the system!

The setting for the RS485 bus interface must not be changed!

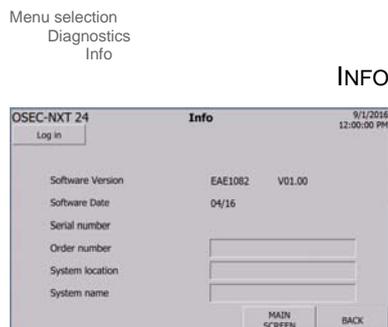

- 2 Press "BACK" to return to the "Menu selection" screen.
- 3 Switch to the "Info" screen. If necessary, enter further details about the chlorine membrane electrolysis system in the "Order number", "System location" and "System name" input boxes. You will be asked to enter a username and password. For details, see chapter 5.2.2 Logging in.

Proceed as follows:

- 4 Touch the input box you want to access and keyboard will be displayed.
- 5 Enter the number or name and confirm by pressing Enter.

4.9 RS485 bus interface

4.9.1 Version

The standard serial RS485 bus interface in the chlorine membrane electrolysis system is used for data transmission to a PC, web server or an external plant control.

The interface is designed as a symmetrical two-wire bus line according to EIA RS 485 (DIN 66259 Part 4 and ISO 8482); it enables data transfer at high transfer rates (19.2 Kbaud) and long distances (up to 1200 m).

Characteristics:

- Allows bidirectional communication
- Two-wire connection (half duplex)
- Bus structure (addressable interface, up to 32 bus addresses)

The interface operates with differential mode voltage signals, ensuring high noise immunity.

The bus system consists of up to 32 passive users (slaves) and one active user (master). Only the active user (computer system) is authorized to start communication. The chlorine membrane electrolysis system unit is always a passive user.

Each user must be assigned a bus address from 0 ... 31. Each bus address may only be assigned once.

4.9.2 Cable

The transmission medium used is a shielded and twisted 2-wire cable (twisted pair) with a wire cross-section of at least 0.22 mm² (e.g. Li2YCY(TP) 2 x 0.22 mm², Ref. No. W2T505559). The shield improves the electromagnetic compatibility (EMC).

The bus cable is always used to connect one user to the next. Stub cables may not exceed 0.3 m.



Please note

Longer junctions in the bus cable are not permitted!

The cable's surge impedance should be between 100 Ohm and 130 Ohm; the cable capacity should be preferably < 60 pF/m and the cross section at least 0.22 mm² (24 AWG) (e.g. Li2YCY(TP) 2 x 0.22 mm², Ref. No. W2T505559).

4.9.3 Interface connection

The RS485 bus interface in the chlorine membrane electrolysis system is connected to the following two terminals:


Bus line A	Terminal A
Bus line B	Terminal B



Please note

The RS485 bus interfaces of the chlorine membrane electrolysis system are galvanically isolated. Each chlorine membrane electrolysis system uses 1 bus address.

4.9.4 Bus terminator

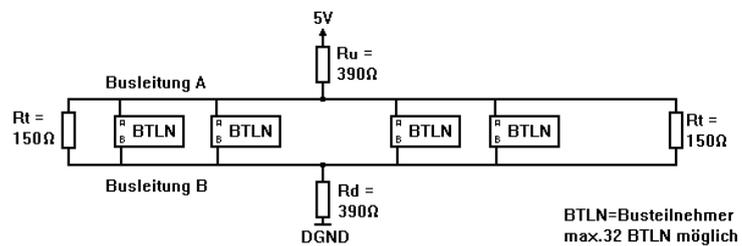

Both ends of the bus cable must be connected to a moving load R_t (150 Ohm). Symmetry is assured at only one point of the bus.


At a voltage supply of 5 V, the R_d and R_u resistors (390 Ohm each) connect to ground and 5 V.

These resistor values apply to a transmission of up to 19200 Bit/s and a maximum bus length of 1200 m.

Symmetry and bus ends should be executed in the same way in potentially isolated and non-isolated bus systems.

4.9.5 Bus design

*Potentially non-isolated
RS485 bus design*

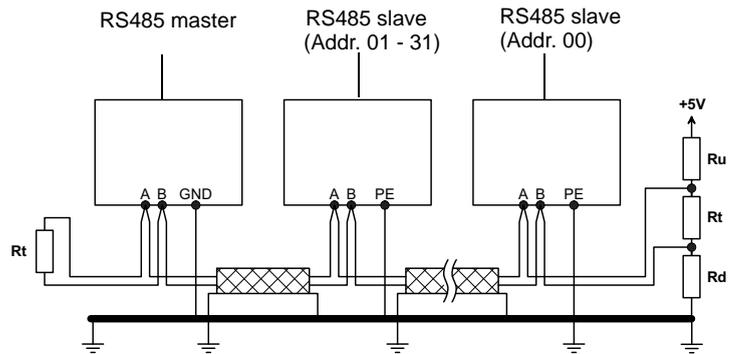


The earth bus or earth electrode conductor $\geq 6 \text{ mm}^2$ must be laid parallel to the bus cable.



Please note

The GND-PE connection is only required for the ChemWeb-Server!

*Potentially isolated
RS485 bus design*

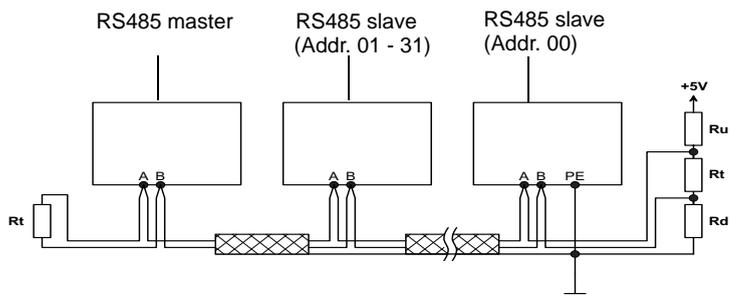

The shield may only be earthed on one side.



Please note

If one bus user is not potentially isolated (e.g. MFC, PCU, DCC), then the bus system must be a potentially non-isolated system! If all of the bus users have an isolated RS485 interface the bus design as described above in the section entitled "Potentially isolated RS485 bus system" can be used.

4.9.6 Specification of the bus interface

Synchronization mode:	Asynchronous
Transmission rate:	19200 baud
Data format (asynchronous):	Start bit: 1 Bit
	Data bit: 8 Bit
	Parity bit: even
	Stop bit: 1 Bit
Signal polarity:	Differential voltage interface Logical "1" = (A-B \geq 0.2V) Logical "0" = (A-B \leq -0.2V)
Handshake:	No handshake because of request control with fixed blocks
Transmission code:	Wallace & Tiernan protocol (master - slave) multipoint communication, max. 32 users

Not potentially isolated.

4.9.7 Communication protocol

Two different types of frames are used for communication between master (active user, e.g. computer) and slave (passive user):

- Request frame
- Set frame

The slave answers to these frames with the following frames:

- Answer frame
- Positive confirmation
- Negative confirmation

The individual bytes of these frames always have the same format:

- 1 Start bit (always "0")
- 8 Data bits
- 1 Parity bit (even)
- 1 Stop bit (always "1")

4.9.8 Description of the frame bytes

Synchronisation bytes (SYN) The synchronisation bytes are used to synchronise user units to each other.

Start byte (SB) Marks the start of the frame. The value depends on the type of frame:

- Request frame 10H
- Set frame 68H
- Answer frame 68H
- Positive confirmation A2H
- Negative confirmation DCH

Slave address (SA) A unique bus address must be assigned to every module in the RS485 bus (slave address). This can be a number between 0 and 31 decimals.

Destination address (ZA) The destination address determines the transmission variable in the address reference list that is to be read or written.

Check byte The check byte defines the data format and determines which information is read from the slave.

Check byte data format (Bit 0 - 3)

Bit (3210)	Dec.	Format
0000	0	Default (acc. to address reference list)
0001	1	Default (acc. to address reference list)
0010	2	Boolean
0011	3	Boolean
0100	4	Unsigned character
0101	5	Signed character
0110	6	Unsigned integer
0111	7	Signed integer
1000	8	Unsigned long integer
1001	9	Signed long integer
1010	10	Floating point
1011	11	Floating point
1100	12	ASCII
1101	13	ASCII
1110	14	Mixed data format
1111	15	Mixed data format

Additional check byte information (Bit 4 - 7):

Bit (7654)	Function
1000	Min. variable value
0100	Max. variable value
0010	Default variable value
0001	Additional variable information

If a bit is not set in bit 5 - 7, the actual value is written or read. Otherwise, the slave sends the corresponding additional information.

Special case

In the case of "negative confirmation", the check byte includes additional information about the error that has occurred.

In the case of "positive confirmation", the check byte is set to 00Hex.

Value	Function
01H	End of address table
02H	Wrong data format
04H	Additional information not available
08H	Variable to set not within min and max limits
10H	Reading access not permitted
20H	Reading access permitted, but wrong password
40H	Writing access not permitted
80H	Writing access permitted, but wrong password
C0H	Writing access not permitted (e.g. wrong operating mode)

- Number byte (AB)* The number byte defines the number of bytes to read or write. The maximum number per inquiry is 240 bytes!
- Frame check (FC)* The check sum of the frame control bytes is stored in the frame check. $FC = (\text{unsigned char}) SB + SA + ZA + KB + AB$
- Data unit (DU)* The data unit includes the data information to be sent by the slave or master.
- Data check (DC)* The check sum of the frame data bytes is stored in the data check. $DC = (\text{unsigned char}) \text{sum of } DU$
- End byte (EB)* Marks the end of the frame. The value is always 16H.

4.9.9 Request frame

The request frame is necessary to read data or additional information from a slave.

Format of the request frame:

Byte	0-2	3	4	5	6	7	8	9
Name:	SYN	SB	SA	ZA	KB	AB	FC	EB

Byte	Name:	Assignment:
0-2	SYN	Synchronization bytes
3	SB	Start byte 10H
4	SA	Slave address
5	ZA	Destination address
6	KB	Check byte
7	AB	Number byte
8	FC	Frame check
9	EB	End byte 16A

Using the request frame, single words, values spanning multiple addresses, or additional information regarding the destination address can be read. If the contents of a single destination address are requested, the number byte is set to 00Hex. In the answer frame, the data format and the number of bytes is entered from the address reference list into the check byte and the number byte. If a data format is entered into the request frame, it is ignored.

If a number byte is set in the request frame (request spanning multiple addresses), the data format in the answer frame is set to 04H (unsigned char). The answer frame number byte receives the value of the request frame number byte. If a data format is entered into the request frame, it is ignored.

If the additional information of a destination address is requested, the check byte must include the identification for this additional information. The data format and the number byte are ignored. The check byte and the answer byte are set according to the reference list.

Valid request frames are answered with an "answer frame". Invalid request frames are answered with "negative confirmation".

Example:

Requesting the contents of destination address 02H from slave 07H:

00H	00H	00H	10H	07H	02H	00H	00H	19H	16H
SYN	SYN	SYN	SB	SA	ZA	KB	AB	FC	EB

4.9.10 Set frame

The set frame is necessary to write data to a slave.

Set frame forma:

Byte	0-2	3	4	5	6	7	8	9-X	Y	Z
Name	SYN	SB	SA	ZA	KB	AB	FC	DU	DC	EB

Byte:	Name:	Assignment:
0-2	SYN	Synchronisation bytes
3	SB	Start byte 68H
4	SA	Slave address
5	ZA	Destination address
6	KB	Check byte
7	AB	Number byte
8	FC	Frame check
9-X	DU	Data bytes
Y	DC	Data check
Z	EB	End byte 16A

Using the set frame, single words or values spanning multiple addresses can be written.

If the contents of a single destination address are written, the number byte must correspond to the number byte from the address reference list. The data format must either be set to "default" or to the data format from the address reference list.

If more variables are to be set spanning multiple addresses, the data format must be set to "default". The number byte contains the number of bytes to write, whereby only whole variables must be written.

Valid set frames are answered by a "positive confirmation". Invalid set frames are answered by a "negative confirmation".

Example:

Setting the contents of destination address 02H inter-
face password) of slave 07H to 904 (dez).

00H	00H	00H	68H	07H	02H	06H	02H	79H	03H	88H	8BH	16H
SYN	SYN	SYN	SB	SA	ZA	KB	AB	FC	DU	DU	DC	EB



Please note

To set parameters via the RS485 bus interface, such as setpoints, it is absolutely necessary to set the interface password (ZA = 02) to the value 904 (decimal) or 0388 (hexadecimal) beforehand.

4.9.11 Answer frame

The answer frame is transmitted by the slave as a result of a master request frame.

Format of the answer frame:

Byte	0-2	3	4	5	6	7	8	9-X	Y	Z
Name:	SYN	SB	SA	ZA	KB	AB	FC	DU	DC	EB

Byte	Name:	Assignment:
0-2	SYN	Synchronization bytes
3	SB	Start byte 68H
4	SA	Slave address
5	ZA	Destination address
6	KB	Check byte
7	AB	Number byte
8	FC	Frame check
9-X	DU	Data bytes
Y	DC	Data check
Z	EB	End byte 16A

If a data format and number byte is not set in the request frame in the check byte, the data format and the byte number are entered into the answer frame from the address list.

Example:
Request frame

00H	00H	00H	10H	07H	02H	00H	00H	19H	16H
SYN	SYN	SYN	SB	SA	ZA	KB	AB	FC	EB

Answer to the example request frame

00H	00H	00H	68H	07H	02H	06H	02H	79H	00H	00H	00H	16H
SYN	SYN	SYN	SB	SA	ZA	KB	AB	FC	DU	DU	DC	EB

4.9.12 Positive and negative confirmation

The "positive confirmation" is transmitted by the slave if a master set frame has been executed validly. A "negative confirmation" is sent by the slave if a set frame or a request frame could not be executed validly.

Positive/negative confirmation format:

Byte:	0-2	3	4	5	6	7	8	9
Name:	SYN	SB	SA	ZA	KB	AB	FC	EB

Byte:	Name:	Assignment:
0-2	SYN	Synchronisation bytes
3	SB	Positive: Start byte A2H Negative: Start byte DCH
4	SA	Slave address
5	ZA	Destination address
6	KB	Check byte
7	AB	Number byte
8	FC	Frame check
9	EB	End byte 16A

The control byte contains 00Hex in the case of a positive confirmation and an error code for a negative confirmation.

Example:

Positive confirmation:

00H	00H	00H	A2H	07H	02H	00H	00H	ABH	16H
SYN	SYN	SYN	SB	SA	ZA	KB	AB	FC	EB

Example:

Negative confirmation:

00H	00H	00H	DCH	07H	02H	02H	00H	E7H	16H
SYN	SYN	SYN	SB	SA	ZA	KB	AB	FC	EB

4.9.13 Address reference list

Addr.	Byte Address	Length (Byte)	Format	Range	Unit	Status	Description
0	0	10	ASCII[8]			R	Kennung RS485 Bus-scan
1	10	6	ASCII[4]			R	Kennung RS485 Bus-scan
2	16	12	ASCII[10]			R	Typbezeichnung Anlage
3	28	10	ASCII[8]			R	Software Artikelnummer
4	38	8	ASCII[6]			R	Software Version
5	46	8	ASCII[6]			R	Software Datum, MM/YY
6	54	18	ASCII[16]			R	Seriennummer Anlage
7	72	18	ASCII[16]			R	Standort Anlage
8	90	18	ASCII[16]			R	Name Anlage
9	108	18	ASCII[16]			R	Auftragsnummer Anlage
10	126	2	UINT	0...999		R	**Passwort RS485 Bus**
11	128.0	1	CHAR			R	Meldung "AUTOMATIK"
	128.1					R	Meldung "Bereitung Stand-by"
	128.2					R	Meldung "Bereitung aktiv!"
	128.3					R	Meldung "Bereitung Anlauf"
	128.4					R	Meldung "Bereitung läuft"
	128.5					R	Meldung "Bereitung Nachlauf"
	128.6					R	Meldung "Bereitung ext. Sperre!"
	128.7					R	Meldung "Enthärtungsanlage Regeneration läuft"
12	129.0	1	CHAR			R	Meldung "Enthärtungsanlage Besalzen läuft"
	129.1					R	Meldung "Enthärtungsanlage Einwirken läuft"
	129.2					R	Meldung "Enthärtungsanlage Auswaschen läuft"
	129.3					R	Meldung "Handfunktion aktiv!"
	129.4					R	Meldung "HAND Elektrolysewasser!"
	129.5					R	Meldung "HAND Kühlwasser!"
	129.6					R	Meldung "HAND Sole füllen!"
	129.7					R	frei
13	130.0	1	CHAR			R	WARNmeldung "Netzspannung nicht stabil / Netzfehler"
	130.1					R	WARNmeldung "Enthärtungsanlage Soledurchfluss prüfen"
	130.2					R	WARNmeldung "Produktbehälter leer"
	130.3					R	WARNmeldung "Elektrolysewasser Durchfluss prüfen"

Addr.	Byte Address	Length (Byte)	Format	Range	Unit	Status	Description
13	130.4	1	CHAR			R	WARNmeldung "Kühlwasser Durchfluss prüfen"
	130.5					R	WARNmeldung "Netzausfall kürzer 4 Stunden!"
	130.6					R	WARNmeldung "Netzausfall länger 4 Stunden!"
	130.7					R	WARNmeldung "Monatliche Wartung!"
14	131.0	1	CHAR			R	WARNmeldung "Jährliche Wartung! Kundendienst erforderlich"
	131.1					R	WARNmeldung "Umgebungstemperatur zu hoch"
	131.2					R	WARNmeldung "Betriebswasser Druck zu gering"
	131.3					R	WARNmeldung "Betriebswasser Druck zu hoch"
	131.4					R	frei
	131.5					R	frei
	131.6					R	frei
	131.7					R	frei
15	132.0	1	CHAR			R	Störmeldung "Dosierbereich leak"
	132.1					R	Störmeldung "Solepumpe Laufzeit überschritten"
	132.2					R	Störmeldung "Solepumpe Wartezeit überschritten"
	132.3					R	Störmeldung "Chlorgasalarm"
	132.4					R	Störmeldung "Enthärtungsanlage Soledurchflusswächter Plausibilität"
	132.5					R	Störmeldung "Luftstromwächter prüfen" (Plausibilität)
	132.6					R	Störmeldung "Ventilator ausgefallen"
	132.7					R	Störmeldung "Gleichrichter nicht bereit"
16	133.0	1	CHAR			R	Störmeldung "Anlage leak"
	133.1					R	Störmeldung "Produktbehälter leak"
	133.2					R	Störmeldung "Produktbehälter übertoll"
	133.3					R	Störmeldung "Elektrolysewasser Durchflussmesser prüfen" (kein Signal)
	133.4					R	Störmeldung "Elektrolysewasser Durchflussmesser Plausibilität"
	133.5					R	Störmeldung "Luftstrom zu gering"
	133.6					R	Störmeldung "Zellenspannung zu hoch"
	133.7					R	Störmeldung "Elektrolysestrom zu gering"
17	134.0	1	CHAR			R	Störmeldung "Kühlwasser Grenzkontakt Durchflusswächter Plausibilität"
	134.1					R	Störmeldung "Kühlwasser Durchfluss zu gering"
	134.2					R	Störmeldung "Elektrolysewasser Durchfluss zu gering"

Addr.	Byte Address	Length (Byte)	Format	Range	Unit	Status	Description
17	134.3	1	CHAR			R	Störmeldung "Elektrolysewasser Durchfluss zu hoch"
	134.4					R	Störmeldung "Produktbehälter Niveausonden Plausibilität"
	134.5					R	Störmeldung "NOT-STOP"
	134.6					R	Störmeldung "Externe Enthärtung / Härtekontrolle Störung"
	134.7					R	Störmeldung "Salzlösebehälter Befüllzeit überschritten"
18	135.0	1	CHAR			R	Störmeldung "Sicherheits-Absperrarmatur öffnet nicht! Plausibilität?"
	135.1					R	Störmeldung "Sicherheits-Absperrarmatur schliesst nicht! Plausibilität?"
	135.2					R	Störmeldung "Hebereinrichtung Niveausonden Plausibilität"
	135.3					R	Störmeldung "Hebereinrichtung Laufzeit Vakuumpumpe überschritten"
	135.4					R	Störmeldung "Gleichrichter nicht bereit! Umgebungstemperatur & Warnung"
	135.5					R	Störmeldung "Gleichrichter nicht bereit! Netz & Warnung"
	135.6					R	Störmeldung "Elektrolysewasser Durchfluss zu gering! Druck & Warnung"
	135.7					R	Störmeldung "Kühlwasser Durchfluss zu gering! Druck & Warnung"
19	136.0	1	CHAR			R	Störmeldung "Salzlösebehälter Befüllzeit überschritten! Druck & Warnung"
	136.1					R	Störmeldung "Enthärtungsanlage Soledurchfluss zu gering! Druck & Warnung"
	136.2					R	Störmeldung "Enthärtungsanlage Soledurchfluss zu gering"
	136.3					R	frei
	136.4					R	frei
	136.5					R	frei
	136.6					R	frei
	136.7					R	frei
20	137.0	1	CHAR			R	frei
	137.1					R	frei
	137.2					R	frei
	137.3					R	frei
	137.4					R	frei
	137.5					R	frei
	137.6					R	frei

Addr.	Byte Address	Length (Byte)	Format	Range	Unit	Status	Description
20	137.7	1	CHAR			R	frei
21	138	4	FLOAT	0...999999,9	h	R	Bereitung gesamt [h]
22	142	4	FLOAT	0...999999,9	h	R	Bereitung Durchschnitt [h]
23	146	4	FLOAT	0...0,999999999		R	Bereitungszyklen
24	150	4	FLOAT	0...999999,9	h	R	Betriebsstunden gesamt [h]
25	154	4	FLOAT	0...999,9	V	R	Zellenspannung [V]
26	158	4	FLOAT	0...999,9	A	R	Elektrolysestrom [A]
27	162	4	FLOAT	0...999,9	l/h	R	Elektrolysewasser [l/h]
28	166	4	FLOAT	0...99,9	bar	R	Betriebswasserdruck [bar]
29	170	4	FLOAT	-99,9...99,9	°C	R	Umgebungstemperatur [°C]
30	174	4	FLOAT			R	frei
31	178	4	FLOAT			R	frei
32	182	4	FLOAT			R	frei
33	186	4	FLOAT			R	frei
34	190	4	FLOAT			R	frei
35	194	4	FLOAT			R	frei
36	198	4	FLOAT			R	frei
37	202.0	1	CHAR			R	Digital IN, NOT-STOP
	202.1					R	Digital IN, ext. Enthärtung / Härtekontrolle
	202.2					R	Digital IN, Freigabe Bereitung
	202.3					R	Digital IN, Elektrolysewasser
	202.4					R	frei
	202.5					R	Digital IN, Heberggefäß max
	202.6					R	Digital IN, Heberggefäß min
	202.7					R	Digital IN, Kühlwasser
38	203.0	1	CHAR			R	Digital IN, Chlorseparator
	203.1					R	Digital IN, Luftstromwächter
	203.2					R	Digital IN, Ventilator
	203.3					R	Digital IN, Dosierbereich Leckage
	203.4					R	Digital IN, Anlage Leckage
	203.5					R	Digital IN, Produktbehälter Leckage

Addr.	Byte Address	Length (Byte)	Format	Range	Unit	Status	Description
38	203.6	1	CHAR			R	Digital IN, Produktbehälter übertoll
	203.7					R	Digital IN, Produktbehälter max
39	204.0	1	CHAR			R	Digital IN, Produktbehälter min
	204.1					R	Digital IN, Produktbehälter leer
	204.2					R	Digital IN, Salzlösebehälter Niveau
	204.3					R	Digital IN, Soledurchfluss
	204.4					R	Digital IN, Gleichrichter
	204.5					R	Digital IN, Sicherheits-Absperrarmatur auf
	204.6					R	Digital IN, Sicherheits-Absperrarmatur zu
	204.7					R	Digital IN, Chlorgasalarm
40	205.0	1	CHAR			R	frei
	205.1					R	frei
	205.2					R	frei
	205.3					R	frei
	205.4					R	frei
	205.5					R	frei
	205.6					R	frei
	205.7					R	Digital IN, Netzüberwachung
41	206.0	1	CHAR			R	Digital OUT, Solepumpe
	206.1					R	Digital OUT, Alarmhorn
	206.2					R	Digital OUT, Blitzleuchte
	206.3					R	Digital OUT, Freigabe Dosierung/Umfüllung
	206.4					R	Digital OUT, Vakuumpumpe
	206.5					R	Digital OUT, Kühlwasser
	206.6					R	Digital OUT, Elektrolysewasser
	206.7					R	Digital OUT, Ventilator
42	207.0	1	CHAR			R	Digital OUT, Salzlösebehälter
	207.1					R	Digital OUT, Enthärtungsanlage Spülung
	207.2					R	Digital OUT, Enthärtungsanlage Injektor
	207.3					R	Digital OUT, Enthärtungsanlage Zulauf
	207.4					R	Digital OUT, Gleichrichter
	207.5					R	Digital OUT, Melderelais 2
	207.6					R	Digital OUT, Melderelais 1
	207.7					R	Digital OUT, Sicherheits-Absperrarmatur

Addr.	Byte Address	Length (Byte)	Format	Range	Unit	Status	Description
43	208.0	1	CHAR			R	frei
	208.1					R	frei
	208.2					R	frei
	208.3					R	frei
	208.4					R	frei
	208.5					R	frei
	208.6					R	frei
	208.7					R	frei
44	209	1	CHAR			R	frei
45	210	1	CHAR			R	frei
46	211	1	CHAR			R	frei
47	212	1	CHAR			R	frei
48	213	1	CHAR			R	frei
49	214.0	1	CHAR			R	frei
	214.1					R	frei
	214.2					R	frei
	214.3					R	frei
	214.4					R	frei
	214.5					R	frei
	214.6					R	frei
	214.7					R	frei
50	215.0	1	CHAR			R	Benutzer über HMI angemeldet
	215.1					R	Benutzer über PROFIBUS DP angemeldet
	215.2					R	Benutzer über RS485 angemeldet
	215.3					R	frei
	215.4					R	frei
	215.5					R	frei
	215.6					R	frei
	215.7					R	frei
51	216	2	UINT			R	frei
52	218	1	CHAR			R	frei
53	219	1	CHAR			R	frei
54	220	1	CHAR			R	Test Injektor über RS485 auslösen
55	221	1	CHAR			W	Test Injektor über RS485 auslösen

Addr.	Byte Address	Length (Byte)	Format	Range	Unit	Status	Description
56	222	1	CHAR			R	Hand Enthärtung Regeneration über RS485 auslösen
57	223	1	CHAR			W	Hand Enthärtung Regeneration über RS485 auslösen
58	224	1	CHAR			R	Hand Sole füllen über RS485 ein,- ausschalten
59	225	1	CHAR			W	Hand Sole füllen über RS485 ein,- ausschalten
60	226	1	CHAR			R	Hand Kühlwasser über RS485 ein-, ausschalten
61	227	1	CHAR			W	Hand Kühlwasser über RS485 ein-, ausschalten
62	228	1	CHAR			R	Hand Elektrolysewasser über RS485 ein-, ausschalten
63	229	1	CHAR			W	Hand Elektrolysewasser über RS485 ein-, ausschalten
64	230	1	CHAR			R	Bereitung über RS485 starten, stoppen
65	231	1	CHAR			W	Bereitung über RS485 starten, stoppen
66	232	1	CHAR			R	Betriebsart über RS485 ändern
67	233	1	CHAR			W	Betriebsart über RS485 ändern
68	234	2	UINT			R/W	Funktion [**interne Verwendung, n.c.**]
69	236	4	CHAR			R/W	Lokal <-> Remote Benutzer

5. Operation

5.1 Control and display unit

5.1.1 General

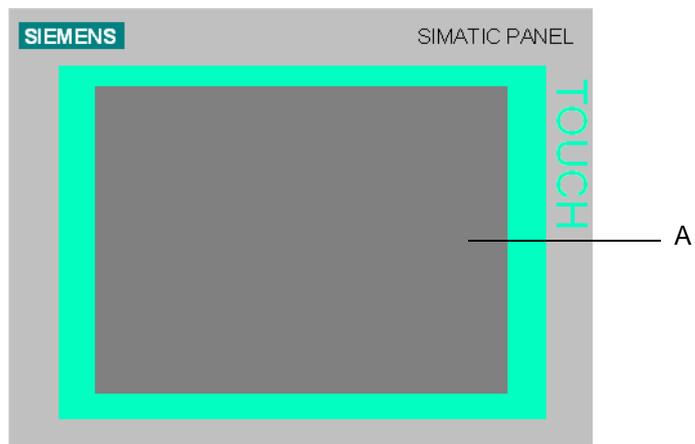


Fig. 1 Siemens SIMATIC Touch Panel

A Display with Touch Screen

The Touch Screen is the standard input device on the control unit. All of the control objects required to control the unit are displayed on the Touch Screen when the control unit is switched on.



Attention!

Damage to the system!

Only touch one control object at a time. You should never touch more than one control object simultaneously, as doing so may trigger operations unintentionally.



Attention!

Damage to the system!

Never use pointed or sharp instruments to operate the Touch Screen or press it hard with a hard object, as this can severely shorten its operational life or cause it to stop working completely. Only touch the Touch Screen with your finger or a Touch stylus.

5.1.2 Main screen

When the chlorine membrane electrolysis system is switched on, the Touch Screen displays the main screen:

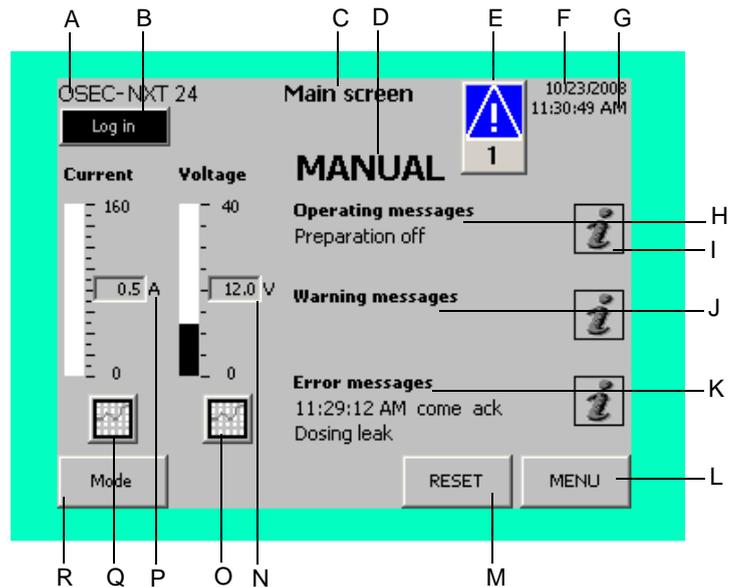


Fig. 2 Main screen showing an error message

- A System type
- B Log in/Log out button (see chapter 5.2.2)
- C Display menu
- D Mode display (Manual or Automatic) (see chapter 5.3)
- E Error display showing the number of faults (see chapter 5.10)
- F Displays the current date
- G Displays the current time
- H Two-line operating messages display (see chapter 5.8)
- I Information button "i", provides information on current messages
- J Two-line warning messages display (see chapter 5.9)
- K Two-line error messages display (see chapter 5.10)
- L Menu selection button
- M Error messages "Reset" button (see chapter 5.10)
- N Current cell voltage display (see chapter 5.11)
- O Cell voltage graph button (see chapter 5.11)
- P Current electrolysis current display (see chapter 5.11)
- Q Electrolysis current graph button (see chapter 5.11)
- R Mode button (Manual or Automatic) (see chapters 5.4 and 5.5)

Buttons

The buttons are used to perform functions and to switch between the menus and displays.



Please note

Details on the other displays are given in the appropriate chapters.

5.2 Password protection

5.2.1 General

All of the settings and operating parameters can be read by all users, in any user group, without requiring the user to log in. Certain functions are protected, requiring entry of a username and password, so that they can only be performed by certain groups.

There are three user levels. Only the functions of levels 1 and 2 are accessible to ordinary users.

- Level 1: No login required. For operators and service personnel.
- Level 2: Login required. For operators and service personnel.
- Level 3: Login required. Only for service personnel.

Details on the functions of the different password levels can be found in Description 3.6, Functions.




Please note

The user name for level 1 is **WT** and the password is **9040**.

5.2.2 Logging in

Main screen

MAIN SCREEN

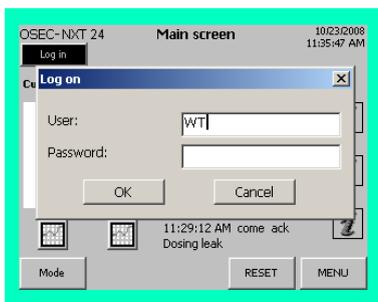


You can log in in any mode. If you have not yet logged in, the "Log in" button flashes, irrespective of which menu you are currently in.

Proceed as follows:

- 1 Press the "Log in" button. The login dialog box will open, with the cursor in the "User" input box.
- 2 Enter the user name for the level you wish to log in to using the keyboard displayed on the screen and then press Return. The cursor will then move to the "Password" box.
- 3 Enter the password for the level you wish to log in to using the keyboard displayed on the screen and then press Return.

Main screen
Log in

MAIN SCREEN

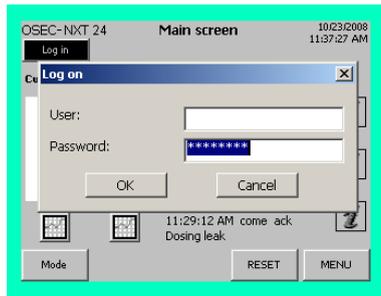


- 4 Press OK to confirm. The display then returns to the previous menu and the "Log in" button changes into a "Log out" button. The required functions are now accessible.



Please note

Once you have logged in, all of the other functions available to that user level are accessible too. In level 1 (Operator level) you are automatically logged out of after 60 minutes, and in level 2 (Service) after five minutes. If a password is required the login dialog box is displayed automatically.

5.3 Automatic mode

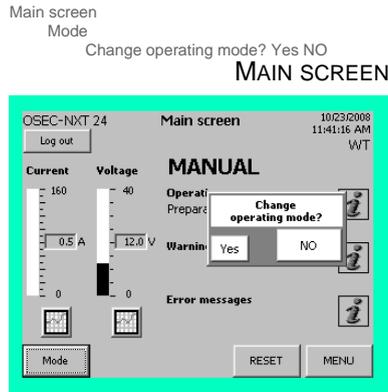

The chlorine membrane electrolysis system is running in automatic mode. Automatic preparation is turned on and off by pressing the "Mode" button (see chapters 5.6 Activating manual preparation and chapter 5.7 Stopping preparation manually for details). The display shows if automatic mode is active.


The chlorine membrane electrolysis system has two operating states in automatic mode.

- Preparation standby
- Preparation active!
 - Preparation start up
 - Preparation running
 - Preparation shut down


If the system is manual instead of automatic mode there is also another operating state:

- Preparation off

The current operating state is shown on the display under "Operating messages". If additional information is available, it can be displayed by pressing the "i" (Info) button.

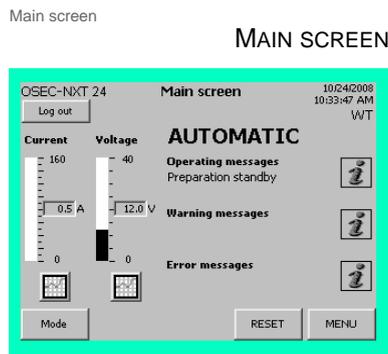

In automatic mode, sodium hypochlorite preparation is controlled via the level switch in the storage tank. The system is initially in the operating state "Preparation standby". Once the "Storage tank min." level is reached, sodium hypochlorite preparation begins.

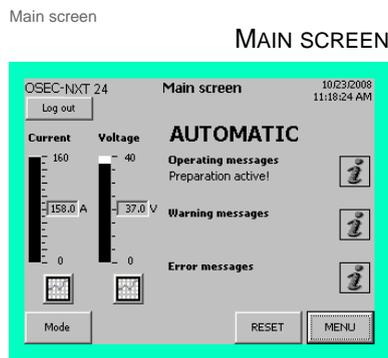


If the chlorine membrane electrolysis system is in the "Preparation active!" operating state, it begins the run-up process (Preparation start up). The "Preparation active!" operating state has three phases:

- The run-up phase
- The preparation phase
- The run-out phase

Main screen

"i" (info) operating messages

OPERATING MESSAGES
"PREPARATION START UP"

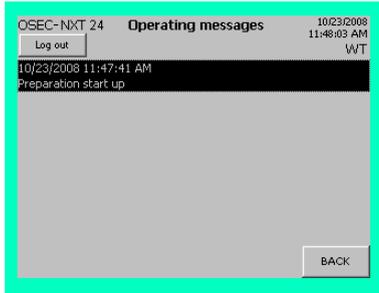


To display details of which phase the system is currently in as well as the date and time, press the "i" (Info) button.

Main screen

"i" (info) operating messages

OPERATING MESSAGES
"PREPARATION RUNNING"

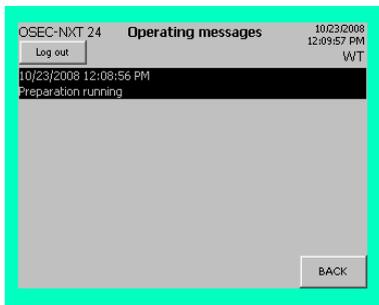


Once the run-up process has been completed, the chlorine membrane electrolysis system switches to the preparation phase ("Preparation running") operating state. Sodium hypochlorite preparation stops once the "Storage tank max." fill level is reached.

Main screen

"i" (info) operating messages


OPERATING MESSAGES
"PREPARATION SHUT DOWN"

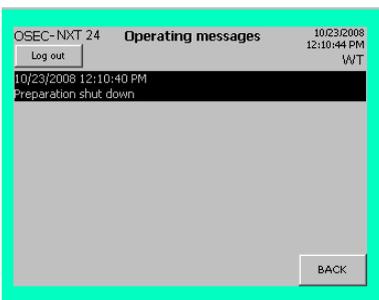

The chlorine membrane electrolysis system then switches to the run-out phase ("Preparation shut down").


Main screen

MAIN SCREEN

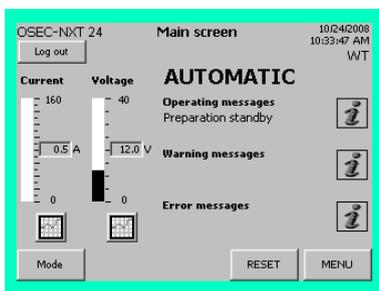

Once the run-out process has been completed, the system reverts to the "Preparation standby" operating state.


5.4 Turning on automatic mode

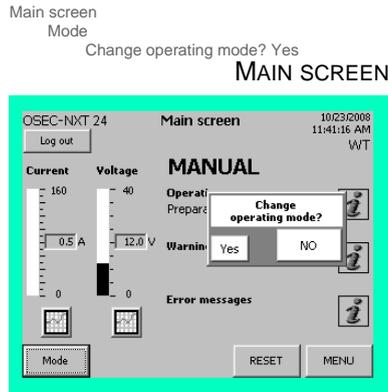

Once start up has been completed, or once any faults that caused automatic preparation to stop have been corrected, the chlorine membrane electrolysis system enters the "Preparation off" operating state. The system is ready and can be switched to automatic mode.


Proceed as follows:

- 1 Enter the user name and password, if necessary. For details, see chapter 5.2.2 Logging in.
- 2 Press the "Mode" button.

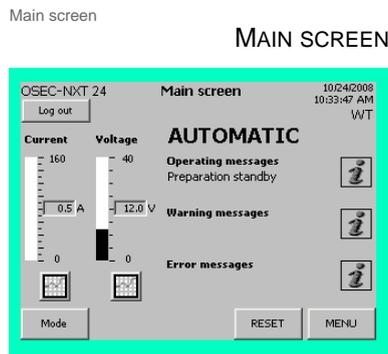

The chlorine membrane electrolysis system is now in automatic preparation mode. If automatic mode is active, this is shown on the display as a text message. For details, see chapter 5.3 Automatic mode and chapter 5.8 Operating messages.

5.5 Turning off automatic mode

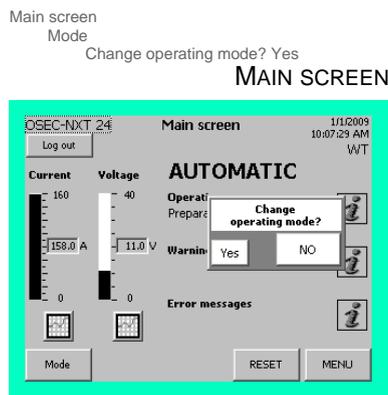


When performing maintenance work or to shut the system down for a short period, switch off automatic mode.

Proceed as follows:

- 1 Enter the user name and password, if necessary. For details, see chapter 5.2.2 Logging in.
- 2 Press the "Mode" button.

Main screen

MAIN SCREEN

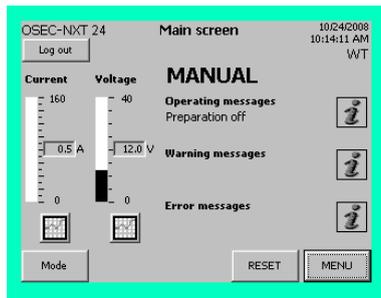

If the chlorine membrane electrolysis system is in the "Preparation active!" operating state, it first goes through the run-out process before then switching automatic mode off.

The system switches to the "Preparation off" operating state. The mode "MANUAL" is displayed as a text message on the display.



Attention!

Damage to the electrolysis cell(s)!

The chlorine membrane electrolysis system can remain like this for a maximum of four weeks, otherwise the electrolysis cells may be damaged.


5.6 Activating preparation manually

Preparation of sodium hypochlorite can also be activated manually when the system is in automatic mode if:

- The chlorine membrane electrolysis system is in the "Preparation standby" operating state.
- The fill level in the storage tank is below "Storage tank max."

Main screen
Start preparation

MAIN SCREEN

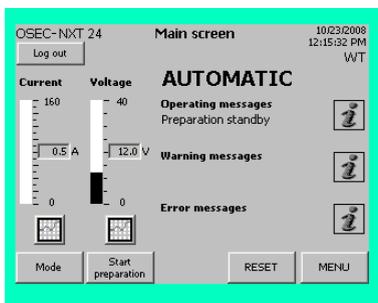

If both of these conditions are met the "Start preparation" button is also displayed on the basic display.

Proceed as follows:

- 1 Press the "Start preparation" button. You will be asked to enter a user name and password. For details, see chapter 5.2.2 Logging in.

The system then switches to the run-up phase of the "Preparation active !" operating state.

Once the run-up phase has been completed, the chlorine membrane electrolysis system switches to the preparation phase and generates sodium hypochlorite until the "Storage tank max." fill level in the storage tank is reached.

Once the "Storage tank max." fill level in the storage tank is reached, the system switches to the run-out phase.

Once the run-out process has been completed, the chlorine membrane electrolysis system switches back to the "Preparation standby" operating state.



Please note

If a fault occurs at the same time as you attempt to start preparation manually, this is shown on the display. Manual preparation cannot then be started and the "Start preparation" button is hidden.


5.7 Stopping preparation manually

Preparation of sodium hypochlorite can also be stopped manually when the system is in automatic mode if:

- The chlorine membrane electrolysis system is in the "Preparation active!" operating state.
- The fill level in the storage tank is above "Storage tank max.".

Main screen
Stop preparation

MAIN SCREEN

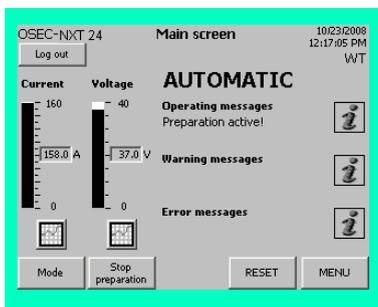

If both of these conditions are met the "Stop preparation" button is also displayed on the main screen.

Proceed as follows:

- 1 Press the "Stop preparation" button. You will be asked to enter a user name and password. For details, see chapter 5.2.2 Logging in.

The system then switches to the run-out phase.

Once the run-out process has been completed, the chlorine membrane electrolysis system switches back to the "Preparation standby" operating state.

Once the "Storage tank min." level in the storage tank is reached, sodium hypochlorite preparation starts again.



Please note

If a fault occurs at the same time as you attempt to stop preparation manually, this is shown on the display.

5.8 Operating messages

5.8.1 General

There are six different operating operating messages that can be displayed by the chlorine membrane electrolysis system.

The operating states:

- Preparation off
- Preparation standby
- Preparation active!

Other operating messages include:

- Water softener regenerating
- Preparation ext. locked!




Please note

These two operating messages are displayed on the screen along with the current operating state. They can be displayed if the operating state is "Preparation standby" or "Preparation off".

- Manual mode active!

Main screen
"i" (info) operating messages

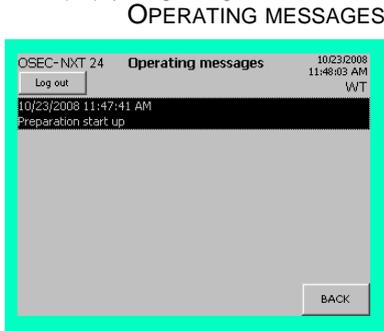


If additional information is available about the current operating messages it can be displayed by pressing the "i" (Info) button.

5.8.2 Preparation off

Main screen

MAIN SCREEN

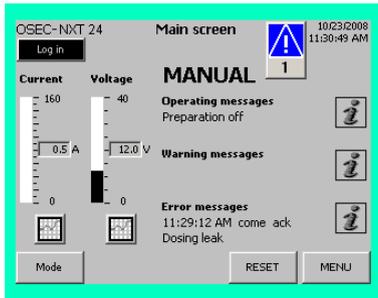


The chlorine membrane electrolysis system is in the "Preparation off" operating state. The system is ready to operate.

- Automatic mode is off.
- All of the control system's control functions are active.
- The protection potential is switched on.
- The fan is running.
- If there is a fault, an error message is displayed. (See chapter 5.14 for details on acknowledging and correcting faults.)

Main screen

MAIN SCREEN

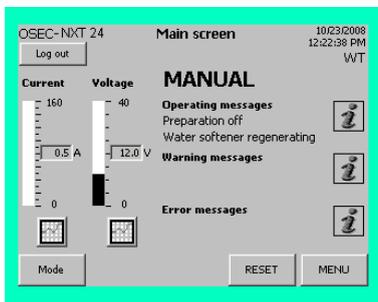


- Automatic regeneration is active. If regeneration is running, this is indicated on the display.

5.8.3 Preparation standby

Main screen

MAIN SCREEN

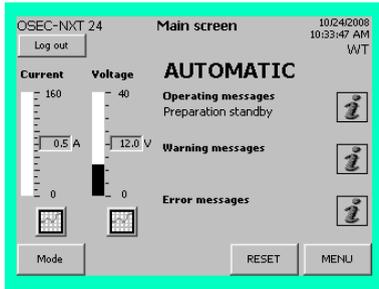


The chlorine membrane electrolysis system is in the "Preparation standby" operating state.

- Automatic mode is active.
- All of the control system's control functions are active.
- The protection potential is switched on.
- The fan is running.
- The system is not preparing the product.

Main screen

MAIN SCREEN

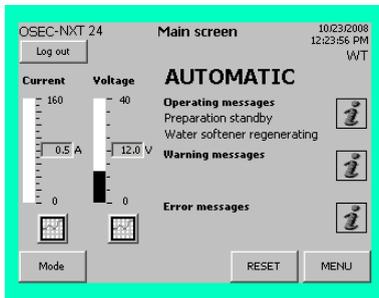

- Automatic regeneration is active. If regeneration is running, this is indicated on the display.




Please note

In "Preparation standby" it is possible to start preparation of sodium hypochlorite manually. The "Start preparation" button is then displayed. See chapter 5.6 Activating preparation manually.

Main screen

Start preparation

MAIN SCREEN

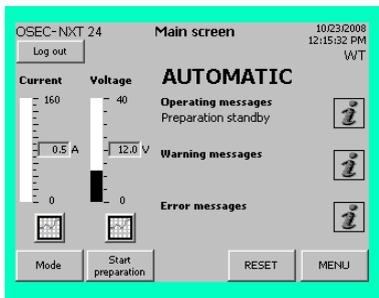




Please note

Components and hose connections that are mechanically or electrically operated are labeled on the system with abbreviations (e.g. M3). To facilitate their identification, these abbreviations are repeated at relevant points in the operating instructions and on the drawings.

5.8.4 Preparation active!

Main screen

MAIN SCREEN

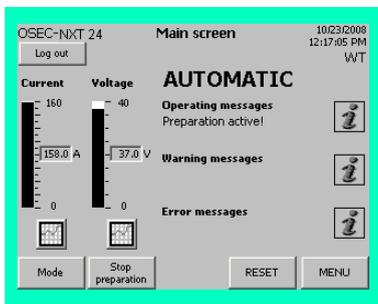

The "Preparation active!" operating state has three phases:


- The run-up phase (Preparation start up)
- The preparation phase (Preparation running)
- The run-out phase ("Preparation shut down")

To display details of which phase the system is currently in as well as the date and time, press the "i" (Info) button.

Main screen

"i" (info) operating messages

OPERATING MESSAGES "PREPARATION START UP"

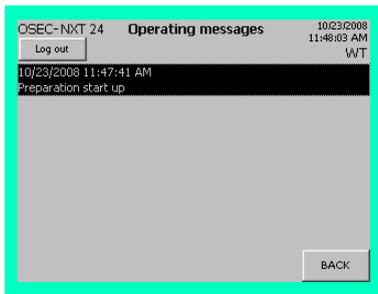

Once the "Storage tank min." fill level in the storage tank is reached, the level switch automatically starts sodium hypochlorite preparation again. The system then switches to the run-up phase of the "Preparation active !" operating state.


If the fluid level limit has not been reached, the brine pump starts. Once the level limit in the chlorine separator is reached, the following process is initiated:

- The brine pump is turned off.
- The electrolysis water solenoid valve (E2) is opened.
- The inlet water solenoid valve for the softening process (E5) is opened.
- The cooling water solenoid valve (E3) is opened.
- The electrolysis current is switched on and the voltage increases until the electrolysis power is reached.
- Once the electrolysis power is reached the system switches to the preparation phase.

Main screen

"i" (info) operating messages

OPERATING MESSAGES
"PREPARATION RUNNING"

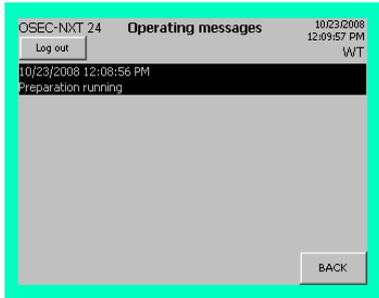


Once electrolysis power is reached, the chlorine membrane electrolysis system switches to the product preparation state and prepares sodium hypochlorite until the "Storage tank max." level is reached in the storage tank.

- The electrolysis water starts flowing.
- The cooling water starts flowing.
- The brine pump is turned on and off by the level switch in the chlorine separator.
- Once the "Storage tank max." fill level is reached, the system switches to the run-out phase.

Main screen

"i" (info) operating messages

OPERATING MESSAGES
"PREPARATION SHUT DOWN"

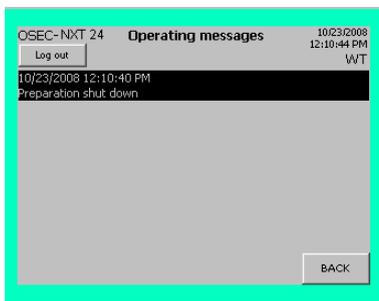

Once the "Storage tank max." fill level in the storage tank is reached, the level switch automatically stops sodium hypochlorite preparation again. The system then switches to the run-out phase.


- The electrolysis current is reduced until the protection potential is reached.

Once the protection potential is reached, the following process is initiated:

- The brine pump is turned off.
- The electrolysis water solenoid valve (E2) is closed.
- The cooling water solenoid valve (E3) is closed.
- The inlet water solenoid valve for the softening process (E5) is closed.
- The system switches to the "Preparation standby" operating state.


Main screen

MAIN SCREEN

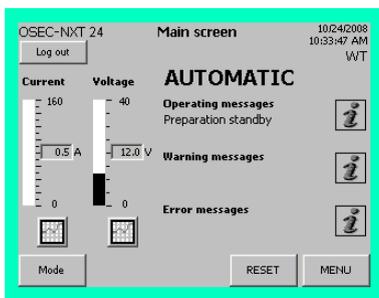

Main screen

MAIN SCREEN

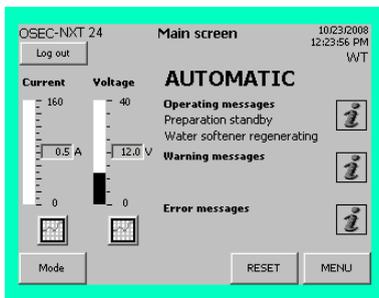


Automatic regeneration is active throughout the preparation process. If regeneration starts, the preparation process is interrupted, the system switches to run-out or stops run-out and remains in the "Preparation standby" state. Regeneration is running. This is indicated on the display. Once regeneration has finished, sodium hypochlorite preparation automatically starts again as soon as the "Storage tank min." fill level in the storage tank is reached.



Please note

In the "Preparation active!" operating state it is possible to stop preparation of sodium hypochlorite manually. The stop preparation button is displayed for this purpose. See chapter 5.7 Stopping preparation manually for details.


Main screen
Stop preparation

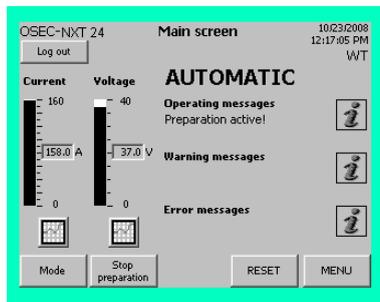MAIN SCREEN

5.8.5 Water softener regenerating

Main screen

MAIN SCREEN

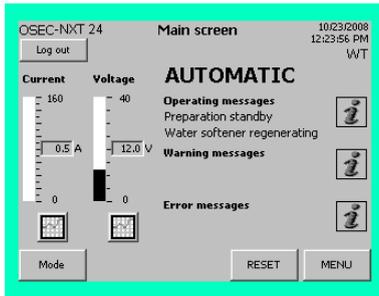

Automatic regeneration is usage-based and depends on the water hardness. The automatic regeneration of the water softener is active in every operating state. If regeneration is running, this is indicated on the display. Press the "i" (Info) button to show the current regeneration phase:

- Water softener reacting
- Water softener adding brine
- Water softener washing

If the chlorine membrane electrolysis system is in the run-up or preparation state, it is interrupted, the system switches to run-out and remains in the "Preparation standby" state. Regeneration is running. This is indicated on the display.

Once regeneration has finished, sodium hypochlorite preparation automatically starts again as soon as the "Storage tank min." fill level in the storage tank is reached.

Regeneration of the water softener can also be started manually via the menu by selecting "Manual functions" - "Water softener".



Please note


Insufficient salt in the salt dissolving tank leads on to malfunctions on the water softener, consequently resulting in irreparable damage to the chlorine membrane electrolysis system and the electrolysis cells.

Check the fill level of the brine in the salt dissolving tank daily! For details see chapter 5.13.2 Replenishing the salt in the salt dissolving tank.

5.8.6 Preparation ext. locked!

Main screen

MAIN SCREEN

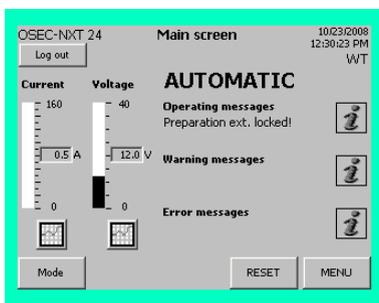


The chlorine membrane electrolysis system control system (available as an option) also provides a digital input for external control of the sodium hypochlorite preparation. This allows the operator to turn off the preparation of sodium hypochlorite from a control room. This is possible in every operating state and is shown on the display.

If the chlorine membrane electrolysis system is in the run-up or preparation state, it is interrupted, the system switches to run-out and remains in the "Preparation standby" state. The system is still in automatic operation. However, the preparation of sodium hypochlorite cannot be triggered.

5.8.7 Manual mode active!

Main screen

MAIN SCREEN

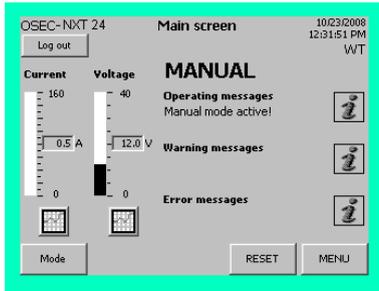

The manual functions are only active in "MANUAL" mode when the system is in the "Preparation off" state. They can be used to enable the required function temporarily. The manual functions are password protected. When they are active, the "i" (Info) button flashes. Three manual functions are displayed:

- MANUAL Cooling water!
- MANUAL Electrolysis water!
- MANUAL Top-up brine!

Main screen

"i" (info) operating messages

OPERATING MESSAGES "MANUAL COOLING WATER"



Which of these manual functions is currently active can be displayed in the operating messages menu by pressing the "i" (Info) button.

For further details on the manual functions, see chapter 5.12.6 "Manual functions" menu.

Main screen

"i" (info) operating messages


OPERATING MESSAGES "MANUAL ELECTROLYSIS WA-"



Main screen

"i" (info) operating messages

OPERATING MESSAGES "MANUAL TOP-UP BRINE!"

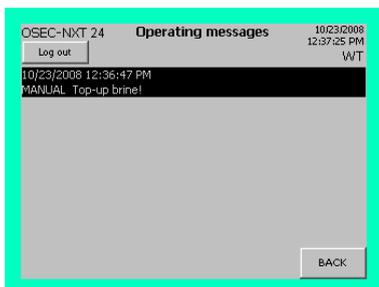


5.9 Warning messages

5.9.1 General

Main screen

MAIN SCREEN

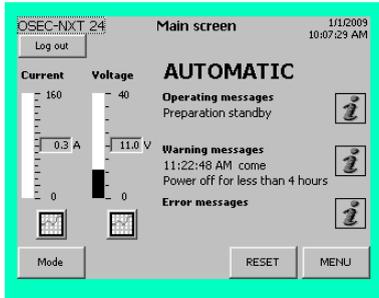

The chlorine membrane electrolysis system is capable of displaying twelve different warning messages. The last warning message reported by the system is displayed as a text message on the main screen, together with the time stamp and the state and the "i" (Info) button flashes:


- Perform monthly maintenance!
- Perform annual maintenance! Service required
- Storage tank empty
- Operating water pressure too low
- Operating water pressure too high
- Electrolysis water check flow rate
- Cooling water check flow rate
- Water softener check brine flow rate
- Power off for less than 4 hours
- Power off for more than 4 hours
- Unstable mains voltage/mains failure
- Ambient temperature too high

The chlorine membrane electrolysis system stays in the current operating state. The current automatic process is not interrupted. The text message and the flashing "i" (Info) button disappear once the cause of the fault has been corrected.

Main screen

"i" (info) warning messages

WARNING MESSAGES

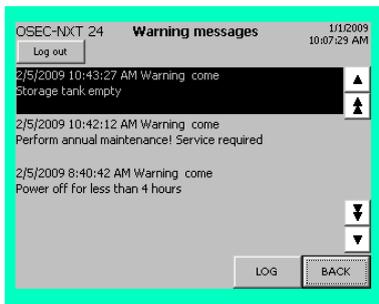

The "i" (Info) button allows you to view the current warning messages that have been displayed by the system, including the date, time and status details ("come"), at any time.

The arrow keys are used to navigate around the display.

Press the "LOG" button to open the "Warning message log".

Main screen

Menu selection
Diagnostics

Warning message log
WARNING MESSAGE LOG




All of the warnings are stored in the "Warning message log" together with the date, time and status details ("come" and "gone") and can be viewed at any time. See chapter 5.12.3 "Diagnostics", warning message log, for details.

5.9.2 Perform monthly maintenance!

Main screen

MAIN SCREEN

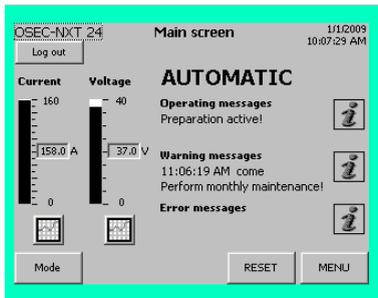


The warning "Perform monthly maintenance!" is displayed once a month. This warning message can be displayed in every operating state. The chlorine membrane electrolysis system remains operational. The warning message is turned off again once you have confirmed that monthly maintenance has been carried out by pressing the "Maintenance" button on the main "Service" menu, see chapter 5.12.4. See chapter 5.13 Maintenance by the operator for further details on carrying out monthly maintenance.

5.9.3 Perform annual maintenance! Service required

Main screen

MAIN SCREEN

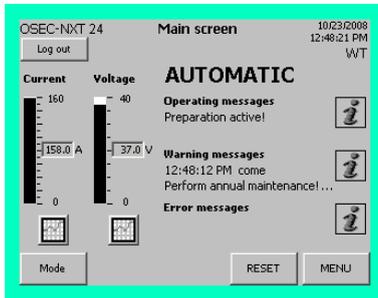


Once a year, annual maintenance must be carried out by Evoqua service personnel or by personnel trained and authorized by Evoqua for maintenance work. This is indicated on the display. This warning message will be displayed for the first time after six months, and then every twelve months thereafter. This warning message can be displayed in any operating mode. The chlorine membrane electrolysis system remains operational. The warning message is turned off again once you have confirmed that annual maintenance has been carried out by pressing the "Maintenance" button on the main "Service" menu, see chapter 5.12.4. See the chapter 6. Maintenance for details on carrying out annual maintenance.

5.9.4 Storage tank empty

Main screen

MAIN SCREEN

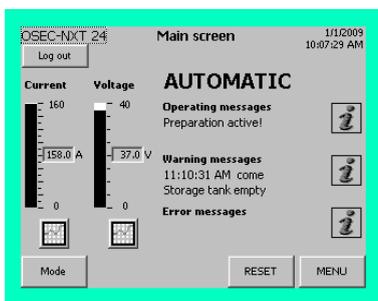

Once the fill level in the storage tank reaches the "Storage tank empty" level, the warning message "Storage tank empty" is displayed.

This may be because of:

- Automatic preparation is switched off, but sodium hypochlorite is being drawn by the system nevertheless.
- The unit is operating in automatic mode and more sodium hypochlorite is being drawn by the system than the unit can produce.


Proceed as follows:

- 1 Check the display to see whether "Automatic" mode is on.
- 2 Perform a visual inspection of the chlorine membrane electrolysis system and the sodium hypochlorite tank to check for leaks and damage.

5.9.5 Operating water pressure too low

Main screen

MAIN SCREEN

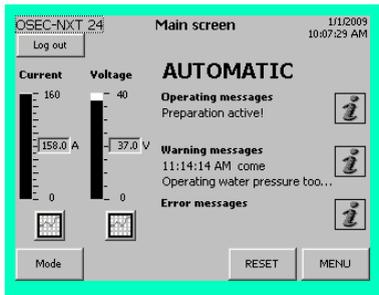

If the actual operating water pressure drops below the setpoint (see the information label on the chlorine membrane electrolysis system) the warning "Operating water pressure too low" is displayed.

This may be because of:

- Operating water pressure setting incorrect.
- Local admission pressure too low or zero.
- Operating water pressure reducing valve filter (M3) contaminated
- Operating water pressure reducing valve filter (M3) faulty


Proceed as follows:

- 1 Check operating water pressure and, if necessary, adjust it to match the specifications displayed on the system by the operating water pressure reducing valve (M3).
- 2 Check the local admission pressure and adjust if necessary.
- 3 Clean the operating water pressure reducing valve filter (M3) For further details see chapter 5.13.6 Checking and cleaning the filter.

5.9.6 Operating water pressure too high

Main screen

MAIN SCREEN

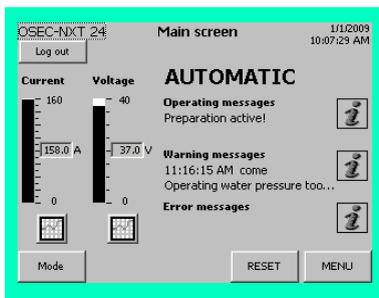

If the actual operating water pressure exceeds the setpoint (see the information label on the chlorine membrane electrolysis system) the warning "Operating water pressure too high" is displayed.

This may be because of:

- Operating water pressure setting incorrect.
- Local admission pressure too high.
- Operating water pressure reducing valve filter (M3) contaminated
- Operating water pressure reducing valve filter (M3) faulty


Proceed as follows:

- 1 Check operating water pressure and, if necessary, adjust it to match the specifications displayed on the system by the operating water pressure reducing valve (M3).
- 2 Check the local admission pressure and adjust if necessary.
- 3 Clean the operating water pressure reducing valve filter (M3) For further details see chapter 5.13.6 Checking and cleaning the filter.

5.9.7 Electrolysis water check flow rate

Main screen

MAIN SCREEN

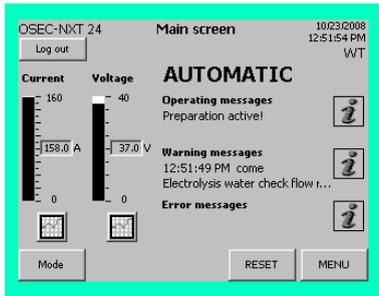

If the actual electrolysis water flow rate differs from the setpoint (see the sign on the chlorine membrane electrolysis system), the warning "Electrolysis water check flow rate" is displayed.

This may be because of:

- Flow rate setting incorrect.
- Electrolysis water pressure setting incorrect.
- Operating water pressure setting incorrect
- Local admission pressure incorrect
- Operating water pressure reducing valve filter (M3) contaminated


Proceed as follows:

- 1 Check the electrolysis water flow rate and adjust it to match the specifications displayed on the system by the electrolysis water dosing ball valve (M7).
- 2 Check the pressures and, if necessary, adjust them to match the specifications displayed on the system by the operating pressure reducing valve (M3) and the electrolysis water pressure reducing valve (M4).
- 3 Check the local admission pressure and adjust if necessary.
- 4 Clean the operating water pressure reducing valve filter (M3) For further details see chapter 5.13.6 Checking and cleaning the filter.

5.9.8 Cooling water check flow rate

Main screen

MAIN SCREEN

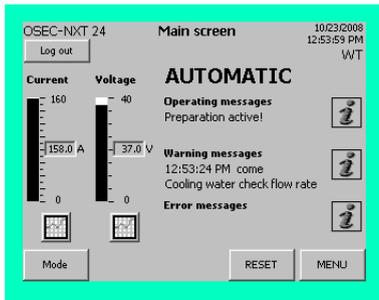

If the actual cooling water flow rate differs from the setpoint (see the sign on the chlorine membrane electrolysis system), the warning "Cooling water check flow rate" is displayed.

This may be because of:

- Flow rate setting incorrect.
- Operating water pressure setting incorrect
- Local admission pressure incorrect
- Operating water pressure reducing valve filter (M3) contaminated


Proceed as follows:

- 1 Check the cooling water flow rate and adjust it to match the specifications displayed on the system by the cooling water membrane valve (M6).
- 2 Check operating water pressure and, if necessary, adjust it to match the specifications displayed on the system by the operating water pressure reducing valve (M3).
- 3 Check the local admission pressure and adjust if necessary.
- 4 Clean the operating water pressure reducing valve filter (M3) For further details see chapter 5.13.6 Checking and cleaning the filter.

5.9.9 Water softener check brine flow rate

Main screen

MAIN SCREEN

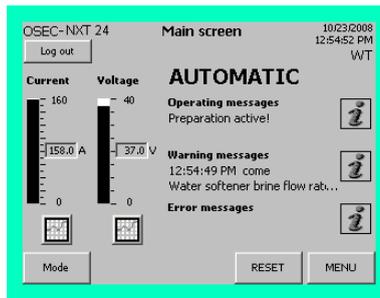

If the actual brine flow rate in the water softener differs from the setpoint the warning "Water softener check brine flow" is displayed.

This may be because of:

- Operating water pressure too low
- No brine/salt dissolving tank empty
- Brine inlet faulty
- Water softener drain dirty or back-pressure
- Injector faulty


Proceed as follows:

- 1 Check operating water pressure and, if necessary, adjust it to match the specifications displayed on the system by the operating water pressure reducing valve (M3).
- 2 Check the fill level of the brine in the salt dissolving tank.
- 3 Perform a visual inspection of the brine supply pipes for leaks.
- 4 Check water softener drain.
- 5 Check the injector.

5.9.10 Power off for less than 4 hours

Main screen

MAIN SCREEN

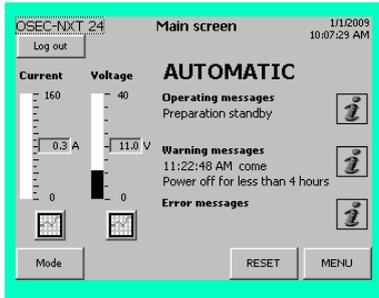

If there is a short power failure (< 4 h) the warning "Power off for less than 4 hours" is displayed for 10 seconds.


Once the power is restored the chlorine membrane electrolysis system can continue operating normally in automatic mode.

You can check how often this warning message has been displayed, together with details of the date, time stamp and state, at any time by pressing the "i" (Info) button.

5.9.11 Power off for more than 4 hours

Main screen

MAIN SCREEN

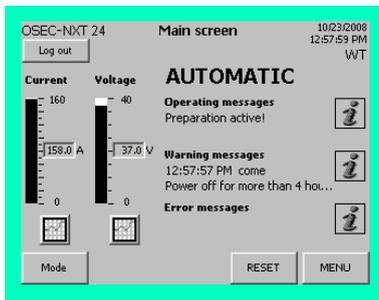

If there is a power failure lasting more than 4 hours, the warning "Power off for more than 4 hours" is displayed for 10 seconds.

Once the power supply is restored after a power failure lasting more than four hours, deactivate automatic mode immediately by pressing the "Mode" button.



Attention!

Damage to the electrolysis cell(s)!

If there is a power failure lasting more than four hours the electrolysis cells may be permanently damaged due to the loss of the protection potential. If this occurs, please contact Evoqua customer service immediately.




Please note

If you know that the power supply is going to be interrupted for four hours or more, the chlorine membrane electrolysis system must be shut down by trained and authorized personnel or by Evoqua service personnel.

5.9.12 Unstable mains voltage/mains failure

Main screen

MAIN SCREEN

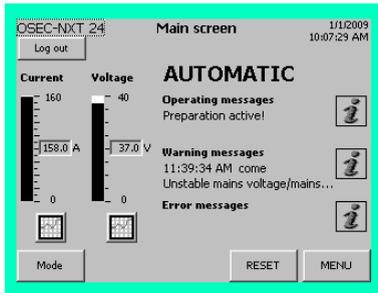

If the power supply fails (see chapter Installation, 4.5.1 Checking the power supply), the warning "Unstable mains voltage/mains failure" is displayed.

This may be because of:

- The mains voltage is outside the tolerances (over/undervoltage)
- Phase failure
- Phase sequence incorrect


Proceed as follows:

- 1 Have the power supply required connected by an authorized and qualified electrical technician.

5.9.13 Ambient temperature too high

Main screen

MAIN SCREEN

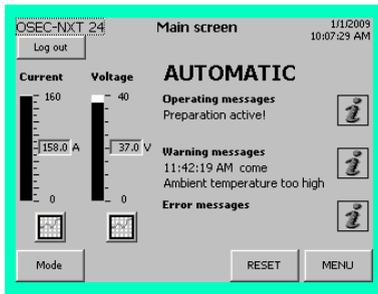

If the actual ambient temperature exceeds the set limit the warning "Ambient temperature too high" is displayed.

This may be because of:

- No fresh air supply
- External source of heat

Proceed as follows:

- 1 Ensure there is a supply of fresh air.
- 2 Measure the ambient temperature and cool the air in the room if necessary.



Please note

For further details see chapter Installation, 4.3.1 Installation room.


5.10 Error messages



If the system develops a fault, a corresponding error message is displayed, irrespective of the current operating state or what else is currently being displayed by the system. Every error message has to be acknowledged individually by pressing the  button. Once the last error message has been acknowledged the display returns to the last menu that was displayed and the  symbol is displayed.

Main screen

MAIN SCREEN

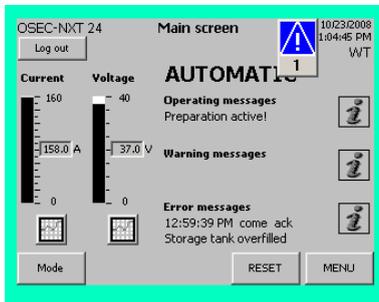

The last error message reported by the system is displayed as a text message on the main screen, together with the time stamp and the "i" (Info) button flashes.

Depending on the nature of the fault, the chlorine membrane electrolysis system then switches to one of the following states:

- "Preparation off"
Automatic mode is off
- "Preparation standby"
Automatic mode is on

or

- it remains in the current operating state. The current automatic process is not interrupted.

The text message, the symbol  and the flashing "i" (Info) button all cease to be displayed once the fault has been cleared and the "RESET" button has been pressed.

Main screen

"i" (info) Error messages

ERROR MESSAGES



The "i" (Info) button allows you to view the error messages that have been displayed by the system, including the date, time and status details ("come", "ack" and "gone"), at any time.

The arrow keys are used to navigate around the display.

Press the "LOG" button to open the "Error message log".

Main screen


MENU

Menu selection

Diagnostics

Error message log

ERROR MESSAGE LOG

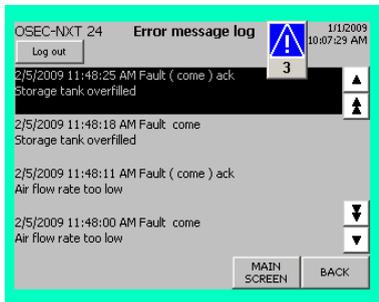


All of the error messages are stored in the "Error message log" together with the date, time and status details ("come" and "gone") and can be viewed at any time. See chapter 5.12.3 Error message log for details.

*Please note*

Chapter 5.14 Faults lists all of the error messages individually, along with their effects, possible causes and troubleshooting tips.

5.11 Reading the cell voltage and electrolysis current

Main screen

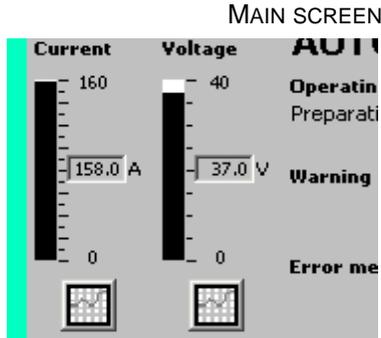


The current cell voltage and electrolysis current can be seen on the main screen at all times. They are displayed both as a bar and as a number to the right of the bar.

If the system is in the "Preparation off" or "Preparation standby" state, the protection potential is displayed. The protection potential depends on the number of cells and can be set according to the following table. Set the current to the value indicated, with a maximum of approx. 0.5 A.

	OSEC-NXT 12	OSEC-NXT 24	OSEC-NXT 36	OSEC-NXT 48	OSEC-NXT 60
Protective voltage	approx. 6 V	approx. 12 V	approx. 18 V	approx. 24 V	approx. 30 V


Main screen
Current button

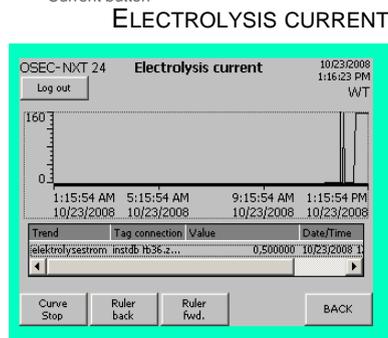

The two buttons below the bar can be used to display the course of the electrolysis current and the cell voltage over the past 12 hours for diagnostic purposes.

The ruler can be used to select any specific time in this period. The value at that point in time is then displayed as a text message, together with its time stamp. To move the ruler, press the "Ruler fwd." and "Ruler back" buttons or drag the ruler in either direction.

Main screen
Voltage button

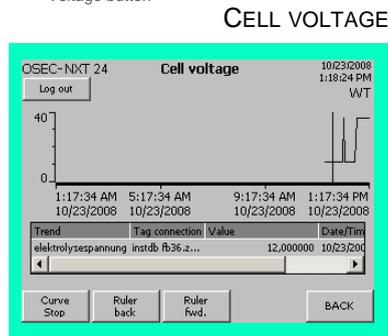


CELL VOLTAGE

5.12 Menus

5.12.1 Menu selection

Main screen
MENU

MENU SELECTION

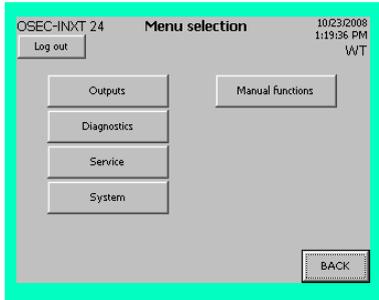

Pressing the "MENU" button on the basic display opens the "Menu selection" screen. You can select from a total of five menus:

- Outputs
- Diagnostics
- Service
- System
- Manual functions

All of the menus are accessible to all user groups to display the operating parameters and settings and do not require a user name or password, irrespective of the current operating state of the chlorine membrane electrolysis system.




Please note

The "Manual functions" button is only displayed on the "Menu selection" screen when the system is in "MANUAL" mode. It is not displayed when the system is in Automatic mode.

5.12.2 "Outputs" menu

Main screen
MENU
Menu selection
Outputs

OUTPUTS

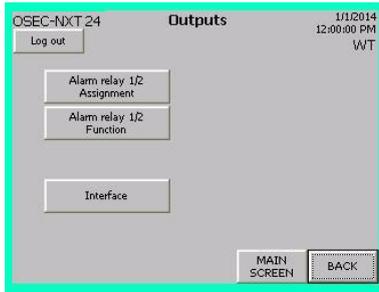

The control system provides two potential-free alarm relays for operating messages, warning messages or error messages as well as interfaces to the bus systems Evoqua RS485 bus and PROFIBUS DP.

In the "Outputs" menu you can assign various messages to the alarm relays and the interfaces to certain addresses.


The "Outputs" menu has the following submenus:

- Alarm relay 1/2 Assignment
- Alarm relay 1/2 Function
- Interface

The "Alarm relay 1/2 Assingment" submenu consists of several screens. Press the "FWD" button to move to the next screen, and "BACK" to go back to the previous screen.

Main screen
MENU
Menu selection
Outputs

Alarm relay 1/2 Assignment
RELAY ASSIGNMENT

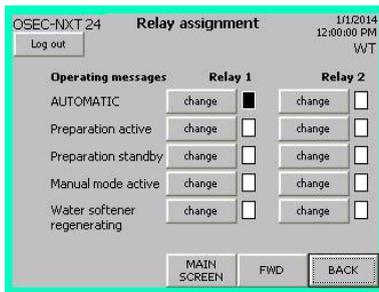

Proceed as follows:


- 1 Move to the "Relay assignment" screen.
- 2 If you wish to assign a message, select the required message from the sources mentioned and press the "change" button for relay 1. You will be asked to enter a user name and password. For details, see chapter 5.2.2 Logging in.

The corresponding status indicator changes from white to black.

- 3 Same procedure for relay 2


Main screen
MENU
Menu selection
Outputs

Alarm relay 1/2 Assignment
FWD
RELAY ASSIGNMENT

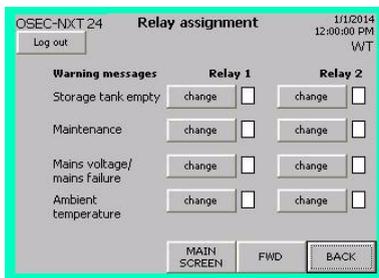


- Selection warning messages

Main screen
 MENU
 Menu selection
 Outputs
 Alarm relay 1/2 Assignment
 FWD
RELAY ASSIGNMENT

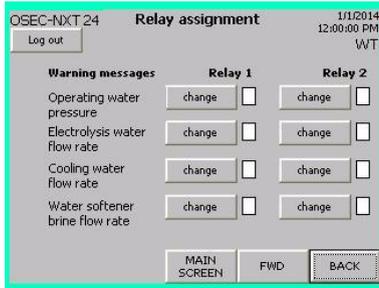


- Selection warning messages

Main screen
 MENU
 Menu selection
 Outputs
 Alarm relay 1/2 Assignment
 FWD
RELAY ASSIGNMENT

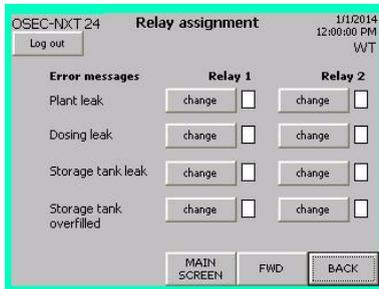


- Selection error messages

Main screen
 MENU
 Menu selection
 Outputs
 Alarm relay 1/2 Assignment
 FWD
RELAY ASSIGNMENT

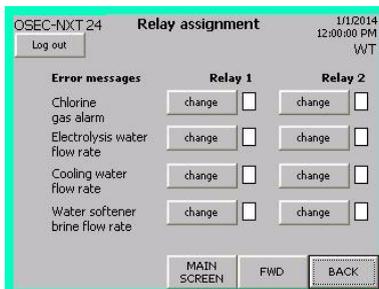


- Selection error messages

Main screen
 MENU
 Menu selection
 Outputs
 Alarm relay 1/2 Assignment
 FWD
RELAY ASSIGNMENT

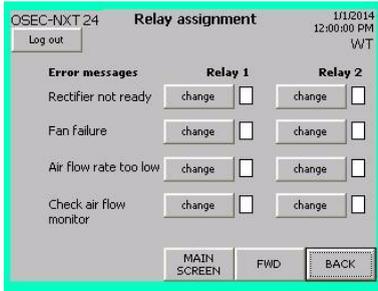


- Selection error messages

Main screen
 MENU
 Menu selection
 Outputs
 Alarm relay 1/2 Assignment
 FWD
RELAY ASSIGNMENT

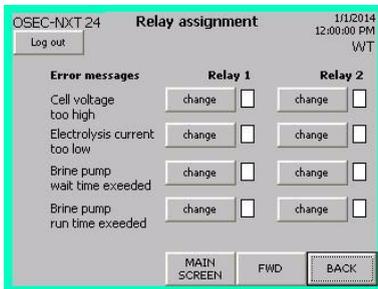

- Selection error messages

Main screen
 MENU
 Menu selection
 Outputs
 Alarm relay 1/2 Assignment
 FWD
RELAY ASSIGNMENT

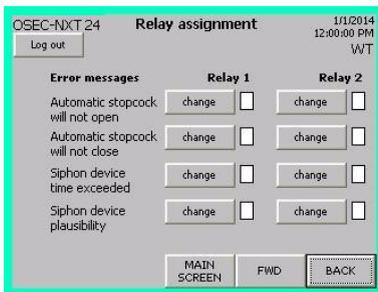

- Selection error messages

Main screen
MENU
Menu selection
Outputs
Alarm relay 1/2 Assignment
FWD
RELAY ASSIGNMENT

OSEC-NXT 24 Relay assignment 1/1/2014
Log out 12:00:00 PM
WT

Error messages	Relay 1	Relay 2
Storage tank plausibility	change <input type="checkbox"/>	change <input type="checkbox"/>
Electrolysis water plausibility	change <input type="checkbox"/>	change <input type="checkbox"/>
Cooling water plausibility	change <input type="checkbox"/>	change <input type="checkbox"/>
Water softener plausibility	change <input type="checkbox"/>	change <input type="checkbox"/>

MAIN SCREEN FWD BACK

- Selection error messages

Main screen
MENU
Menu selection
Outputs
Alarm relay 1/2 Assignment
FWD
RELAY ASSIGNMENT

OSEC-NXT 24 Relay assignment 1/1/2014
Log out 12:00:00 PM
WT

Error messages	Relay 1	Relay 2
Salt dissolving tank filling time	change <input type="checkbox"/>	change <input type="checkbox"/>
EMERGENCY-STOP	change <input type="checkbox"/>	change <input type="checkbox"/>

SMS Relay 1
SMS change

MAIN SCREEN BACK

- Selection error messages
- Selection SMS



Please note


The "EMERGENCY STOP" function causes the chlorine membrane electrolysis system to stop immediately in the event of a hazardous situation.



Please note

The SMS option is optional and requires the SMS and Teleservice kit.

Main screen
 MENU
 Menu selection
 Outputs
 Alarm relay 1/2 Function
RELAY FUNCTION

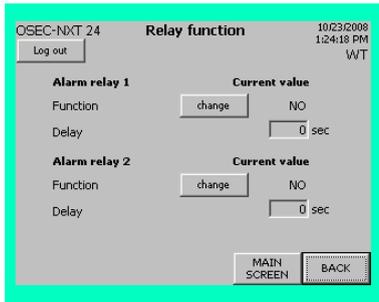


Both of the alarm relays, 1 and 2, require an NC (normally closed) or NO (normally open) switching function. If a time delay is needed before the switching function is triggered, you can also specify a delay of between 0 and 3600 seconds.

Proceed as follows:

- 1 Switch to the "Relay function" screen. The default factory setting for Alarm relay 1 is the NO switching function, and NC for Alarm relay 2. The default delay time for both alarm relays is 0 seconds.
- 2 The default settings can be changed if necessary. You will be asked to enter a user name and password. For details, see chapter 5.2.2 Logging in.

Main screen
 MENU
 Menu selection
 Outputs
 Interface
INTERFACE

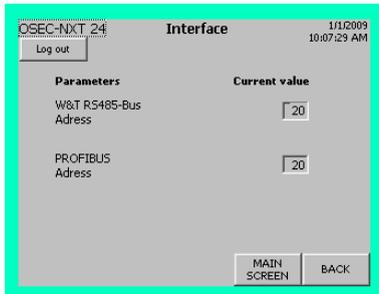


Proceed as follows:

- 1 Switch to the "Interface" screen. The factory setting for the bus addresses is 20.
- 2 The default settings can be changed if necessary. You will be asked to enter a user name and password. For details, see chapter 5.2.2 Logging in.

5.12.3 "Diagnostics" menu

Main screen
MENU
Menu selection
Diagnostics

DIAGNOSTICS

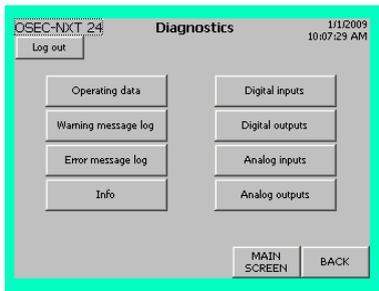


In the "Diagnostics" menu, all of the operating parameters and settings can be viewed without needing to enter a user name or password.

The "Diagnostics" menu has the following submenus:

- Operating data
- Warning message log
- Error message log
- Info
- Digital inputs
- Digital outputs
- Analog inputs
- Analog outputs

Main screen
MENU
Menu selection
Diagnostics
Operating data

OPERATING DATA

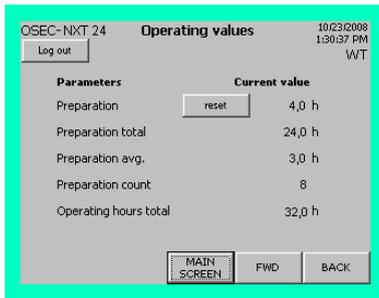

The "Operating data" submenu consists of several screens. Press the "FWD" button to move to the next screen, and "BACK" to go back to the previous screen.


The first screen shows the current number of hours the system has been operating and preparing sodium hypochlorite for (the system uptime):

- Preparation
The so called "Day uptime counter". Gives the number of hours the system has actually been preparing sodium hypochlorite since it was last reset. To reset the system you will need to enter a user name and password. For details, see chapter 5.2.2 Logging in.
- Preparation total
Gives the number of hours the system has actually been preparing sodium hypochlorite since it was last switched on.
- Preparation avg.
Gives the average length of a preparation count (in the "Preparation active!" operating state).
- Preparation count
Gives the number of preparation counts (in the "Preparation active!" state) since the system was last switched on.
- Operating hours total
Gives the total number of hours the system has been on since it was last switched on.



Please note


The preparation and total operating hours should be entered in the operating journal.

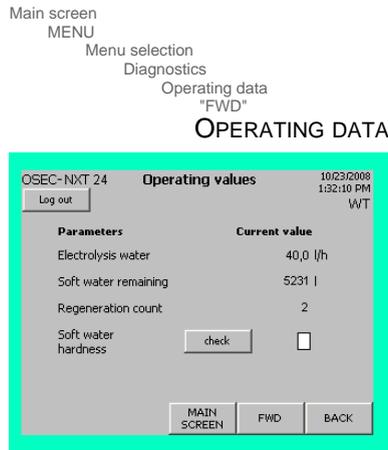

- **Electrolysis water**
Current electrolysis water flow rate. The specific flow rate that is required is system-specific. See the information label on the chlorine membrane electrolysis system.
- **Soft water remaining**
Shows the remaining amount of soft water available in the system.
- **Regeneration count**
Gives the number of regeneration counts that have been completed (how often the status message "Water softener regenerating" has been displayed) since the system was switched on.
- **Soft water hardness**
As part of the weekly maintenance, the hardness of the electrolysis water needs to be checked. Pressing the "check" button opens the inlet water solenoid valve for the softening process (E5) for 300 s. You can then take a sample of soft water to check using the water hardness test kit. For details on this, see chapter 5.13.3 Measuring the soft water hardness.

While the valve is open the status indicator is black.

You will be asked to enter a user name and password. For details, see chapter 5.2.2 Logging in.

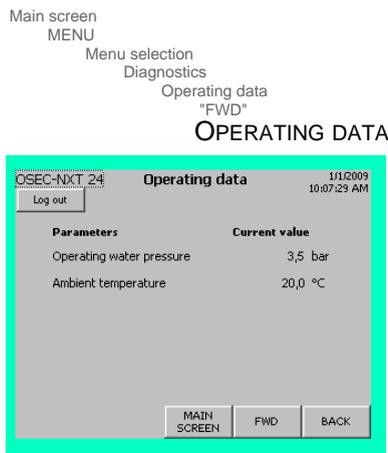

- **Current operating water pressure**
- **Current ambient temperature**

Main screen

MENU


Menu selection

Diagnostics

Operating data

"FWD"

OPERATING DATA

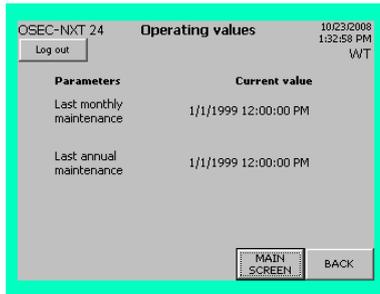

- Date of last monthly maintenance
- Date of last annual maintenance

Main screen


MENU

Menu selection

Diagnostics

Warning message log

WARNING MESSAGE LOG

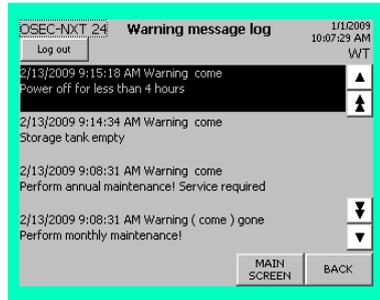


All of the warnings are stored in the "Warning message log" and can be viewed at any time, irrespective of the current operating state.

The display is structured as follows:

- Date of the warning message
- Time of the warning message
- Status of the warning message There are two different statuses:
 - come
 - gone
- Warning message text

The arrow keys are used to navigate around the display. Press "BACK" or "MAIN SCREEN" to exit the warning message log again.

Main screen
 MENU
 Menu selection
 Diagnostics
 Error message log
ERROR MESSAGE LOG

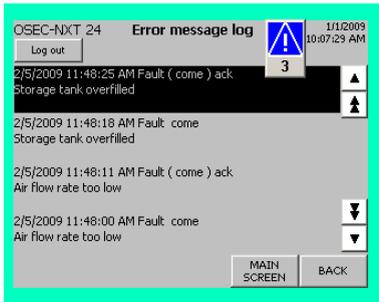


All of the errors are stored in the "Error message archive" and can be viewed at any time, irrespective of the current operating state.

The display is structured as follows:

- Date of the error message
- Time of the error message
- Status of the error message There are three different statuses:
 - come
 - ack
 - gone
- Error message text

The arrow keys are used to navigate around the display. Press "BACK" or "MAIN SCREEN" to exit the error message log again.

Main screen
 MENU
 Menu selection
 Diagnostics
 Info
INFO

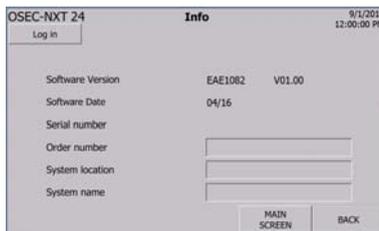

In the "Info" menu you can view the software version, its date and the chlorine membrane electrolysis system's serial number.

The operator can also enter other information about the chlorine membrane electrolysis system here. You will be asked to enter a user name and password. For details, see chapter 5.2.2 Logging in.

Proceed as follows:

- 1 Touch the input box you want to access and keyboard will be displayed.
- 2 Enter the number or name and confirm by pressing Enter.

Main screen


MENU

Menu selection

Diagnostics

Digital inputs

DIGITAL INPUTS

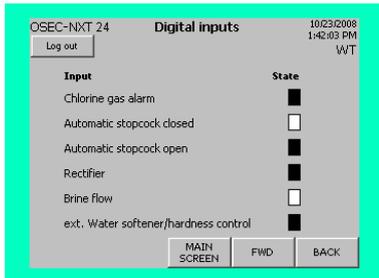

In the "Digital inputs" menu you can view the current status of the digital inputs for diagnostic purposes.

A white signal status box means that the potential on the digital input is zero, a black signal status box means that the potential on the digital input is not zero.

The "Digital inputs" submenu consists of several screens. Press the "FWD" button to move to the next screen, and "BACK" to go back to the previous screen.

Main screen

MENU


Menu selection

Diagnostics

Digital inputs

"FWD"

DIGITAL INPUTS

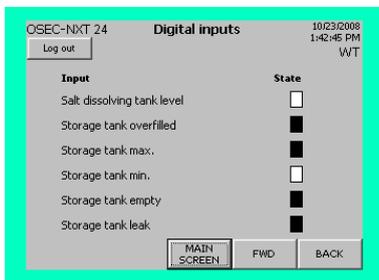

Main screen

MENU


Menu selection

Diagnostics

Digital inputs

"FWD"

DIGITAL INPUTS

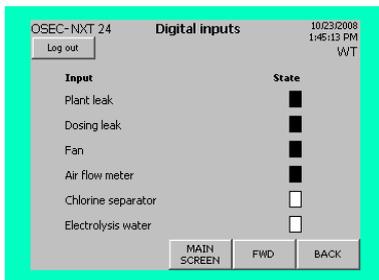

Main screen

MENU


Menu selection

Diagnostics


Digital inputs

"FWD"

DIGITAL INPUTS

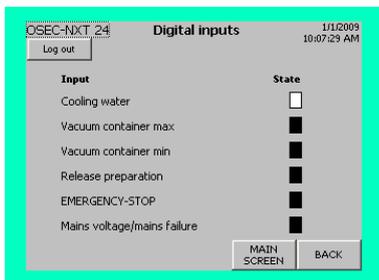

Main screen
MENU
Menu selection
Diagnostics
Digital outputs
DIGITAL OUTPUTS

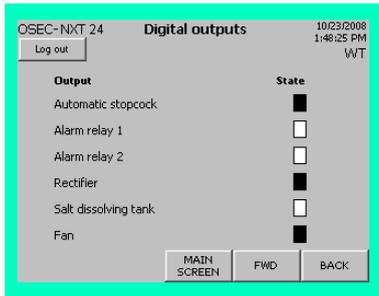


In the "Digital outputs" menu you can view the current status of the digital outputs for diagnostic purposes.


A white signal status box means that the digital output is set to zero, a black signal status box means that the potential on the digital output is set to one.

The "Digital outputs" submenu consists of several screens. Press the "FWD" button to move to the next screen, and "BACK" to go back to the previous screen.

Main screen
MENU
Menu selection
Diagnostics
Digital outputs
"FWD"
DIGITAL OUTPUTS

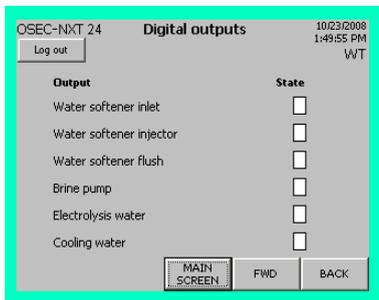

Main screen
MENU
Menu selection
Diagnostics
Digital outputs
"FWD"
DIGITAL OUTPUTS

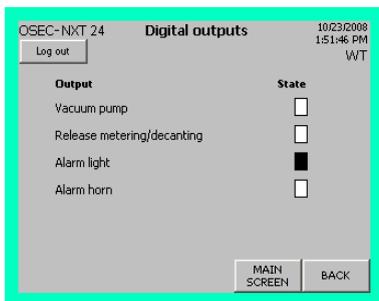

Main screen

MENU

Menu selection

Diagnostics

Analog inputs

ANALOG INPUTS

Input	State	Current value
Cell voltage	8368	3,0 V
Electrolysis current	336	0,1 V
Operating water pressure	12501	4,0 mA
Ambient temperature	1562	96,0 Ω

In the "Analog inputs" menu service personnel can view the current values and states of the analog inputs for the cell voltage and the electrolysis current, the operating water pressure and the ambient temperature for diagnostic purposes.

The current cell voltage and electrolysis current values are always between 0 - 10 volts, and between 4 - 20 mA for the operating water pressure. The corresponding processing state displayed is between 0 and 27648.

The current value for the ambient temperature is always between 96 and 131 Ohm. The corresponding digital state is between -328 and 1562.

Main screen

MENU

Menu selection

Diagnostics

Analog outputs

ANALOG OUTPUTS

Output	State	Current value
Cell voltage	8368	3,0 V
Electrolysis current	336	0,1 V


In the "Analog outputs" menu service personnel can view the current values and states of the analog outputs for the cell voltage and the electrolysis current for diagnostic purposes.

The current cell voltage and electrolysis current values are always between 0 - 10 volts. The corresponding digital state is between 0 and 32767.

5.12.4 "Service" menu

Main screen
MENU
Menu selection
Service

SERVICE

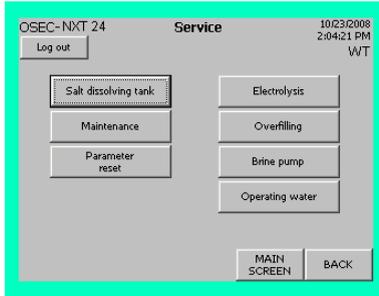

The "Service" menu is primarily intended for use by service personnel (password level 3). All of the settings and operating parameters can, however, be read by all users, in any user group, without requiring the user to log in. From password level 2, the user can enter or change certain system settings.

The "Service" menu has the following submenus:

- Salt dissolving tank
- Maintenance
- Parameter reset
- Electrolysis
- Overfilling
- Brine pump
- Operating water

Main screen
MENU
Menu selection
Service
Salt dissolving tank

SALT DISSOLVING TANK




The "Salt dissolving tank" menu is used to enter limits for the max. filling time and run-out time for the salt dissolving tank. If the values entered here are exceeded an error message is generated.

You will be asked to enter a user name and password. For details, see chapter 5.2.2 Logging in.

Main screen
MENU
Menu selection
Service
Maintenance

SERVICE

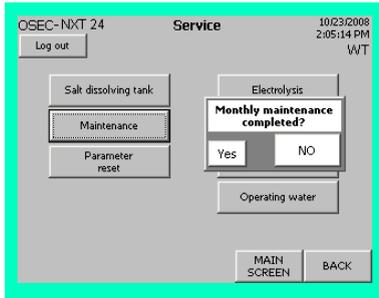

Regular service of the chlorine membrane electrolysis system is part of the liability for defects. There are certain tasks that the operator is required to perform on a daily, weekly or monthly basis. Once a year, annual maintenance must be carried out by Evoqua service personnel or by personnel trained and authorized by Evoqua for maintenance work. When monthly or annual maintenance is due a warning message is displayed on the main screen.

To confirm that maintenance has been carried out, press the "Maintenance" button. You will be asked to enter a user name and password. For details, see chapter 5.2.2 Logging in.


Depending on the password level entered, it is also possible to confirm completion of monthly maintenance (by the operator) or annual maintenance (by the service personnel).

Proceed as follows:

- 1 Press the "Maintenance" button. Depending on the password level, either the "Monthly maintenance completed?" or the "Annual maintenance completed?" dialog box will open.
- 2 If you have completed maintenance, press "Yes". The warning message in the main screen will then disappear and the time stamp is reset (see also the section on the "Maintenance" diagnostics menu).

The display switches to the "Parameter reset" menu.

Main screen
MENU
Menu selection
Service
Parameter reset

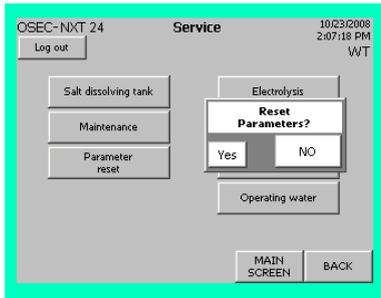


To reset the system to the factory default settings press the "Parameters" button. You will be asked to enter a user name and password. For details, see chapter 5.2.2 Logging in.

Proceed as follows:

- 1 Press the "Parameter reset" button. This opens the "Reset Parameters?" screen.
- 2 To confirm that you wish to change the parameters, press "Yes".

The display then reverts to the "Service" menu.

Main screen
MENU
Menu selection
Service
Electrolysis

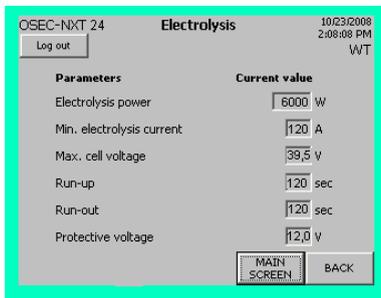

The "Electrolysis" menu is used to set all of the key parameters for the electrolysis process. These settings are configured at the factory and are system-specific. They are therefore password protected and only accessible to level 3 service personnel.



Attention!

Risk of injury and damage to the system!

These settings may only be changed by Evoqua service personnel or by personnel trained and authorized by Evoqua after consulting the manufacturer.

Main screen
MENU
Menu selection
Service
Brine pump

BRINE PUMP

OSEC-NXT 24 Brine pump 10/23/2008
2:23:37 PM WT
Log out

Parameters	Current value
Max. run time	900 sec
Max. wait time	900 sec
Run-out	2 sec

MAIN SCREEN BACK

The "Brine pump" menu is used to configure the brine pump. These settings are configured at the factory and are system-specific. They are therefore password protected and only accessible to level 3 service personnel.

Main screen
MENU
Menu selection
Service
Operating water

OPERATING WATER

OSEC-NXT 24 Operating water 10/23/2008
2:27:49 PM WT
Log out

Parameters	Current value
Operating water hardness	30.0 °dH
Electrolysis water	0.0 l/h

calibrate MAIN SCREEN BACK

The "Operating water" menu is used to enter the total operating water hardness (factory default 30° dH) and to calibrate the flow meter for the electrolysis water, if necessary. You will be asked to enter a user name and password. For details, see chapter 5.2.2 Logging in.

As part of the monthly maintenance it is necessary to check the water hardness of the operating water being supplied to the system and to enter the value, which should be between 1 and 66° dH, in this menu. See chapter 5.13.4 Measuring the operating water hardness for details on measuring the operating water hardness.

Main screen
MENU
Menu selection
Service
Operating water
calibrate

CALIBRATION

OSEC-NXT 24 Calibration 10/23/2008
2:28:41 PM WT
Log out

Calibration	Current value
Electrolysis water	0.0 l/h


MAIN SCREEN BACK

As part of the monthly maintenance it is necessary to check the electrolysis water flow meter measurements and, if necessary, recalibrate it in the "Calibration" menu. See chapter 5.13.5 Calibrating the electrolysis water flow meter for details on calibrating the electrolysis water flow meter.

5.12.5 "System" menu

Main screen
MENU
Menu selection
System

SYSTEM

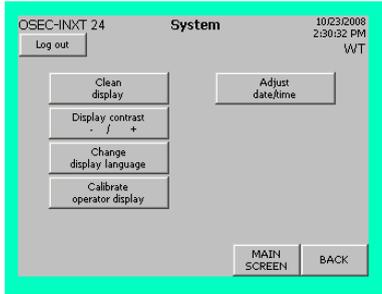


In the "System" menu you can configure the control and display unit.

The "System" menu has the following submenus:

- Clean display
- Display contrast - / +
- Change display language
- Calibrate operator display
- Adjust date/time

Main screen
MENU
Menu selection
System
Clean display

SYSTEM

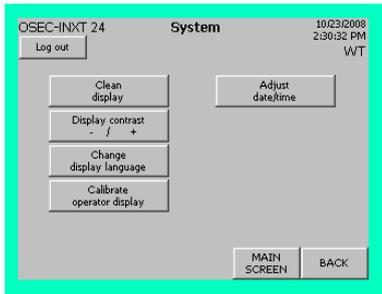


Proceed as follows:

- 1 Press the "Clean display" button. A protective screen is displayed. Cleaning the display takes 30 seconds. The control and display unit cannot be used while cleaning is taking place.
- 2 Once cleaning is complete the display reverts to the "System" menu.


Main screen
MENU
Menu selection
System
Display contrast - / +

SYSTEM

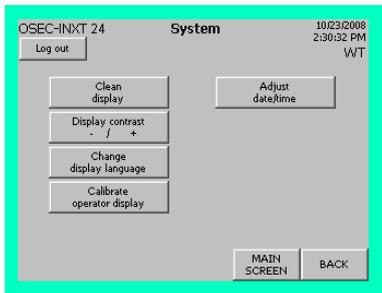

Proceed as follows:

- 1 To decrease or increase the display contrast as necessary, press the corresponding part of the "Display contrast - / +" button.

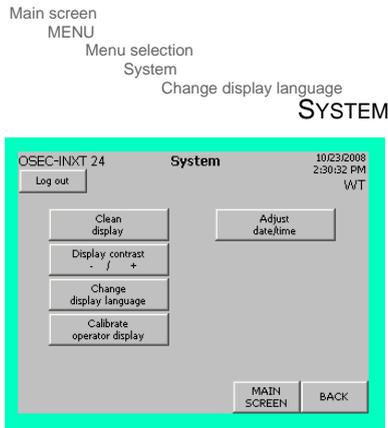

The factory default setting is German. If necessary, the language can be changed. The languages available are:

- German
- English
- French


Proceed as follows:

- 1 Press the "Change display language" button. The language selection dialog box is displayed for 10 seconds.
- 2 Press the language you wish to select. The display then reverts to the main screen.



Please note


The operator display is optimized for an operator of average height. This setting should only be changed if there is a significant difference, for example, if the chlorine membrane electrolysis system is installed at an unusual height.

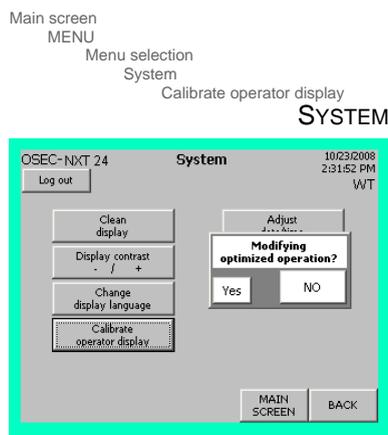

You will be asked to enter a user name and password. For details, see chapter 5.2.2 Logging in.

Proceed as follows:

- 1 Press the "Calibrate operator display" button. The "Modifying optimized operation?" dialog box opens.
- 2 To confirm that you wish to change the settings, press "Yes".

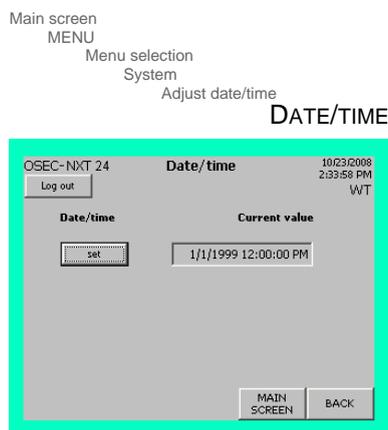

You will be asked to enter a user name and password. For details, see chapter 5.2.2 Logging in.

Proceed as follows:


- 1 Press the „Adjust date/time“ button.
- 2 Enter the correct date and time in the input box in the "Date/time" menu using the keyboard displayed.
- 3 Press the "Set" button to confirm. The time displayed on screen is updated immediately.

5.12.6 "Manual functions" menu



Please note

The "Manual functions" button is only displayed on the "Menu selection" screen when the system is in "MANUAL" mode. It is not displayed when the system is in Automatic mode.

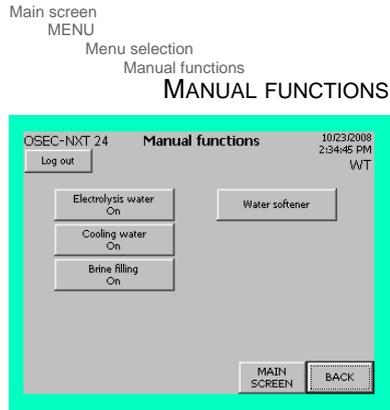

The "Manual functions" menu has the following submenus:


- Electrolysis water On
- Cooling water On
- Brine filling On
- Water softener

The manual functions are only active in MANUAL mode when the system is in the "Preparation off" state. They can be used to enable the required function temporarily.

The manual functions are password protected. You will be asked to enter a user name and password. For details, see chapter 5.2.2 Logging in.

If a manual function is active the status message "Manual mode active" is displayed in the main screen and the "i" (Info) button flashes. Which manual functions is currently active can be displayed in the operating messages menu by pressing the "i" (Info) button.

Main screen
MENU
Menu selection
Manual functions
Electrolysis water On
MANUAL FUNCTIONS

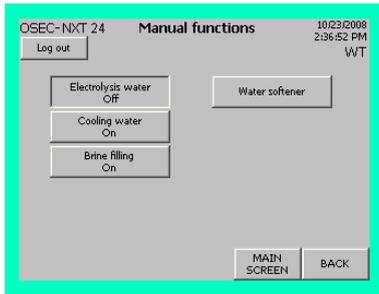

Electrolysis water can be turned on manually either for diagnostic purposes or when performing maintenance, for instance to set the flow rate or to calibrate the electrolysis water flow meter.

Proceed as follows:

- 1 Press the "Electrolysis water On" button. Open the electrolysis water solenoid valve (E2) and the water softener water inlet solenoid valve (E5). The electrolysis water starts flowing.
- 2 To stop the "MANUAL Electrolysis water" function again, press the "Electrolysis water Off" button.



Attention!


Please note that the electrolysis water dilutes the sodium hydroxide in the electrolysis cell, which may interfere with the electrolysis process.



Please note

Please note that the electrolysis water flows over the electrolysis cell in the reactor and on into the storage tank, thus diluting the product.

Main screen
MENU
Menu selection
Manual functions
Cooling water On
MANUAL FUNCTIONS

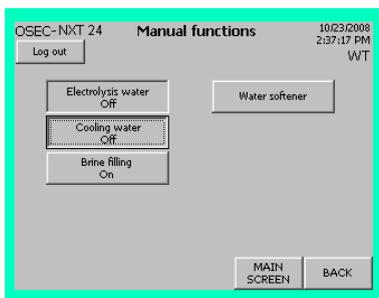


Cooling water can be turned on manually, either for diagnostic purposes or when performing maintenance, for instance to set the flow rate.

Proceed as follows:

- 1 Press the "Cooling water On" button.
- 2 The cooling water solenoid valve (E3) is opened. The cooling water is flowing.
- 3 To stop the "MANUAL Cooling water" function again, press the "Cooling water Off" button.

Main screen
 MENU
 Menu selection
 Manual functions
 Brine filling On
MANUAL FUNCTIONS

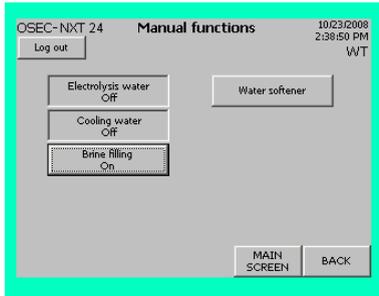

The brine pump can be turned on manually, either for diagnostic purposes or when performing maintenance.

Proceed as follows:

- 1 Press the "Brine filling On" button.
- 2 The brine pump supplies brine to the chlorine separator.
- 3 To stop the "Manual brine pump" function again, press the "Brine filling Off" button.




Please note

When the maximum fluid level is reached the brine pump is turned off automatically by the level switch in the chlorine separator.

Main screen
MENU
Menu selection
Manual functions
Water softener
Regenerating the water softener

MANUAL WATER SOFTENING

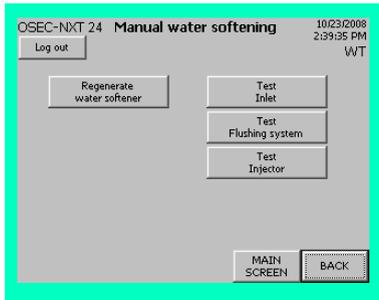

Automatic regeneration of the water softener is usage-based and depends on the water hardness. Regeneration of the water softener can also be started manually.

This menu also contains a number of options which the service personnel can use to test the water softener.

The "Manual water softening" menu has the following submenus:

- Regenerating the water softener
- Test Inlet
- Test Flushing system
- Test Injector


Proceed as follows:

- 1 Press the "Regenerating the water softener" button. The regeneration process takes about 50 minutes.


While regeneration is running the status message "Water softener regenerating" is displayed on the main screen. Press the "i" (Info) button to show the current regeneration phase:


Main screen
"i" (info) operating messages

OPERATING MESSAGES

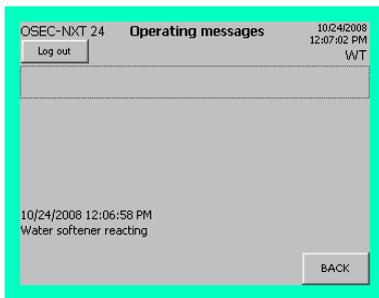


- Water softener reacting
- Water softener adding brine
- Water softener washing

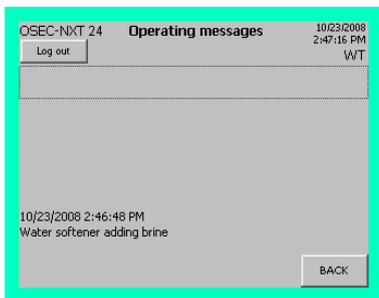

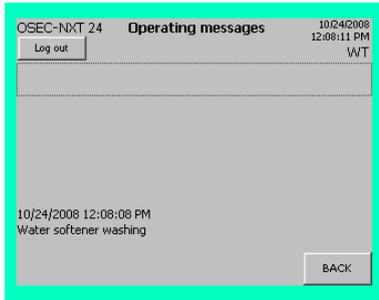

Main screen
 MENU
 Menu selection
 Manual functions
 Water softener
 Test Inlet
MANUAL WATER SOFTENING

Testing the water softener water inlet solenoid valve (E5).

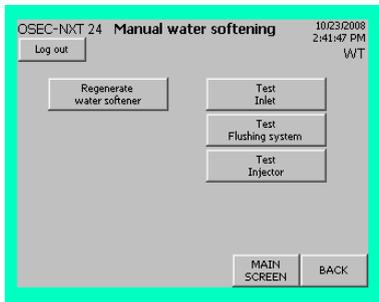


Proceed as follows:

- 1 Press and hold the "Test Inlet" button. This is a key function. If the water softener water inlet solenoid valve (E5) is working correctly it will open and the LED on the valve will switch on. The valve will close again as soon as the button is released.

Main screen
 MENU
 Menu selection
 Manual functions
 Water softener
 Test Flushing system
MANUAL WATER SOFTENING

Testing the water softener flushing solenoid valve (E8).

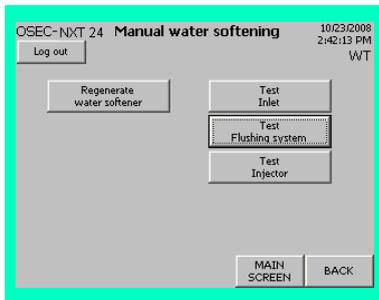

Proceed as follows:

- 1 Press and hold the "Test Flushing system" button. This is a key function. If the water softener flushing solenoid valve (E8) is working correctly it will open and the LED on the valve will switch on. The valve will close again as soon as the button is released.

Main screen

MENU


Menu selection

Manual functions

Water softener

Test Injector

MANUAL WATER SOFTENING

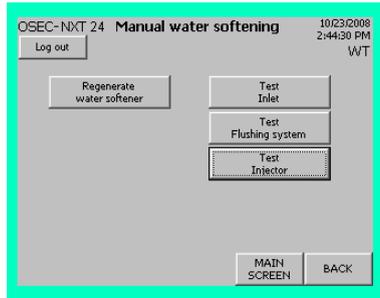

Testing the injector. This tests the:

- Water softener injector solenoid valve (E6)
- Water softener flushing solenoid valve (E8)
- Injector
- Injector limit contact

Proceed as follows:

- 1 Press and hold the "Test Injector" button. This is a key function. If the injector is working correctly, then
 - The water softener water inlet solenoid valve (E6) will open and the LED on the valve will switch on.
 - The water softener flushing solenoid valve (E8) will open and the LED on the valve will switch on.
 - Brine will be sucked in
 - Once the limit contact is reached the error message "Water softener brine flow switch plausibility" is displayed and the valves close again.

5.13 Maintenance by the operator

Maintenance is divided into two levels:

- Maintenance level 1
Performed by trained and instructed operators.
- Maintenance level 2
Performed by Evoqua service personnel or by personnel trained and authorized by Evoqua for maintenance work.

The liability for defects is only valid if maintenance work is performed as specified.



Please note

Inspections are to be carried out while the system is running!

5.13.1 Maintenance overview

daily

Required work	see chapter
<ul style="list-style-type: none"> • Visual inspection of the entire chlorine membrane electrolysis system, including salt dissolving tank, storage tank and hydrogen vent pipe, for leak-tightness and damage. • Are there any warning messages or error messages? See the warning and error message logs. • Check pressure levels on the pressure reducing valves. Adjust if necessary. <ul style="list-style-type: none"> • Electrolysis water (M4): 0.8 bar (11.6 psi) • Operating water (M3): 3.5 bar (50.8 psi) • Check the flow rates, by reading the system's indicators. Adjust if necessary. <ul style="list-style-type: none"> • Electrolysis water (M7) • Cooling water (M6) • Check that the fill level in the salt dissolving tank is at least at the 16" level and replenish if necessary. 	<p>4.7.6</p> <p>4.7.6</p> <p>4.7.7</p> <p>5.13.2</p>

weekly

Required work	see chapter
• Replenish salt in the salt dissolving tank.	5.13.2
• Check the electrolysis current and cell voltage and enter the readings in the operating journal.	5.11
• Check the preparation and total operating hours and enter in the operating journal.	5.12.3
• Measure soft water hardness and enter the value into the operating journal.	5.13.3

monthly

Required work	see chapter
• Measuring the operating water hardness	5.13.4
• Check the electrolysis water flow meter and recalibrate if necessary	5.13.5.
• Check the filter and clean if necessary.	5.13.6
• Reset "Perform monthly maintenance!" warning message	5.12.4

annual

Required work	see chapter
• Request service technician (maintenance level 2)	

*Warning!*

If you find any leaks or damage to the chlorine membrane electrolysis system, switch off automatic preparation immediately by pressing the "Mode" button and contact Evoqua customer services immediately.

*Please note*

Components and hose connections that are mechanically or electrically operated are labeled on the system with abbreviations (e.g. M3). To facilitate their identification, these abbreviations are repeated at relevant points in the operating instructions and on the drawings.

*Please note*

The operator is obliged to have the sodium hypochlorite storage tank inspected by an authorized inspection agency!

5.13.2 Replenishing the salt in the salt dissolving tank



Please note

Insufficient salt in the salt dissolving tank leads on to malfunctions on the water softener, consequently resulting in irreparable damage to the chlorine membrane electrolysis system and the electrolysis cells.

Check the fill level of the brine in the salt dissolving tank daily! For details see chapter 5.13.2 Replenishing the salt in the salt dissolving tank.



Attention!

To ensure fault-free, safe operation, use only the salt prescribed by the manufacturer (e. g. Evoqua OSEC® Salin) and completely softened water produced by the chlorine membrane electrolysis system. The minimum fill level is 16" above the top of the sieve tray.

Proceed as follows:

- 1 Lift the cover of the salt dissolving tank.
 - 2 Replenish the salt.
 - 3 Close the cover of the salt dissolving tank.
-



Attention!

Do not allow any dirt to get into the salt dissolving tank! Close the cover immediately after replenishing the salt!


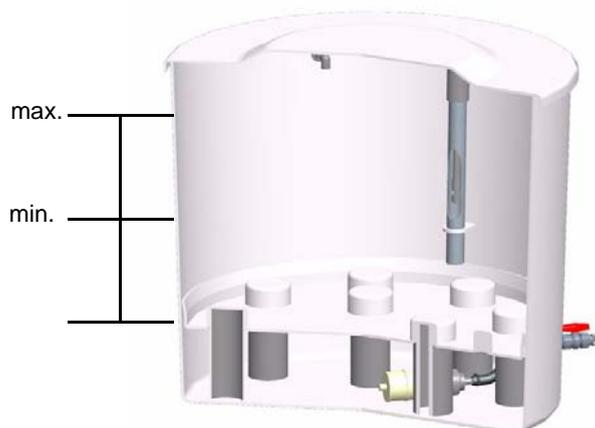


Fig. 3 Evoqua salt dissolving tank

5.13.3 Measuring the soft water hardness

As part of the weekly maintenance, the hardness of the soft water needs to be checked. Measurement is possible in every operating state.

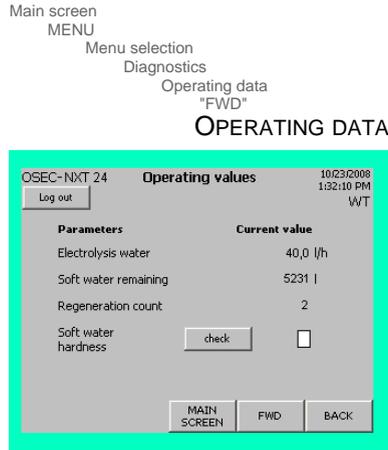

Proceed as follows:

- 1 Switch to the "Operating data" menu and press the "check" button. You will be asked to enter a user name and password. For details, see chapter 5.2.2 Logging in. The water softener water inlet solenoid valve (E5) is opened for 300 s and the status indicator changes to black.
- 2 Take a water sample from the soft water sample ball valve (M8).
- 3 Flush cuvette of the test kit provided with sample water.
- 4 Fill cuvette up to 20 ml marker with sample water.
- 5 Add one drop of the indicator. The color of the sample must remain green (0 - 0.25° dH)! If the color of the sample turns red, repeat the test. If the color of the sample is red again, contact Evoqua customer services immediately!
- 6 Check the result and enter in the operating journal.



Attention!

Damage to the system!

The soft water hardness should be < 0.25° dH. If not, contact Evoqua customer services.

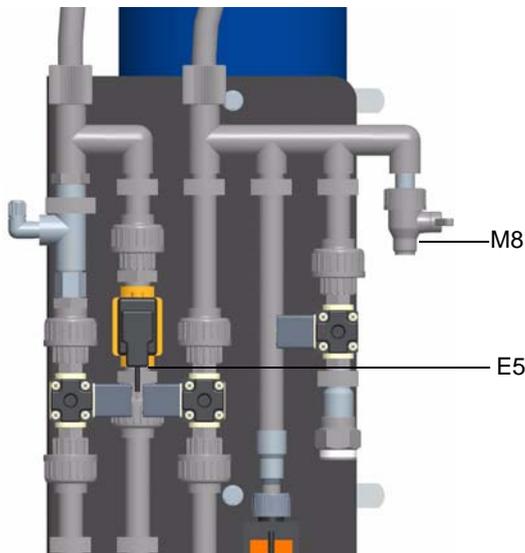


Fig. 4 Cutaway view of the water softener

5.13.4 Measuring the operating water hardness

As part of the monthly maintenance, the water hardness of the operating water supplied to the system needs to be checked and entered on the control and display unit. The operating water hardness can be measured and entered in any operating state.

Proceed as follows:

- 1 Take a water sample at the filter drain tap of the pressure reducing valve (M5).


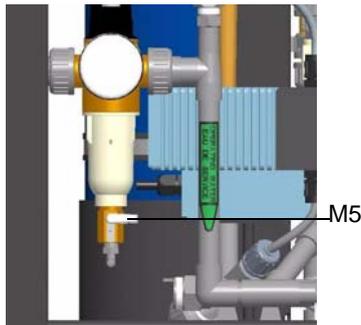



Fig. 5 Cutaway view of the pressure reducing valve showing the filter drain tap

- 2 Flush cuvette of the test kit provided with sample water.
- 3 Fill cuvette up to 5 ml marker with sample water.
- 4 Add indicator drop by drop. Twist cuvette after each drop to make sure the indicator is completely dissolved.
- 5 Count the number of drops until the color changes from red to green. Number of drops = ° dH.

Main screen
MENU
Menu selection
Service
Operating water
OPERATING WATER

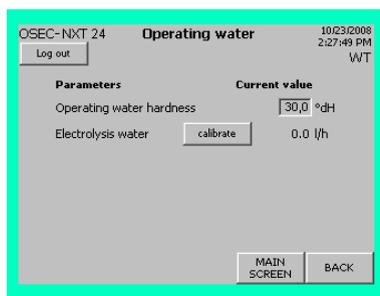

- 6 Switch to the "Operating water" menu and enter the value measured. It should be between 0 and 66° dH. You will be asked to enter a user name and password. For details, see chapter 5.2.2 Logging in.

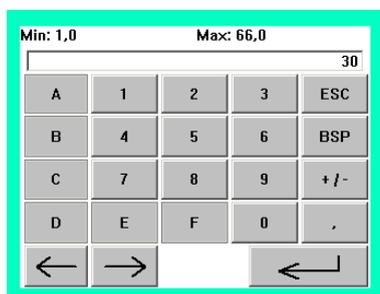


- 7 Enter the measured value in the operating journal.

5.13.5 Calibrating the electrolysis water flow meter

As part of the monthly maintenance it is necessary to check the electrolysis water flow meter measurements and it may be necessary to recalibrate it.


Proceed as follows:

- 1 Check the electrolysis water flow rate and adjust using the dosing ball valve (M7) if necessary. See the information label (A) on the chlorine membrane electrolysis system for details.

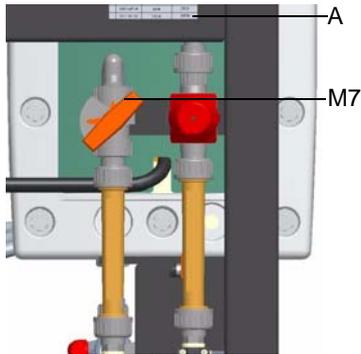


	OSEC-NXT 12	OSEC-NXT 24	OSEC-NXT 36	OSEC-NXT 48	OSEC-NXT 60
Electrolysis water	20 l/h (5.3 gal/h)	40 l/h (10.6 gal/h)	60 l/h (15.9 gal/h)	80 l/h (21.2 gal/h)	100 l/h (26.5 gal/h)

Main screen
MENU
Menu selection
Service
Operating water
OPERATING WATER

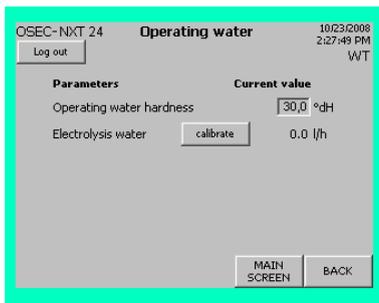

- 2 Switch to the "Operating water" menu. This is where the current electrolysis water flow rate is displayed. If it differs by more than +/- 0.5 l/h from the system-specific setting on the dosing ball valve, press the "calibrate" button. You will be asked to enter a user name and password. For details, see chapter 5.2.2 Logging in.

Main screen
MENU
Menu selection
Service
Operating water
calibrate
CALIBRATION

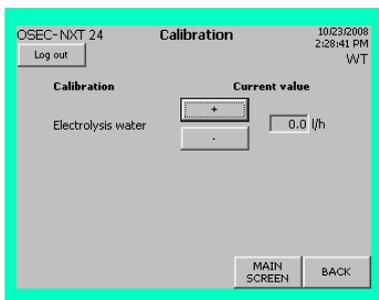

- 3 The flow rate can be adjusted by pressing "+" or "-" in the calibration submenu if necessary.

5.13.6 Checking and cleaning the filter

See chapter 8. Arrangement of components.

As part of the monthly maintenance procedure, check the filters one after another and clean them if necessary:

- Soft water filter
- Cathode inlet filter
- Operating water pressure reducing valve filter (M3)

Proceed as follows:

Switch off automatic mode

- 1 Press the "Mode" button to switch off automatic mode. For details see chapter 5.5 Turning off automatic mode.

 


Please note

When dismantling the filters, take note of the sequence of parts and observe this when reassembling!

Soft water filter

- 1 Close the ball valve of the salt dissolving tank.
- 2 Dismantle the filter (A), clean if necessary, and reassemble.
- 3 Open the ball valve of the salt dissolving tank.




Cathode inlet filter



Attention!


Risk of injury!

Sodium hydroxide is caustic and hot in the system (approx. 140° F). Wear protective clothing!

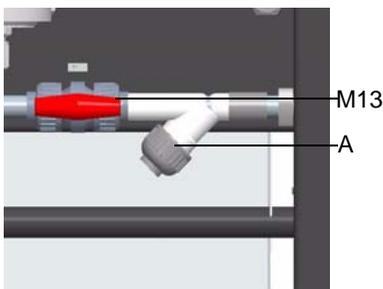

- 1 Close the ball valve of the cathode inlet (M13).
- 2 Dismantle the filter (A), clean if necessary, and reassemble.
- 3 Open the ball valve of the cathode inlet (M13).

*Operating water pressure
reducing valve filter (M3)*

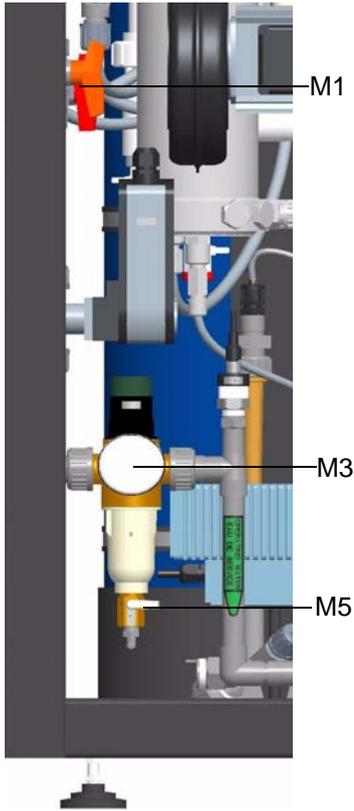

- 1 Close the ball valve of the water inlet (M1).
- 2 Open and empty pressure reducing valve filter drain tap (M5).
- 3 Close the drain tap filter of the pressure reducing valve (M5) .
- 4 Dismantle the filter, clean if necessary, and reassemble.
- 5 Open the ball valve of the water inlet (M1).

5.14 Faults



Warning!

Chemical hazard!

A substantial quantity of chemicals is produced in the chlorine membrane electrolysis system. For safe operation and to prevent harm to persons, be sure to follow the safety instructions and warnings on the system and in this operating manual.



Warning!

Injury or damage to the system!

If you find any leaks or damage to the chlorine membrane electrolysis system, switch off automatic preparation immediately by pressing the "Mode" button and contact Evoqua customer services immediately.



Attention!

Damage to the system!

Only in emergencies turn off the main switch!
Otherwise, important safety functions are deactivated.

There are basically three different types of faults:


- Faults that do not interrupt the running automatic process. The chlorine membrane electrolysis system stays in the current operating state.
- Faults that trigger the stopping of preparation. The chlorine membrane electrolysis system switches to the "Preparation standby" operating status. Automatic mode is active. As soon as the fault has been corrected and the "RESET" button has been pressed, preparation can be started again.
- Faults that cause automatic operation to be stopped immediately. The mode changes from Automatic to Manual and the chlorine membrane electrolysis system switches to the "Preparation off" state.



If the system develops a fault, a corresponding error message is displayed in a dialog box, irrespective of the current operating state or what else is currently being displayed by the system. Every error message has to be acknowledged individually by pressing the  button. Once the last error message has been acknowledged the display returns to the last menu that was displayed and the  symbol is displayed.

Main screen

MAIN SCREEN

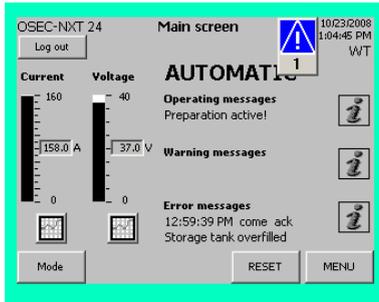

The last error message reported by the system is displayed as a text message on the main screen, together with the time stamp and the state and the "i" (Info) button flashes.

The text message, the symbol and the flashing "i" (Info) button all cease to be displayed once the fault has been cleared and the "RESET" button has been pressed.

If it is not possible to remedy the fault yourself, please contact Evoqua Water Technologies directly.

Main screen

"i" (info) Error messages

ERROR MESSAGES



The "i" (Info) button allows you to view the error messages that have been displayed by the system, including the date, time and status details ("come", "ack" and "gone"), at any time.

The arrow keys are used to navigate around the display.

All faults are also stored in the error message log (accessible via the main "Diagnostics" menu) and can be viewed there at any time. See chapter 5.12.3 Error message log.

5.14.1 Faults without interruption of the preparation process

Error message	caused by	Remedy
<p>Siphon device level probes plausibility</p>	<ul style="list-style-type: none"> • "Min." and "Max." fill level message displayed simultaneously 	<ul style="list-style-type: none"> • The switching functions of the level probes in the lifting tank should be checked by an electrical technician.
<p>Siphon device vacuum pump running time exceeded</p>	<ul style="list-style-type: none"> • Set run time of the vacuum pump exceeded 	<ul style="list-style-type: none"> • Check the suction-side pipes for leaks • Have the pumps checked by an electrical technician. • The switching functions of the level probes in the lifting tank should be checked by an electrical technician.

5.14.2 Faults that cause preparation to stop (AUTOMATIC "Preparation standby")

Error message	caused by	Remedy
<p>Cell voltage too high</p>	<ul style="list-style-type: none"> Limit value exceeded (electrical resistance too high, electrolysis process not working properly) 	<ul style="list-style-type: none"> Notify Evoqua customer service immediately
<p>Electrolysis current too low</p>	<ul style="list-style-type: none"> Below limit value (electrical resistance too high, electrolysis process not working properly) 	<ul style="list-style-type: none"> Notify Evoqua customer service immediately
<p>Cooling water flow rate too low</p>	<ul style="list-style-type: none"> Below set value for a prolonged period of time 	<ul style="list-style-type: none"> Check cooling water flow rate (M6) and set according to the specifications on the system Check the warning message log
<p>Cooling water flow rate too low Operating water pressure: 1.99 bar! Warning for 1.23 hours</p>	<ul style="list-style-type: none"> Below set value for a prolonged period of time due to the operating water pressure being too low 	<ul style="list-style-type: none"> Check cooling water flow rate (M6) and set according to the specifications on the system Check the operating water pressure (M3) during operation and, if necessary, reset according to the system specifications
<p>Electrolysis water flow rate too low</p>	<ul style="list-style-type: none"> Significantly below set value 	<ul style="list-style-type: none"> Adjust electrolysis water flow rate as described in chapter 4.7.8. Check electrolysis water pressure (M4) during operation and, if necessary, reset according to the specifications on the system Check the warning message log
<p>Electrolysis water flow rate too low Operating water pressure: 1.99 bar! Warning for 1.23 hours</p>	<ul style="list-style-type: none"> Significantly below set value due to the operating water pressure being too low 	<ul style="list-style-type: none"> Adjust electrolysis water flow rate as described in chapter 4.7.8. Check pressures (M3 and M4) during operation and, if necessary, reset according to the specifications on the system

Error message	caused by	Remedy
Electrolysis water flow rate too high	<ul style="list-style-type: none"> Significantly above set value 	<ul style="list-style-type: none"> Adjust electrolysis water flow rate as described in chapter 4.7.8. Check pressures (M3 and M4) during operation and, if necessary, reset according to the specifications on the system
Electrolysis water check flow meter	<ul style="list-style-type: none"> No feedback from electrolysis water flow meter 	<ul style="list-style-type: none"> Check that water inlet ball valve (M1) is open and open if necessary. Check electrolysis water flow rate and adjust at the dosing ball valve (M7) if necessary. Have the operating water solenoid valve (E2) checked by an electrical technician.
Storage tank level probes plausibility	<ul style="list-style-type: none"> Simultaneous indication of different fill levels 	<ul style="list-style-type: none"> The switching functions of the level switches in the storage tank should be checked by an electrical technician.
External water softener / hardness control failure	<ul style="list-style-type: none"> Fault message from external water softener Fault message from external residual hardness control device 	<ul style="list-style-type: none"> Notify manufacturer / supplier immediately Make sure that softened water is being supplied to the salt dissolving tank
Salt dissolving tank filling time exceeded. Check level!	<ul style="list-style-type: none"> Limit value for the filling time of the salt dissolving tank has been exceeded 	<ul style="list-style-type: none"> Check level! Check salt dissolving tank and filling process for leaks Salt dissolving tank level switch faulty Check the warning message log Contact Evoqua customer service if necessary
Salt dissolving tank filling time exceeded. Check level! Operating water pressure: 1.99 bar Warning for 1.23 hours	<ul style="list-style-type: none"> Limit value for the filling time of the salt dissolving tank has been exceeded because operating water pressure is too low 	<ul style="list-style-type: none"> Check level! Check the operating water pressure (M3) during operation and, if necessary, reset according to the system specifications

Error message	caused by	Remedy
<p>Rectifier not ready</p>	<ul style="list-style-type: none"> Rectifier is faulty 	<ul style="list-style-type: none"> Notify Evoqua customer service immediately Check the warning message log
<p>Rectifier not ready Mains voltage/mains failure</p>	<ul style="list-style-type: none"> Rectifier not ready due to: <ul style="list-style-type: none"> The mains voltage is outside the tolerances (over/undervoltage) Phase failure/neutral conductor failure Phase sequence incorrect 	<ul style="list-style-type: none"> Have the power supply required connected by an authorized and qualified electrical technician.
<p>Rectifier not ready Ambient temperature: 42°C Warning for 1.23 hours</p>	<ul style="list-style-type: none"> Rectifier not ready due to: <ul style="list-style-type: none"> Maximum permissible ambient temperature exceeded 	<ul style="list-style-type: none"> Ensure there is a supply of fresh air Measure the ambient temperature and cool the air in the room if necessary
<p>Brine pump run time exceeded</p>	<ul style="list-style-type: none"> Max. brine pump running time exceeded 	<ul style="list-style-type: none"> Check that the local salt dissolving tank inlet valve is open Check that the screw-in closable brine inlet separator (M10) is open Check that the pump's on/off switch is in position "1"
<p>Brine pump wait time exceeded</p>	<ul style="list-style-type: none"> Max. brine pump wait time exceeded 	<ul style="list-style-type: none"> Notify Evoqua customer service immediately
<p>Automatic stopcock will not open</p>	<ul style="list-style-type: none"> Automatic stopcock open position not confirmed 	<ul style="list-style-type: none"> Have the automatic stopcock checked by Evoqua service technicians
<p>Automatic stopcock will not close</p>	<ul style="list-style-type: none"> Automatic stopcock closed position not confirmed 	<ul style="list-style-type: none"> Have the automatic stopcock checked by Evoqua service technicians

5.14.3 Faults that cause automatic operation to stop immediately (MANUAL, "Preparation off")

Error message	caused by	Remedy
Dosing leak	<ul style="list-style-type: none"> Feedback from the leak sensor in the dosing area 	<ul style="list-style-type: none"> Close the storage tank discharge tap Perform visual inspection of the pipes to check for leaks Notify Evoqua customer service
Plant leak	<ul style="list-style-type: none"> Signal from the leak sensor of the chlorine membrane electrolysis system 	<ul style="list-style-type: none"> Perform visual inspection to check for leaks Check that valves and screw connections are closed. Close if necessary. Notify Evoqua customer service
Storage tank leak	<ul style="list-style-type: none"> Signal from the leak sensor on the storage tank 	<ul style="list-style-type: none"> Perform visual inspection to check for leaks Check that valves and screw connections are closed. Close if necessary. Notify Evoqua customer service
Check air flow monitor	<ul style="list-style-type: none"> Air flow monitor sensor signals an air current although the fan is turned off 	<ul style="list-style-type: none"> Screw the paddle switch out of the air flow monitor and check the spring force. Clean carefully if necessary. Notify Evoqua customer service immediately.
Fan failure	<ul style="list-style-type: none"> Electrical fault 	<ul style="list-style-type: none"> Notify Evoqua customer service immediately
Storage tank overfilled	<ul style="list-style-type: none"> Signal from the level probe in the storage tank: <ul style="list-style-type: none"> Level probe "Max." faulty 	<ul style="list-style-type: none"> Put on protective clothing The switching functions of the level probe "Max." in the storage tank should be checked by an electrical technician.
Air flow rate too low	<ul style="list-style-type: none"> Air flow monitor reports no or low air flow 	<ul style="list-style-type: none"> Perform visual inspection of the hydrogen vent pipe Check if the vent opening is blocked Check if the fan is blocked Check if the fan is rotating

Error message	caused by	Remedy
<p>EMERGENCY STOP</p>	<ul style="list-style-type: none"> • Missing "Release system" signal 	<ul style="list-style-type: none"> • Check if external release has been withdrawn by an external switch function
<p>Chlorine gas alarm</p>	<ul style="list-style-type: none"> • Signal from the gas alert device due to increased chlorine concentration in the air. 	<ul style="list-style-type: none"> • Put on protective clothing • Bring any bystanders to safety • Create a fresh air supply • Notify Evoqua customer service immediately.

5.14.4 Faults that occur outside the preparation process

Error message	caused by	Remedy
Water softener brine flow switch plausibility	<ul style="list-style-type: none"> Adjustment of the limit value sensor of the brine inlet softener (E10) 	<ul style="list-style-type: none"> Visual inspection of the limit value sensor (Max. at 40 l/h) Notify Evoqua customer service
Water softener brine flow rate too low	<ul style="list-style-type: none"> Below the set limit due to <ul style="list-style-type: none"> a lack or shortage of brine/empty salt dissolving tank Faulty brine inlet pipe Water softener drain dirty or back-pressure 	<ul style="list-style-type: none"> Check the fill level of the brine in the salt dissolving tank Perform a visual inspection of the brine supply pipes for leaks. Check water softener drain Notify Evoqua customer service
Water softener brine flow rate too low! Operating water pressure: 1.99 bar! Warning for 1.23 hours	<ul style="list-style-type: none"> Below the set limit due to <ul style="list-style-type: none"> Operating water pressure is too low 	<ul style="list-style-type: none"> Check operating water pressure (M3) and, if necessary, reset according to the specifications on the system Notify Evoqua customer service
Electrolysis water flow meter plausibility	<ul style="list-style-type: none"> Sensor reports flow rate though the valves are closed 	<ul style="list-style-type: none"> Have the inlet solenoid valve checked for leaks by an authorized and trained electrical technician
Cooling water flow switch plausibility	<ul style="list-style-type: none"> Sensor reports flow rate though the valves are closed 	<ul style="list-style-type: none"> Perform visual inspection of the flow meter to ensure it is working correctly Have the inlet solenoid valve checked for leaks by an authorized and trained electrical technician



Please note

All faults must be recorded in the operating journal!



Attention!

Risk of injury or damage to the system!

If the system needs to be shut down for longer than four weeks, it must be shut-down by trained and authorized personnel or by Evoqua service personnel. For further details see chapter Maintenance, 6.5 Shut-down.


6. Maintenance by a service technician

6.1 Performing maintenance

Regular maintenance of the chlorine membrane electrolysis system is a precondition for the customer to be able to make claims for defects. Once a year, level 2 maintenance must be carried out by Evoqua service personnel or by personnel that have been trained and authorized by Evoqua for maintenance work. This is first required six months after the system is commissioned.

Main screen

MAIN SCREEN

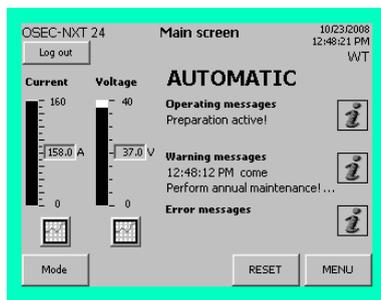

This is displayed on the screen. This warning message will be displayed for the first time after six months, and then every twelve months. The chlorine membrane electrolysis system remains operational. The warning message is turned off again once you have confirmed that annual maintenance has been carried out by pressing the "Maintenance" button on the main "Service" menu, see chapter 5.12.4. Service menu.

You can check when the next monthly or annual maintenance is due at any time by selecting "Operating data" in the "Diagnostics" menu.

Maintenance parts sets

The parts required for performing annual maintenance are included in the maintenance parts sets. A distinction is made between the maintenance parts sets for wear parts for use after 1 year, after 2 years and after 5 years. In addition to this, there is also a pump head service set and a replacement rectifier. See chapter 6.2 Maintenance parts sets for details.

Additional tools

The following additional tools are required to perform annual maintenance:

- Multimeter
- Clamp-on ammeter
- Thermometer
- Titration kit for chlorine
- Salinometer, density range 1.180 to 1.240 g/cm³
- Hose for connecting drain valves (1/4" female thread)
- Empty sodium hydroxide canister
- 6 gal bucket
- Stop watch

Maintenance checklist

The procedure and scope of annual maintenance is specified in maintenance checklist VD305. The specified sequence must be adhered to! Details on performing the various steps of the maintenance procedure are given in chapter 6.3 Detailed maintenance work.

The maintenance checklist must be properly completed and signed and then returned to Evoqua Water Technologies (required for any defect liability claims).

Starting the system up again

Once the maintenance has been completed, the chlorine membrane electrolysis system can be started up again as described in chapter 6.6 Starting the system up again. Reset the warning message by pressing the "Maintenance" button on the main "Service" menu.

*Warning!***Chemical hazard!**

A substantial quantity of chemicals is produced in the chlorine membrane electrolysis system. For safe operation and to prevent harm to persons, be sure to follow the safety instructions and warnings on the system and in this operating manual.

Risk of injury or damage to the system!

Level 2 maintenance may only be performed by authorized specialized personnel qualified for maintenance. All electrical work on the chlorine membrane electrolysis system may only be performed by qualified electricians. Modifications to the system which go beyond those described in this manual are not permissible. (See also chapter 2.2 General safety instructions)

*Please note*

Document all modifications or other work listed in the checklist and in the operating journal!

*Please note*

The operator is obliged to have the sodium hypochlorite storage tank inspected by an authorized inspection agency!

6.2 Maintenance parts sets

The parts required for performing annual maintenance are included in the maintenance parts sets. The following maintenance parts sets are available:

Part No.	Designation
W3T164984	Maintenance parts set, 1 year (or for the first time after 6 months)
W3T164985	Maintenance parts set, 2 years
W3T164986	Maintenance parts set, 5 years
W3T160935	Cation water softener, 3 years
W3T161025	Pump head service set for OSEC-NXT 12
W3T161026	Pump head service set for OSEC-NXT 24
W3T161027	Pump head service set for OSEC-NXT 36, 48 and 60
W3T162904	Rectifier for OSEC-NXT 12
W3T162905	Rectifier for OSEC-NXT 24
W3T162906	Rectifier for OSEC-NXT 36
W3T162907	Rectifier for OSEC-NXT 48
W3T162908	Rectifier for OSEC-NXT 60

The table in chapter 6.2.6 Using the maintenance parts sets provides details on when which maintenance parts set should be used.

All of the parts in the maintenance parts sets must be replaced or used.

6.2.1 Maintenance parts set for 1 year

The item numbers in the table refer to the drawings in chapter 6.3.8 Replacing wear parts.

Maintenance parts set W3T164984, 1 year					
Item	Quantity	Part No.	Designation	Application	See chapter
1	2	W3T169064	Sieve tube	Replacing wear parts	6.3.8
2	2	W3T163644	Sodium thiosulphate, 300 g	Anolyte neutralization	6.3.7
3	1	W3T169285	Water hardness test kit	Measuring the water hardness	5.13.3 5.13.4
4	3	W3T173010	O-ring 28.17x3.53 FPM	Replacing wear parts	6.3.8
5	5	W3T172718	O-ring 15.51x2.62 EPDM		
9	1	W2T505082	Spiral hose d 110, PVC-P		
10	1	W3T168863	O-ring 12x3 FPM		
12	1	W3T168367	Float, PVDF		
13	1	W3T168368	Securing ring		
14	1	W3T164866	O-ring 105x3.5 EPDM		
19	1	W3T169194	O-ring 46.99x5.33, FPM		
25	2	W2T507273	O-ring 18.0x2.5, EPDM		
37	1	W3T164321	Suction/pressure valve		

6.2.2 Maintenance parts set for 2 years

The item numbers in the table refer to the drawings in chapter 6.3.8 Replacing wear parts.

Maintenance parts set W3T164985, 2 years					
Item	Quantity	Part No.	Designation	Application	See chapter
1	2	W3T169064	Sieve tube	Replacing wear parts	6.3.8
2	2	W3T163644	Sodium thiosulphate, 300 g	Anolyte neutralization	6.3.7
3	1	W3T169285	Water hardness test kit	Measuring the water hardness	5.13.3 5.13.4
4	3	W3T173010	O-ring 28.17x3.53 FPM	Replacing wear parts	6.3.8
5	5	W3T172718	O-ring 15.51x2.62 EPDM		
6	2	W3T172958	Flat gasket 24x17x2, EPDM		
7	2	W3T172988	Flat gasket 30x21x3 EPDM		
9	1	W2T505082	Spiral hose d 110, PVC-P		
10	1	W3T168863	O-ring 12x3, FPM		
12	1	W3T168367	Float, PVDF		
13	1	W3T168368	Securing ring		
14	1	W3T164866	O-ring 105x3.5, EPDM		
16	10	W3T172724	O-ring 20.22x3.53, FPM		
17	4	W3T172822	O-ring 15.54x2.62, FPM		
19	1	W3T169194	O-ring, 46.99x5.33, FPM		
20	4	W3T169068	O-ring 13.94x2.62, FPM		
21	1	W3T164406	Volumetric flow control 8.0 l/min		
23	1	W2T504094	Screw-in closable outlet, PFDV		
24	1	W3T164726	Spiral hose DN 75, PVC-P		
25	2	W2T507273	O-ring 18.0x2.5, EPDM		
29	2	W2T506945	O-ring 100.96x5.33, EPDM		
30	4	W3T172861	O-ring 11.3x2.4, FPM		
37	1	W3T164321	Suction/pressure valve		

6.2.3 Maintenance parts set for 5 years

The item numbers in the table refer to the drawings in chapter 6.3.8 Replacing wear parts.

Maintenance parts set W3T164986, 5 years					
Item	Quantity	Part No.	Designation	Application	See chapter
1	2	W3T169064	Sieve tube	Replacing wear parts	6.3.8
2	2	W3T163644	Sodium thiosulphate, 300 g	Anolyte neutralization	6.3.7
3	1	W3T169285	Water hardness test kit	Measuring the water hardness	5.13.3 5.13.4
4	3	W3T173010	O-ring 28.17x3.53, FPM	Replacing wear parts	6.3.8
5	5	W3T172718	O-ring 15.51x2.62, EPDM		
9	1	W2T505082	Spiral hose d 110, PVC-P		
10	1	W3T168863	O-ring 12x3, FPM		
14	1	W3T164866	O-ring 105x3.5, EPDM		
19	1	W3T169194	O-ring 46.99x5.33, FPM		
25	2	W2T507273	O-ring 20.22x3.53, EPDM		
27	1	W3T172135	Level switch, titanium/PVDF		
28	1	W3T162371	Paddle switch	Replacing the paddle switch	6.3.14
32	1	W3T168512	Replacement sieve	Replacing wear parts	6.3.8
33	1	W3T169348	Replacement sieve		
35	1	W3T172370	Flow-through solenoid valve		
36	1	W3T162916	Low pressure fan		
37	1	W3T164321	Suction/pressure valve		

6.2.4 Pump head service set

The brine pump has a two year maintenance interval. The prescribed maintenance schedule is given in the table in chapter 6.2.6 Using the maintenance part sets. For details on maintenance of the brine pump, see chapter 6.3.9 Brine pump maintenance.

Chlorine membrane electrolysis system	Pump head service set, part No.
OSEC-NXT 12	W3T161025
OSEC-NXT 24	W3T161026
OSEC-NXT 36 to 60	W3T161027

6.2.5 Rectifier

The rectifier has a three year maintenance interval. The prescribed maintenance schedule is given in the table in chapter 6.2.6 Using the maintenance part sets. For details on replacing the rectifier, see chapter 6.3.13 Replacing the rectifier.

Chlorine membrane electrolysis system	Rectifier Part No.
OSEC-NXT 12	W3T162904
OSEC-NXT 24	W3T162905
OSEC-NXT 36	W3T162906
OSEC-NXT 48	W3T162907
OSEC-NXT 60	W3T162908

6.2.6 Using the maintenance part sets

Since the various wear parts wear at different rates, the following maintenance parts sets need to be used, depending on the maintenance interval and the size of the chlorine membrane electrolysis system:

Maintenance interval	Chlorine membrane electrolysis system				
	OSEC-NXT 12	OSEC-NXT 24	OSEC-NXT 36	OSEC-NXT 48	OSEC-NXT 60
1. year	W3T164984	W3T164984	W3T164984	W3T164984	W3T164984
2. year	W3T164985 W3T161025	W3T164985 W3T161026	W3T164985 W3T161027	W3T164985 W3T161027	W3T164985 W3T161027
3. year	W3T164984 W3T162904 W3T160935	W3T164984 W3T162905 W3T160935	W3T164984 W3T162906 W3T160935	W3T164984 W3T162907 W3T160935	W3T164984 W3T162908 W3T160935
4. year	W3T164985 W3T161025	W3T164985 W3T161026	W3T164985 W3T161027	W3T164985 W3T161027	W3T164985 W3T161027
5. year	W3T164986	W3T164986	W3T164986	W3T164986	W3T164986
6. year	W3T164985 W3T161025 W3T162904 W3T160935	W3T164985 W3T161026 W3T162905 W3T160935	W3T164985 W3T161027 W3T162906 W3T160935	W3T164985 W3T161027 W3T162907 W3T160935	W3T164985 W3T161027 W3T162908 W3T160935
7. year	W3T164984	W3T164984	W3T164984	W3T164984	W3T164984
8. year	W3T164985 W3T161025	W3T164985 W3T161026	W3T164985 W3T161027	W3T164985 W3T161027	W3T164985 W3T161027
9. year	W3T164984 W3T162904 W3T160935	W3T164984 W3T162905 W3T160935	W3T164984 W3T162906 W3T160935	W3T164984 W3T162907 W3T160935	W3T164984 W3T162908 W3T160935
10. year	W3T164986 W3T161025	W3T164986 W3T161026	W3T164986 W3T161027	W3T164986 W3T161027	W3T164986 W3T161027



Please note

All of the parts in the maintenance parts sets must be replaced or used.

6.3 Detailed maintenance work

6.3.1 Measuring individual cell voltage

The chlorine membrane electrolysis system is in Automatic mode, operating state "Preparation active!".

Proceed as follows:

- 1 Measure the voltage of the individual electrolysis cell via their electrical connections using the multimeter and probes, and while the system is preparing the product.
- 2 Enter the measured values in the maintenance checklist. Numeration of the electrolysis cells from the left.
- 3 Check the total voltage displayed on the main screen and enter it in the maintenance checklist.



Please note

The individual electrolysis cells may not have more the 19.5 V. The value on the display is the sum of the individual voltages.

6.3.2 Measuring the cell current

The chlorine membrane electrolysis system is in Automatic mode, operating state "Preparation active!".

Proceed as follows:

- 1 Measure the cell current with the clamp-on ammeter and the multimeter while the system is preparing the product.
- 2 Enter the measurements in the maintenance checklist.
- 3 Check the current displayed on the main screen and enter it in the maintenance checklist.



Please note

The current must be approximately 160 A.

6.3.3 Checking the product concentration



Attention!

Chemical hazard!

Sodium hypochlorite is a strong oxidant. Avoid all skin contact! Always wear protective clothing! After skin contact, rinse thoroughly with lots of water!

The chlorine membrane electrolysis system is in Automatic mode, operating state "Preparation active!".

Proceed as follows:

- 1 Take a 0.1 gal sample from the reactor outlet (M12) while the system is running and dispose of it.
- 2 Carry out titration according to the titration instructions.
- 3 Enter the product concentration measured in the maintenance checklist.
- 4 Dispose of the sample.

6.3.4 Checking the product temperature



Attention!

Chemical hazard!

Sodium hypochlorite is a strong oxidant. Avoid all skin contact! Always wear protective clothing! After skin contact, rinse thoroughly with lots of water!

The chlorine membrane electrolysis system is in Automatic mode, operating state "Preparation active!".

Proceed as follows:

- 1 Take a 0.1 gal sample from the reactor outlet (M12) and dispose of it.
- 2 Take a 0.1 gal sample.
- 3 Measure the product temperature with the thermometer.
- 4 Enter the product temperature measured in the maintenance checklist.
- 5 Clean the thermometer thoroughly.
- 6 Dispose of the sample.

6.3.5 Checking the salt dissolving tank level probe

The chlorine membrane electrolysis system is in manual mode, operating state "Preparation off".

Proceed as follows:

- 1 Lift the cover of the salt dissolving tank.
- 2 Lift the level probe out of the guide tube. The level switch must have freedom of movement. The float falls downwards. Softened water flows into the brine tank.
- 3 Insert level sensor into the guide tube again. Softened water continues to flow for about 30 seconds.



Please note

This procedure applies to a salt dissolving tank with a float level switch.

6.3.6 Emptying and rinsing the cathode chamber



Attention!


Damage to the electrolysis cell(s)!

Never empty the cathode and anode chambers at the same time!
The membrane could dry out and damage the electrolysis cell!

The chlorine membrane electrolysis system is in manual mode, operating state "Preparation off".

Proceed as follows:

- 1 Attach a hose to the cathode-side outlet (M11) and insert the free end into the empty sodium hydroxide canister provided.
- 2 Open the ball valve of the cathode-side outlet (M11) and empty the cathode chamber completely.
- 3 Close the ball valve of the cathode-side outlet (M11) again.
- 4 Switch to the "Manual functions" screen and press the "Electrolysis water On" button. Open the electrolysis water solenoid valve (E2) and the water softener water inlet solenoid valve (E5). The electrolysis water starts flowing.
- 5 Rinse the cathode chamber for about 30 minutes.

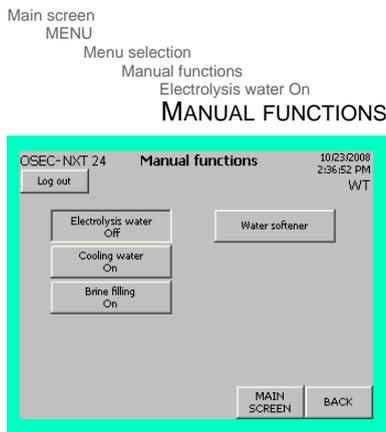

Please note

Do not rinse the cathode chamber for longer than 30 minutes, as the product in the storage tank will otherwise be diluted unnecessarily.

- 6 To stop the "MANUAL Electrolysis water" function again, press the "Electrolysis water Off" button. The electrolysis water solenoid valve (E2) and the water softener water inlet solenoid valve (E5) close.
- 7 Leave water in the cathode chamber.

6.3.7 Emptying and rinsing the anode chamber.



Warning!

Chemical hazard!

There is chlorine gas in the anolyte circuit. Leaks may release chlorine gas. Chlorine gas is toxic when inhaled and may cause loss of consciousness. Use gas mask!



Attention!

Damage to the electrolysis cell(s)!

Never empty the cathode and anode chambers at the same time! The membrane could dry out and damage the electrolysis cell!




Please note

The individual steps must be followed in the correct sequence.

The chlorine membrane electrolysis system is in manual mode, operating state "Preparation off".

Proceed as follows:

- 1 Put approx. 1.2 lbs of sodium thiosulphate into an empty 6 gal bucket.
- 2 Add about 0.2 gal water and stir. The sodium thiosulphate does not completely dissolve.
- 3 Attach a 7" hose to the separator outlet drain (M9).
- 4 Insert the free hose end in the solution. Ensure that the hose does not slide out.
- 5 Open the separator outlet (M9) and empty the anode chamber completely.
- 6 Dispose of the contents of the bucket in the sewage system and rinse with water.
- 7 Connect the separator outlet (M9) and the cathode-side outlet ball valve (M11) using a hose.
- 8 Close the ball valve of the cathode inlet (M13).
- 9 Open the ball valve of the cathode-side outlet (M11).

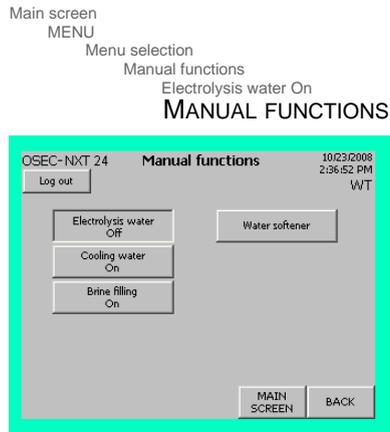

10 Switch to the "Manual functions" screen and press the "Electrolysis water On" button. Open the electrolysis water solenoid valve (E2) and the water softener water inlet solenoid valve (E5). The electrolysis water starts flowing.

11 Rinse the system for at least 30 minutes.

12 To stop the "MANUAL Electrolysis water" function again, press the "Electrolysis water Off" button. The electrolysis water solenoid valve (E2) and the water softener water inlet solenoid valve (E5) close.

13 Leave water in the anode chamber.

6.3.8 Replacing wear parts

Drain and rinse the chlorine membrane electrolysis system and switch off at the main switch. The operating water supply and brine supply are interrupted.

The wear parts contained in the prescribed maintenance parts sets need to be replaced as shown in the drawings below.

Proceed as follows:

- 1** Replace items 1, 5, 20 and 25 first, by draining the water from the cathode chamber and then refilling it with sodium hydroxide after having replaced the parts. For details, see chapter 4.7.12 Emptying the water-filled cathode chamber and filling with sodium hydroxide.
- 2** Replace items 4, 10, 12, 13 and 27 by draining the water from the anode chamber as described in chapter 4.7.16. It is refilled with brine when the system is started up again. For details, see chapter 6.6 Starting the system up again.



Attention!

Before replacing the o-rings on the reactor drain, item 4, drain the siphon via the male connector closable reactor outlet (M12).

- 3** The remaining wear parts can be replaced in any order.



Please note

Grease o-ring on the hose connection (A3) (item No. 16) and the o-rings on the brine flow meter item No. 17 with silicone grease before fitting!

1 year maintenance

The following wear parts, contained in maintenance parts set W3T164984, need to be replaced as shown in the drawings below when performing the 1 year maintenance.

Item	Quantity	Part No.	Designation
1	2	W3T169064	Sieve tube
4	3	W3T173010	O-ring 28.17x3.53 FPM
5	5	W3T172718	O-ring 15.51x2.62 EPDM
9	1	W2T505082	Spiral hose d 110, PVC-P
10	1	W3T168863	O-ring 12x3 FPM
12	1	W3T168367	Float, PVDF
13	1	W3T168368	Securing ring
14	1	W3T164866	O-ring 105x3.5 EPDM
19	1	W3T169194	O-ring, 46.99x5.33, FPM
25	2	W2T507273	O-ring 20.22x3.53 EPDM
37	1	W3T164321	Suction/pressure valve

2 year maintenance

The following wear parts, contained in maintenance parts set W3T164985, need to be replaced as shown in the drawings below when performing the 2 year maintenance.

Item	Quantity	Part No.	Designation
1	2	W3T169064	Sieve tube
4	3	W3T173010	O-ring 28.17x3.53 FPM
5	5	W3T172718	O-ring 15.51x2.62, EPDM
6	2	W3T172958	Flat gasket 24x17x2, EPDM
7	2	W3T172988	Flat gasket 30x21x3 EPDM
9	1	W2T505082	Spiral hose d 110, PVC-P
10	1	W3T168863	O-ring 12x3, FPM
12	1	W3T168367	Float, PVDF
13	1	W3T168368	Securing ring
14	1	W3T164866	O-ring 105x3.5, EPDM
16	10	W3T172724	O-ring 20.22x3.53 FPM
17	4	W3T172822	O-ring 15.54x2.62 FPM
19	1	W3T169194	O-ring, 46.99x5.33, FPM
20	4	W3T169068	O-ring 13.94x2.62, FPM
21	1	W3T164406	Flow control valve 8.0 l/min
23	1	W2T504094	Screw-in closable outlet, PFDV
24	1	W3T164726	Spiral hose DN 75, PVC-P
25	2	W2T507273	O-ring 20.22x3.53, EPDM
29	2	W2T506945	O-ring 100.96x5.33, EPDM
30	4	W3T172861	O-ring 11.3x2.4, FPM
37	1	W3T164321	Suction/pressure valve

5 year maintenance

The following wear parts, contained in maintenance parts set W3T164986, need to be replaced as shown in the drawings below when performing the 5 year maintenance.

Item	Quantity	Part No.	Designation
1	2	W3T169064	Sieve tube
4	3	W3T173010	O-ring 28.17x3.53, FPM
5	5	W3T172718	O-ring 15.51x2.62, EPDM
9	1	W2T505082	Spiral hose d 110, PVC-P
10	1	W3T168863	O-ring 12x3, FPM
14	1	W3T164866	O-ring 105x3.5, EPDM
19	1	W3T169194	O-ring, 46.99x5.33, FPM
25	2	W2T507273	O-ring 20.22x3.53, EPDM
27	1	W3T172135	Level switch, titanium/PVDF
32	1	W3T168512	Replacement sieve
33	1	W3T169348	Replacement sieve
35	1	W3T172370	Flow-through solenoid valve
36	1	W3T162916	Low pressure fan
37	1	W3T164321	Suction/pressure valve

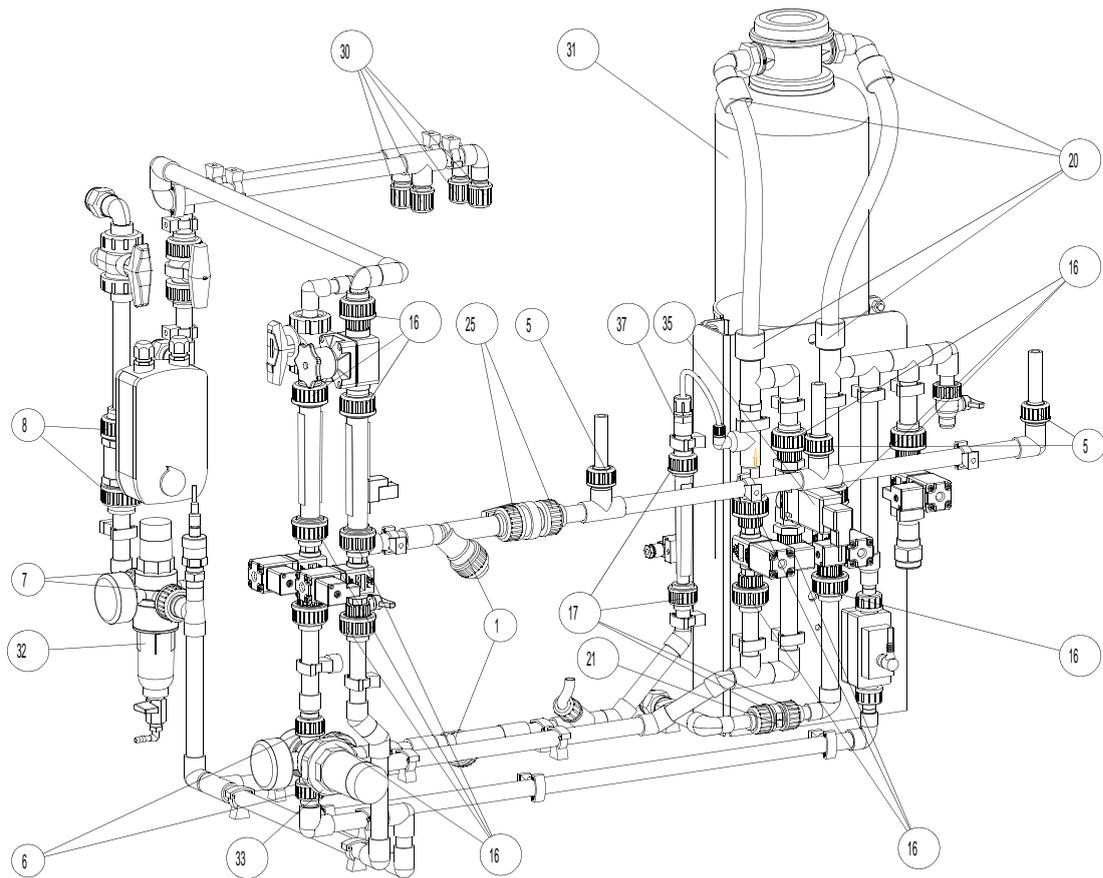


Fig. 1 Wear parts to be replaced

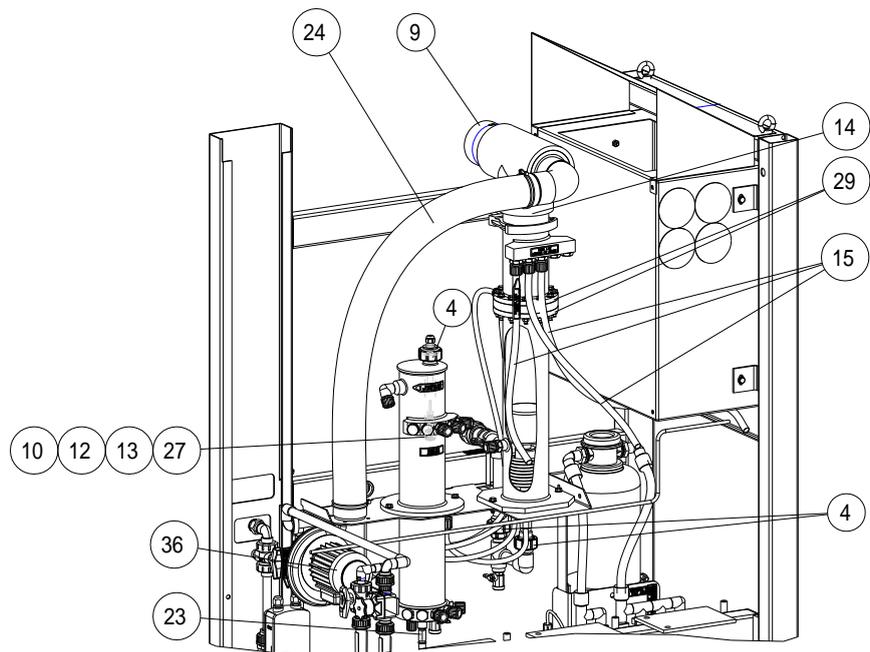


Fig. 2 Wear parts to be replaced

6.3.9 Brine pump maintenance



Please note

The brine pump has a two year maintenance interval. The prescribed maintenance schedule is given in the table in chapter 6.2.6 Using the maintenance part sets.

Drain and rinse the chlorine membrane electrolysis system and switch off at the main switch.

Proceed as follows:



Warning!

Risk of injury!

Chlorine gas is toxic when inhaled and may cause loss of consciousness. The pump maintenance may therefore only be carried out if the anode chamber is empty.

- 1 Prepare the pump head service set (see chapter 6.2.4).
 - 2 Close the brine inlet on the salt dissolving tank.
 - 3 Close the separator brine inlet (M10).
 - 4 Perform pump maintenance using the pump head service set. For details, see the pump operating manual.
-



Please note

Grease all of the replacement o-rings for the brine pump with silicone grease before fitting!

- 5 Open the brine inlet ball valve on the salt dissolving tank again.
- 6 Open the separator brine inlet (M10) again.

6.3.10 Cleaning the water softener injector

Drain and rinse the chlorine membrane electrolysis system and switch off at the main switch.

Proceed as follows:

- 1 Release the pipe clamps on the injector line.
- 2 Dismantle the injector line as shown in the drawing.

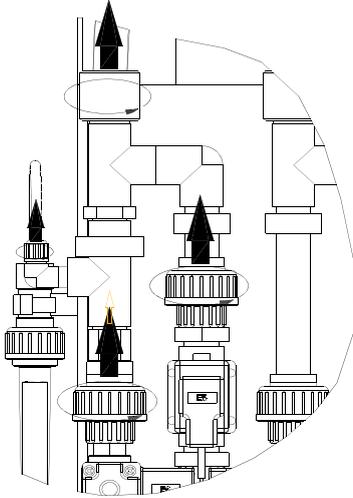


Fig. 3 Injector line to the water softener

- 3 Dismantle injector as shown in the diagram.

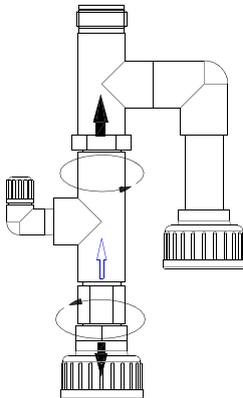


Fig. 4 Dismantle injector

- 4 Check injector for contamination.
- 5 If necessary, dismantle and clean the injector.



Please note

When dismantling the injector, note the sequence of the parts and observe this sequence when reassembling!

- 6 Reassemble the injector and install in the injector line.
- 7 Seal the injector again using Teflon tape.
- 8 Reinstall the entire injector line.
- 9 Tighten the support clamps on the injector line again.

6.3.11 Replacing the hydrogen vent hose on the hydrogen vent pipe

Drain and rinse the chlorine membrane electrolysis system and switch off at the main switch.

Proceed as follows:

- 1 Cut the new hydrogen vent hose to the required length.
- 2 Release the hose clamps with a screwdriver.
- 3 Pull the hydrogen vent hose off the hydrogen vent pipe and blow-out head.
- 4 Push or twist the hose clamps onto the new hydrogen vent hose.
- 5 Push the hydrogen vent hose onto the hydrogen vent pipe and blow-out head.
- 6 Tighten the hose clamps with a screwdriver.

6.3.12 Replacing the rectifier fan

Drain and rinse the chlorine membrane electrolysis system and switch off at the main switch.

Proceed as follows:

- 1 Prepare the fan.
- 2 Make sure that the chlorine membrane electrolysis system cannot be switched back on at the main switch while the rectifier is being replaced.
- 3 If necessary, remove the bottom plate of the rectifier cabinet. To this, unscrew the 6 hexagon screws.
- 4 Electrically disconnect the fan(s). Mark the polarity, if necessary.
- 5 Remove the 4 retaining screws from each fan. Fan and fan grill detach from the rectifier.
- 6 Fix the new fan(s) and the existing fan grills to the rectifier using the present retaining screws, ensuring a correct direction of flow (from bottom to top).
- 7 Electrically connect the fans to the rectifier, ensuring correct polarity.
- 8 If necessary, refit the bottom plate to the rectifier cabinet.
- 9 After starting up the system again check the fan is working correctly.

6.3.13 Replacing the rectifier



Please note

The rectifier has a three year maintenance interval. The prescribed maintenance schedule is given in the table in chapter 6.2.6 Using the maintenance part sets.

Drain and rinse the chlorine membrane electrolysis system and switch off at the main switch.

Proceed as follows:

- 1 Prepare the rectifier.
- 2 Make sure that the chlorine membrane electrolysis system cannot be switched back on at the main switch while the rectifier is being replaced.
- 3 Open the rectifier cabinet using the control cabinet key.
- 4 Unplug the green plug on the rectifier.
- 5 Disconnect the mains cable from the rectifier.
- 6 Mark the polarity of both of the cell cables, then disconnect.
- 7 Unscrew the 4 retaining screws and remove the old rectifier from the system.



Attention!

Risk of injury!

The rectifiers for OSEC-NXT 24, 36, 48 and 60 chlorine membrane electrolysis systems weigh over 50 lbs. Assistance is therefore required when removing the old rectifier and replacing it with a new one in these units.

- 8 Unscrew the cell cable terminals on the new rectifier completely. The terminal shaft must be completely open to ensure that the cell cables can be installed correctly.
- 9 Install the new rectifier in the rectifier cabinet and tighten the four retaining screws.
- 10 Reconnect the green plug. The plug is keyed to prevent it being inserted incorrectly. Make sure that the plug is firmly seated.
- 11 Insert the cell cables in the terminals on the rectifier output, observing the polarity markings, then tighten the terminals, ensuring that contact has been established and that the cables are firmly seated.
- 12 Connect the mains cable to the rectifier.
- 13 Lock the rectifier cabinet again using the control cabinet key.

6.3.14 Replacing the paddle switch out of the air flow monitor

Drain and rinse the chlorine membrane electrolysis system and switch off at the main switch.

Proceed as follows:

- 1 Prepare the paddle switch.
- 2 Remove the old paddle switch from the system.
- 3 Install the new paddle switch and connect as described in chapter 9. Wiring diagram.
- 4 After the chlorine membrane electrolysis system has been started up again, check that the air flow monitor is functioning correctly. See chapter 4.7.13 Checking the hydrogen vent pipe for details.

6.4 Replacing the electrolysis cell

Spare parts For replacement of the electrolysis cell we provide as a spare part:

Part No.	Designation	System
W3T188264	Spare electrolysis cell	OSEC-NXT 12-60

Proceed as follows:

The chlorine membrane electrolysis system is in manual mode, operating state "Preparation off".

1 Prepare the following tools:

- Hose for connecting drain valves (1/4" female thread)
- Empty sodium hydroxide canister
- Sodium thiosulphate
- 6 gal bucket
- Drum pump
- Sodium hydroxide
- Hydrochloric acid

Empty and rinse the anode chamber

2 Empty and rinse the anode chamber. See chapter 6.3.7 for details.

3 Open the chlorine separator outlet (M9) and empty the anode chamber completely.

Empty and rinse the cathode chamber

4 Empty and rinse the cathode chamber. See chapter 6.3.6 for details.

Empty the water from the cathode chamber

5 Connect the cathode-side outlet and the sewage system with a hose.

6 Empty the cathode chamber using the ball valve (M11) on the cathode-side outlet

Empty the water from the anode chamber

7 Connect the chlorine separator drain (M9) to the sewage system using a hose.

8 Turn off the chlorine membrane electrolysis system at the main switch.




Attention!

Damage to the electrolysis cell(s)!

The following tasks must be performed in quick succession to prevent the cells from drying out!

- 9 Empty the water from the replacement cell.
- 10 Remove the old electrolysis cell from the chlorine membrane electrolysis system.
- 11 Replace the elbow unions from the cathode inlet on both of the electrolysis cells by unscrewing the union nuts on the cell connection to the elbow unions.

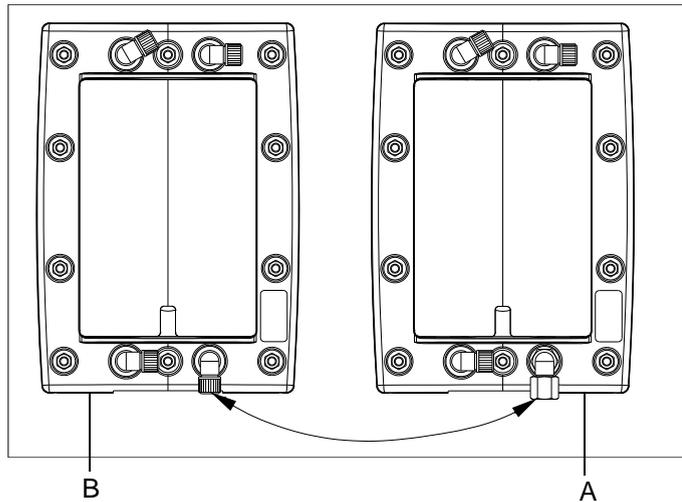


A Old electrolysis cell
 B New electrolysis cell

Fill the cathode chamber with sodium hydroxide solution

Rinse the anode chamber with acid

- 12 Replace the electrolysis cell. Ensure the mechanical and electrical connections are connected correctly.
- 13 Using the drum pump, add sodium hydroxide via the cathode-side outlet until it runs out of the sodium hypochlorite pipe into the sodium hypochlorite tank.
- 14 Close the ball valve (M1) on the cathode-side outlet immediately after filling to prevent it flowing back into the canister.
- 15 Connect the chlorine separator drain and the drum pump using a hose.
- 16 Ensure that the chlorine separator outlet (M9) is open.
- 17 Pump 9% hydrochloric acid into the anode chamber using the drum pump until the fill level in the chlorine separator is steady above the top of the electrolysis cell.
- 18 Switch the pump off as soon as the fill level is reached.
- 19 Close the chlorine separator outlet (M9) as soon as you have switched the pump off.
- 20 Rinse the drum pump with approx. 1.5 gal of softened water.

Main screen
MENU
Menu selection
Manual functions
Brine filling On
MANUAL FUNCTIONS

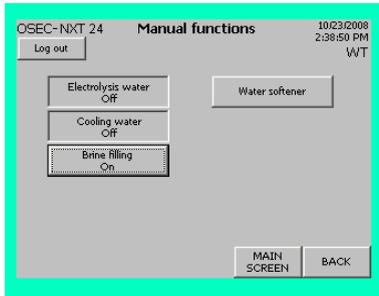

Attention!

Damage to the system!

The system must be started immediately (within approx. 1 hour) after being rinsed with acid!

21 Wait 15 minutes and then drain the acid from the anode chamber.

22 Turn on the chlorine membrane electrolysis system at the main switch.

23 Refill the anode chamber with brine immediately. Switch to the "Manual functions" screen and press the "Brine filling On" button. When the fluid level limit is reached in the chlorine separator the brine pump stops automatically. The manual brine pump function is simultaneously turned off.

6.5 Shut-down

If the chlorine membrane electrolysis system needs to be shut down for longer than four weeks, it must be shut down by trained and authorized personnel or by Evoqua service personnel.



Attention!

Damage to the electrolysis cell(s)!

If the system is switched off and disconnected from the power supply for a prolonged period (> 4 h) the electrolysis cells may be permanently damaged.

6.5.1 Summary of the shut-down procedure

Affected parts	Required work	see chapter
System in general	Deactivate automatic mode by pressing the "Mode" button.	
	Empty and rinse the anode chamber	6.3.7
	Empty and rinse the cathode chamber	6.3.6
	Shut-down on the control and display unit	6.5.2
	Turn off the system at the main switch	



Attention!

Damage to the system!


Always perform the steps in the process in the order specified.

6.5.2 Shut-down the system on the control and display unit

The chlorine membrane electrolysis system is empty and rinsed and in MANUAL mode, operating state "Preparation off".

Main screen
MENU
Menu selection
Service
Shut-down

SERVICE

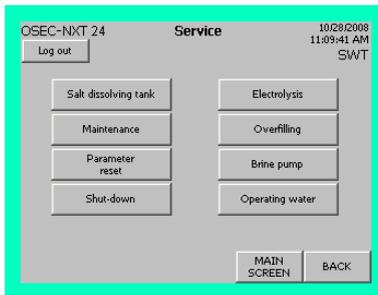

Proceed as follows:

- 1 Switch to the "Service" screen and press the "Shut-down" button. This opens the "Shut system down?" dialog box.




Please note

The "Shut-down" button is shown if the following conditions are met:


- Login level 3, service personnel
- MANUAL mode
- Operating state "Preparation off"

Main screen
MENU
Menu selection
Service
Shut-down
System shut-down Yes

SERVICE

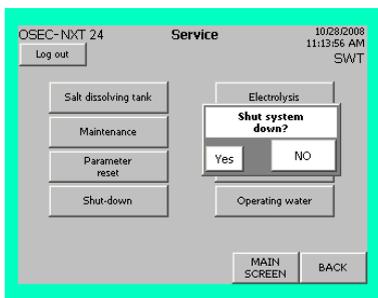


- 2 To confirm that you wish to shut the system down, press "Yes". The display then switches to the start-up menu and the system can be switched off at the main switch.

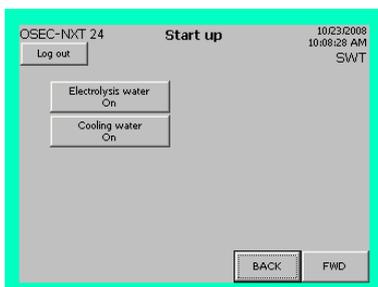

6.6 Starting the system up again

Affected parts	Required work	see chapter
System in general	Ensure the system requirements given in the chapter Start-up are met	4.7
	Turn the system on at the main switch	4.7.5
	Start the system	4.7

8. Arrangement of Components

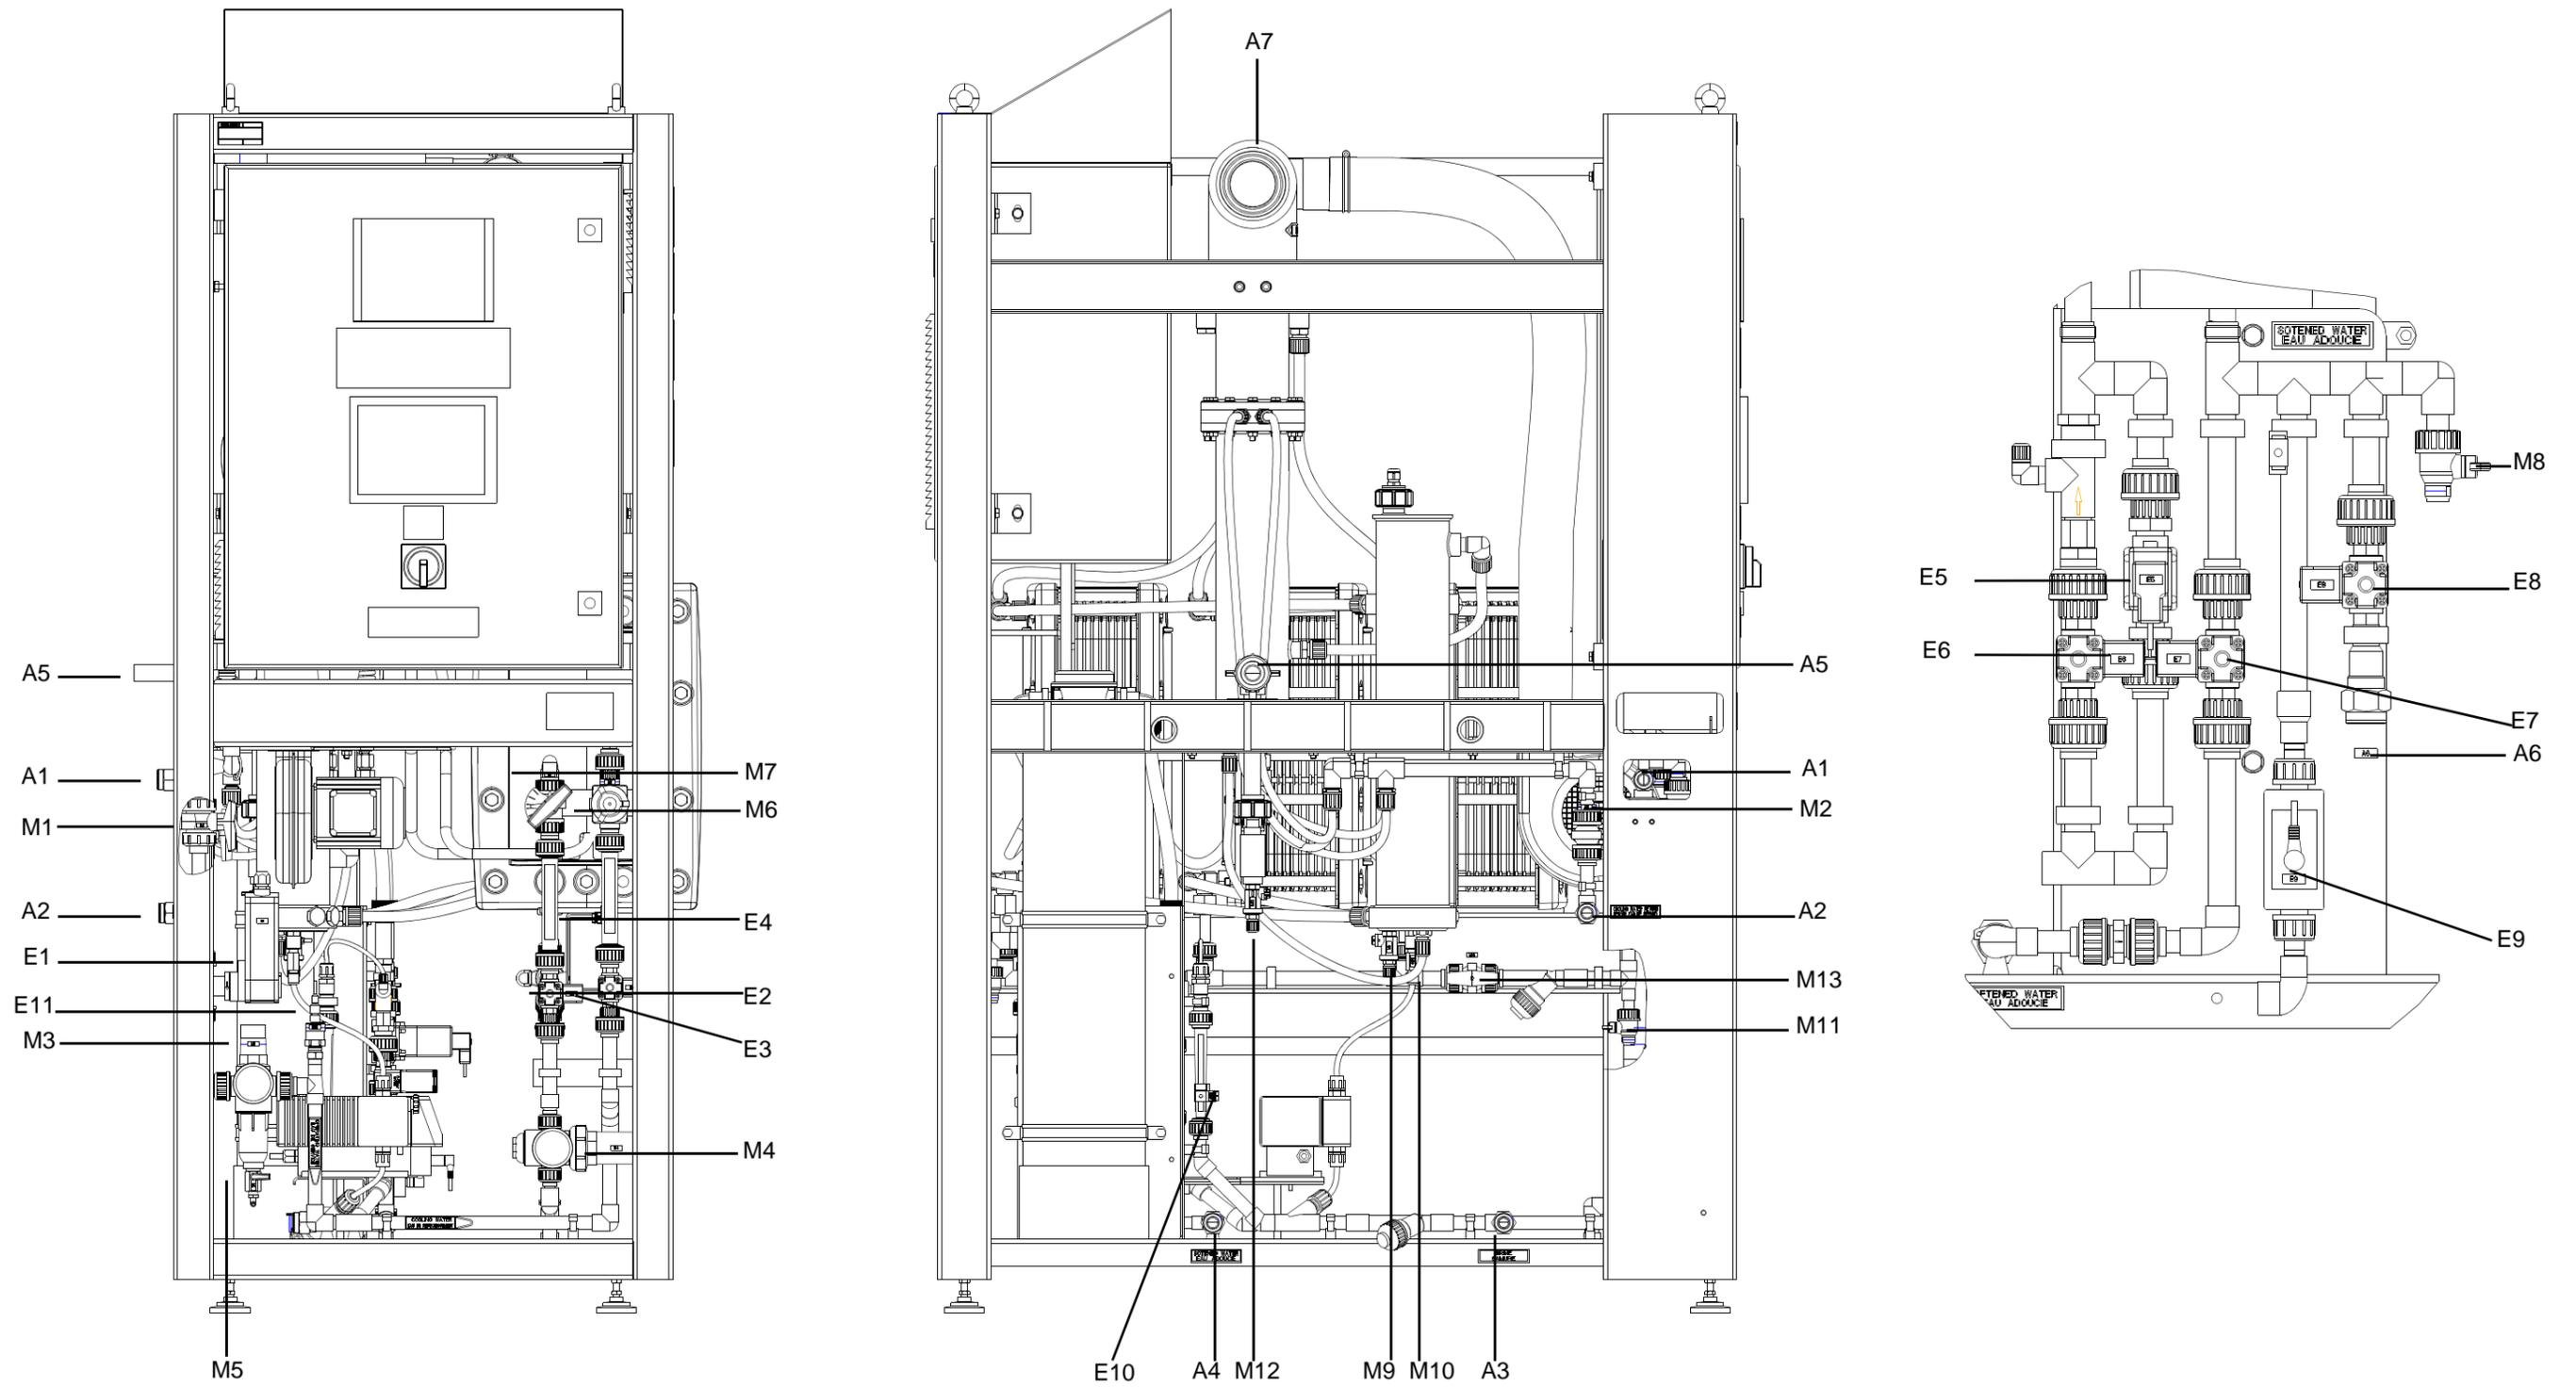



Component Parts List

Group	Labels	Designation
Mechanically activated components	M1	Operating water ball valve
	M2	Cooling water ball valve
	M3	Operating water pressure reducing valve
	M4	Electrolysis water pressure reducing valve
	M5	Pressure reducing valve filter drain tap
	M6	Cooling water membrane valve
	M7	Electrolysis water dosing ball valve
	M8	Soft water sample ball valve
	M9	Separator screw-in closable outlet
	M10	Separator screw-in closable brine inlet
	M11	Cathode-side ball valve outlet
	M12	Reactor screw-in closable outlet
	M13	Cathode inlet ball valve
Electrically activated components	E1	Water inlet ball valve with motor drive
	E2	Electrolysis water solenoid valve
	E3	Cooling water solenoid valve
	E4	Cooling water limit value
	E5	Water softener water inlet solenoid valve
	E6	Water softener injector solenoid valve
	E7	Salt dissolving tank filling solenoid valve
	E8	Water softener rinsing solenoid valve
	E9	Electrolysis water flow meter
	E10	Softener brine inlet limit value sensor
	E11	Pressure sensor
Hose connections	A1	Operating water
	A2	Cooling water outlet
	A3	Brine
	A4	Salt dissolving tank filling outlet
	A5	Product outlet
	A6	Water softener rinsing outlet
	A7	Hydrogen vent pipe



9. Wiring diagram

<h1>Project: OSEC-NXT</h1>		Remark:																																								
<p>order number:</p> <p>Customer:</p> <p>Drawing number:</p> <p>Date:</p> <p>Plant:</p> <p>Place:</p>	<p style="text-align: center;">WAE7179</p> <p style="text-align: center;">18.08.10</p> <p style="text-align: center;">=A1</p> <p style="text-align: center;">+S1</p>	<div style="border: 1px solid red; padding: 2px; display: inline-block; color: red; font-size: small;"> Information double electrolyser </div> <p>ELWS-Note:</p> <ul style="list-style-type: none"> - Jumper: X3/20-22 - Jumper: X1/6-8 X3/2-38 X3/11-27 X3/42-44 X3/66-68 X3/71-73 																																								
<p>Description:</p> <p>control cabinet</p> <p>Operator control panel</p> <p>Chlor-electrolyser</p> <p>1..5 Electrolysis cell</p>		<p style="text-align: center;">Cover page</p>																																								
		<p>Project: OSEC-NXT</p> <p>order number: WAE7179</p>																																								
<p>Original</p>		<p>Sheet 1</p> <p>33 Pa.</p>																																								
<table border="1" style="width: 100%; border-collapse: collapse; font-size: x-small;"> <tr> <td>1</td> <td>LAE-0547-02</td> <td>05.04.11</td> <td>th</td> <td>Date</td> <td>18.08.10</td> <td>Design Center</td> <td>GER</td> </tr> <tr> <td>2</td> <td>LAE-0565</td> <td>17.10.12</td> <td>uz</td> <td>Drawn</td> <td></td> <td>Prct. Sales</td> <td></td> </tr> <tr> <td>3</td> <td>LAE-0500</td> <td>13.06.14</td> <td>th</td> <td>Drawn</td> <td></td> <td>Date</td> <td></td> </tr> <tr> <td>4</td> <td>LAE-0548</td> <td>13.01.16</td> <td>th</td> <td>Checked</td> <td></td> <td>release</td> <td></td> </tr> <tr> <td>Issue</td> <td>Revision</td> <td>Date</td> <td>Name</td> <td>Norm.</td> <td></td> <td></td> <td></td> </tr> </table>			1	LAE-0547-02	05.04.11	th	Date	18.08.10	Design Center	GER	2	LAE-0565	17.10.12	uz	Drawn		Prct. Sales		3	LAE-0500	13.06.14	th	Drawn		Date		4	LAE-0548	13.01.16	th	Checked		release		Issue	Revision	Date	Name	Norm.			
1	LAE-0547-02	05.04.11	th	Date	18.08.10	Design Center	GER																																			
2	LAE-0565	17.10.12	uz	Drawn		Prct. Sales																																				
3	LAE-0500	13.06.14	th	Drawn		Date																																				
4	LAE-0548	13.01.16	th	Checked		release																																				
Issue	Revision	Date	Name	Norm.																																						

Cable list										
Cable no.	Cable type	Voltage	Length	from	Designation	to	Designation	Cross reference	Remark	
-W001	NYSLYÖ-J-3x1.0	DC 24V	0 mm	=A1+S1-15M3	Automatic stopcock	=A1+S1-X3	Chlor-electrolyser	=A1+S1/15.E3	internal	
-W002	NYSLYÖ-J-4x1.0	DC 24V	0 mm	=A1+S1-15M3	Automatic stopcock	=A1+S1-X3	Chlor-electrolyser	=A1+S1/15.E4	internal	
-W003	NYSLYÖ-J-4x1.0	AC 480V	0 mm	=gleichrichter-S1-17F1	DC-power-supply	=gleichrichter-S1-17F1	Chlor-electrolyser	=A1+S1/17.B1	internal	
-W004	NYSLYÖ-J-4x1.0	DC 24V	0 mm	=gleichrichter-S1-17C1	DC-power-supply	=A1+S1-17K3	Chlor-electrolyser	=A1+S1/17.C4	internal	
-W005	LIYCY-8x0.75	DC 0..10V	0 mm	=gleichrichter-S1-17C1	DC-power-supply	=A1+S1-9A3	PLC analog input/output unit	=A1+S1/17.C5	internal	
-W006	H07V-K-1x70mm	DC 20..100V	0 mm	=gleichrichter-S1-17C1	DC-power-supply +	=A1+S1	Electrolysis cell +	=A1+S1/17.F4	internal	
-W007	H07V-K-1x70mm	DC 20..100V	0 mm	=gleichrichter-S1-17C1	DC-power-supply -	=A1+S1	Electrolysis cell -	=A1+S1/17.F5	internal	
-W008	NYSLYÖ-J-3x0.75	DC 24V	0 mm	=A1+S1-X3	Chlor-electrolyser	=A1+S1-18Y2	Water softener Valve Inlet	=A1+S1/18.E2	internal	
-W009	NYSLYÖ-J-3x0.75	DC 24V	0 mm	=A1+S1-X3	Chlor-electrolyser	=A1+S1-18Y2.1	Water softener Valve Injector	=A1+S1/18.E2	internal	
-W010	NYSLYÖ-J-3x0.75	DC 24V	0 mm	=A1+S1-X3	Chlor-electrolyser	=A1+S1-18Y3	Water softener Valve washing/relieving	=A1+S1/18.E3	internal	
-W011	LIYY-2X0.22	DC 24V	0 mm	=A1+S1-X3	Chlor-electrolyser	=A1+S1-18B5	Water softener Magnetic switch brine flow	=A1+S1/18.E5	internal	
-W012	NYSLYÖ-J-3x0.75	DC 24V	0 mm	=A1+S1-X3	Chlor-electrolyser	=A1+S1-19Y6	Brine tank Valve Filling	=A1+S1/19.E6	internal	
-W013	LIYY-2X0.22	DC 24V	0 mm	=Klemmenkasten+ produktbehalter-20K1	storage tank Terminal box	=A1+S1	storage tank Level switch MIN-MIN	=A1+S1/20.F2	internal	
-W014	LIYY-2X0.22	DC 24V	0 mm	=Klemmenkasten+ produktbehalter-20K1	storage tank Terminal box	=A1+S1	storage tank Level switch MIN	=A1+S1/20.F3	internal	
-W015	LIYY-2X0.22	DC 24V	0 mm	=Klemmenkasten+ produktbehalter-20K1	storage tank Terminal box	=A1+S1	storage tank Level switch MAX	=A1+S1/20.F4	internal	
-W016	LIYY-2X0.22	DC 24V	0 mm	=Klemmenkasten+ produktbehalter-20K1	storage tank Terminal box	=A1+S1	storage tank Level switch MAX-MAX	=A1+S1/20.F5	internal	
-W017	LIYY-2X0.22	DC 24V	0 mm	=A1+S1-21B3	Leakage monitoring	=A1+S1-X3	Chlor-electrolyser	=A1+S1/21.E2	internal	
-W018	NYSLYÖ-J-3x0.75	AC 115V	0 mm	=A1+S1-22M2	Fan	=A1+S1-X1	Chlor-electrolyser	=A1+S1/22.E2	internal	
-W019	NYSLYÖ-J-3x1.0	AC 115V	0 mm	=A1+S1-X1	Chlor-electrolyser	=A1+S1-23M2	Brine pump	=A1+S1/23.E2	internal	
-W020	LIYY-5X0.34	DC 24V	0 mm	=A1+S1-23M2	Brine pump	=A1+S1-X3	Chlor-electrolyser	=A1+S1/23.E3	internal	
-W021	LIYY-4X0.34	DC 24V	0 mm	=A1+S1-X3	Chlor-electrolyser	=A1+S1-23M2	Brine pump	=A1+S1/23.E2	internal	
-W022	LIYY-2X0.22	DC 24V	0 mm	=A1+S1-X3	Chlor-electrolyser	=A1+S1-23B7	chlor separator Level switch	=A1+S1/23.E7	internal	
-W023	NYSLYÖ-J-3x0.75	DC 24V	0 mm	=A1+S1-X3	Chlor-electrolyser	=A1+S1-24Y2	Operating water Valve	=A1+S1/24.E2	internal	
-W024	LIYY-3X0.34	DC 24V	0 mm	=A1+S1-24B3	Operating water Flow meter	=A1+S1-X3	Chlor-electrolyser	=A1+S1/24.E3	internal	
-W025	NYSLYÖ-J-3x0.75	DC 24V	0 mm	=A1+S1-X3	Chlor-electrolyser	=A1+S1-24V5	Cooling water Valve	=A1+S1/24.E5	internal	
-W026	LIYY-2X0.22	DC 24V	0 mm	=A1+S1-24B7	Cooling water Magnetic switch	=A1+S1-X3	Chlor-electrolyser	=A1+S1/24.E7	internal	

Plant: =A1 Place: +S1										
Cable list										
Project OSEC-NXT										
Drawing number WAE7179										
order number										
Sheet 4										
Pa. 33										

Cable list									
Cable no.	Cable type	Voltage	Length	from	Designation	to	Designation	Cross reference	Remark
-W027	LIYY-2X0.50	DC 24V	0 mm	=A1+S1-12R7	Chlor-electrolyser	=A1+S1-9A3	PTC Temperature sensor	=A1+S1/12.C7	internal
-W028	LIYY-3X0.34	DC 24V	0 mm	=A1+S1-15B7	Chlor-electrolyser	=A1+S1-X3	Pressure sensor Operating water	=A1+S1/21.E4	internal
-W101	NYV-J-4x10.0	AC 480V	0 mm	=A1+S1-X1	Chlor-electrolyser	=A1+S1	Low-voltage distribution	=A1+S1/11.E1	to be provided locally, Main power supply
-W102	NYSLYÖ-J-4x1.0	DC 24V	0 mm	=A1+S1-X1	Chlor-electrolyser	=A1+S1	Chlorine gas leak detector	=A1+S1/14.E5	to be provided locally, Chlorine gas leak detector
-W103	NYSLYÖ-J-5x1.0	DC 24V	0 mm	=A1+S1-X3	Chlor-electrolyser	=A1+S1	ext. Water softener	=A1+S1/18.E7	to be provided locally, ext. Water softener
-W104	LIYY-4X0.22	DC 24V	0 mm	=A1+S1-19B2	Level switch Brine tank	=A1+S1-X3	Chlor-electrolyser	=A1+S1/19.E2	to be provided locally, Brine tank
-W105	NYSLYÖ-J-12x1.0	DC 24V	0 mm	=A1+S1-19B2 produktehalter-20X1	storage tank Terminal box	=A1+S1-X3	Chlor-electrolyser	=A1+S1/20.E1	to be provided locally, storage tank
-W106	LIYY-2X0.22	DC 24V	0 mm	=A1+S1	Leakage monitoring	=A1+S1	storage tank	=A1+S1/20.E7	to be provided locally, storage tank
-W107	LIYY-2X0.22	DC 24V	0 mm	=A1+S1	Leakage monitoring	=A1+S1-X3	Chlor-electrolyser	=A1+S1/21.E4	to be provided locally, Discharge range
-W108	LIYY-2X0.22	DC 24V	0 mm	=A1+S1-22B7	Air flow monitor	=A1+S1-X3	Chlor-electrolyser	=A1+S1/22.E7	to be provided locally, Air flow monitor
-W109	NYSLYÖ-J-3x1.0	DC 24V	0 mm	=A1+S1-22B7 vakuummess-X, leittechnik	auto. de-aeration vacuum pump	=A1+S1-X1	Chlor-electrolyser	=A1+S1/25.E2	to be provided locally, auto. de-aeration
-W110	NYSLYÖ-J-3x1.0	DC 24V	0 mm	=A1+S1-X3	Chlor-electrolyser	=A1+S1-25V5	auto. de-aeration Valve	=A1+S1/25.E5	to be provided locally, auto. de-aeration
-W111	NYSLYÖ-J-3x1.0	DC 24V	0 mm	=A1+S1-25V6	auto. de-aeration Valve	=A1+S1-X3	Chlor-electrolyser	=A1+S1/25.E6	to be provided locally, auto. de-aeration
-W112	LIYY-3X0.34	DC 24V	0 mm	=A1+S1-25B7	auto. de-aeration Level switch MIN - MAX	=A1+S1-X3	Chlor-electrolyser	=A1+S1/25.E7	to be provided locally, auto. de-aeration
-W113	NYSLYÖ-J-3x0.75	DC 24V	0 mm	=A1+S1-X3	Chlor-electrolyser	=A1+S1	control room	=A1+S1/26.E2	to be provided locally, release Preparation
-W114	NYSLYÖ-J-3x0.75	DC 24V	0 mm	=A1+S1-X3	Chlor-electrolyser	=A1+S1	control room	=A1+S1/26.E4	to be provided locally, Remote shutdown
-W115	NYSLYÖ-J-4x1.0	DC 24V	0 mm	=A1+S1-27H1	control room	=A1+S1-X5	Chlor-electrolyser	=A1+S1/27.E1	to be provided locally, Fish/Ben combination
-W116	NYSLYÖ-J-18x1.0	DC 24V	0 mm	=A1+S1-27H1 leittechnik	control room	=A1+S1-X5	Chlor-electrolyser	=A1+S1/27.E3	to be provided locally, message interface

Plant: =A1
Place: +S1

Project OSEC-NXT
order number WAE7179

Cable list
internal / external

evoqua WATER TECHNOLOGIES
Original Ref. J. Ref. by

Design Center
Prof. / Sales
Date
release

Issue Revision Date Name Norm


1.8.08.10
rfb

1.7.10.12 uz
3.06.14 fb
3.01.16 fb

Checked

Project OSEC-NXT
order number WAE7179

Drawing number
33
Pa.

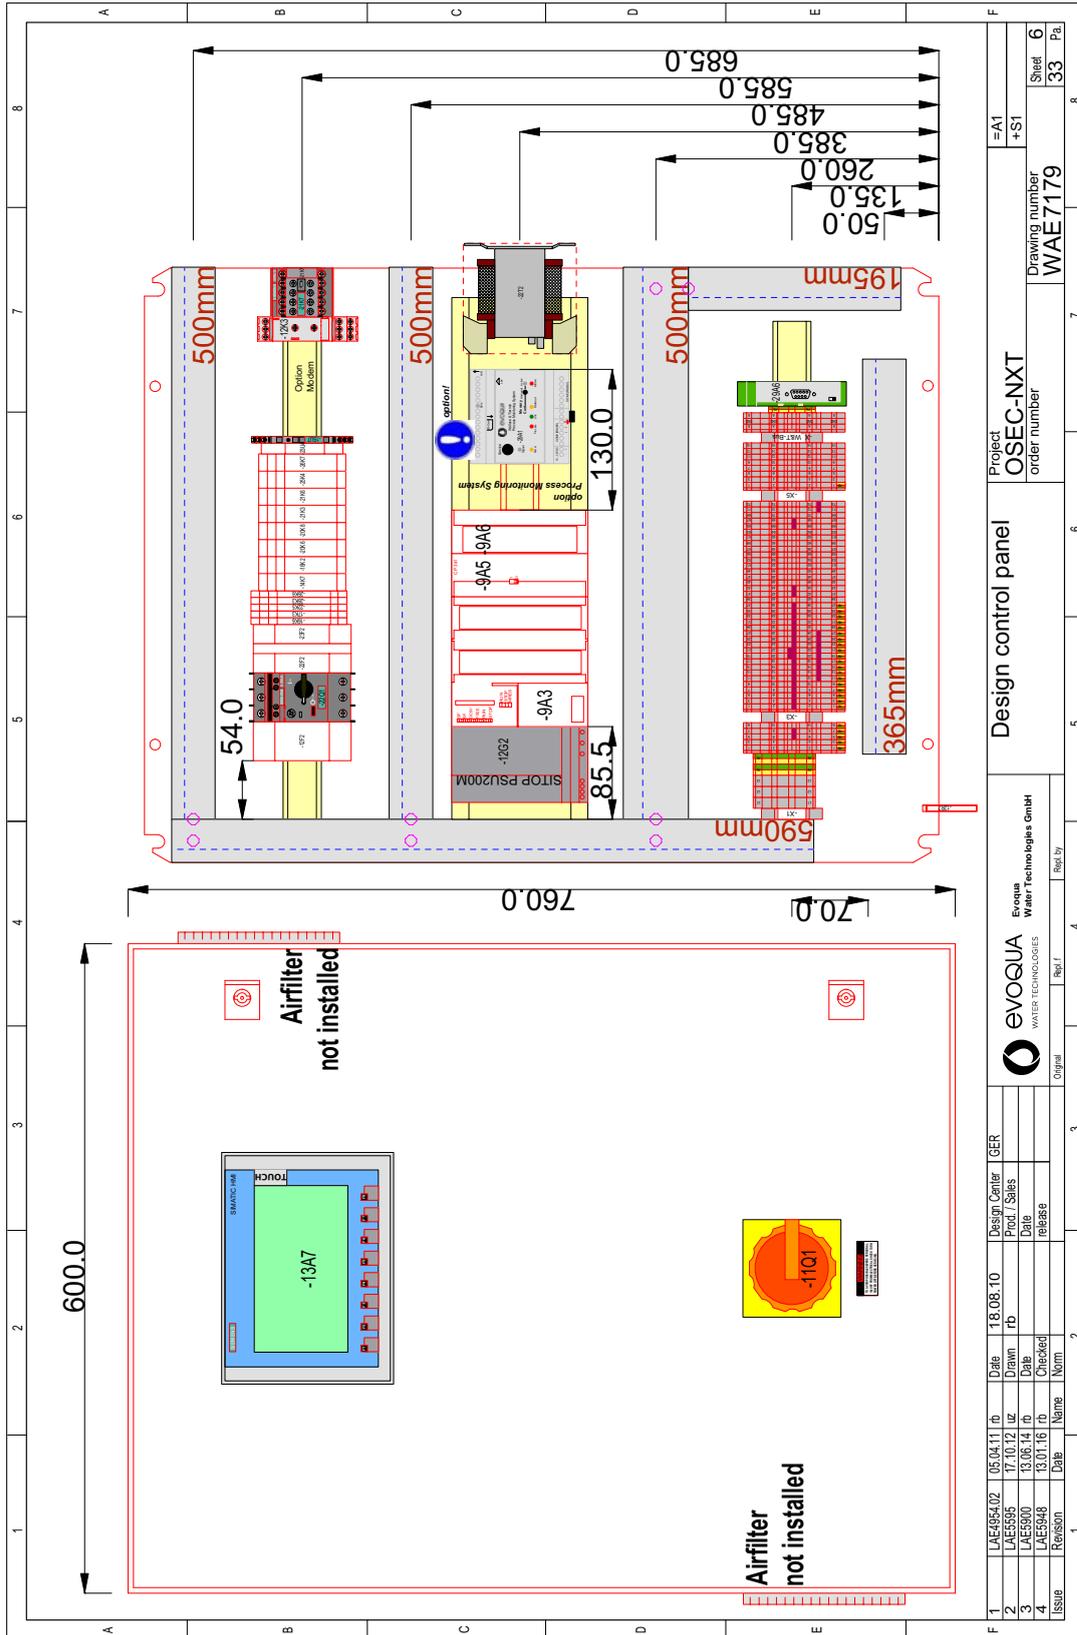

12345678

ABCDEF

This page is left
free intentionally

ABCDEF

12345678

List of the signs

List of the signs

Project
OSEC-NXT
order number

Drawing number
WAE7179

evoQUA
WATER TECHNOLOGIES



Evolut
Water Technologies GmbH

Original

Red. I. Red. by

1 LAF684/02 1.05.04.11 rb
2 LAF595 17.10.12 uz
3 LAF500 13.06.14 rb
4 LAF648 13.01.16 rb

Date 18.08.10
Drawn rb
Date
Checked

Design Center GFR
Prct./Sales
Date
release

ISSUE Revision Date Name

Norm

Material:
dimensions:
Basis:
Font:
Height of Font:


12345678


ABCDEF

This page is left
free intentionally

1	2	3	4	5	6	7	8
A	B	C	D	E	F		
				free sheet		Project OSEC-NXT	
						Drawing number WAE7179	
						=A1 +S1	
						Sheet 8	
						Pa. 33	
						8	


1	2	3	4	5	6	7	8
A	B	C	D	E	F		
				 EVOQUA WATER TECHNOLOGIES		EVOQUA Water Technologies GmbH	
						Original Ref. I Ref. II Ref. by	
						Design Center GER	
						Date 18.08.10	
						Drawn rb	
						Date 17.10.12	
						Checked rb	
						Date 13.06.14	
						Checked rb	
						Date 13.01.16	
						Name Norm.	
						Revision 2	
						Issue 1	

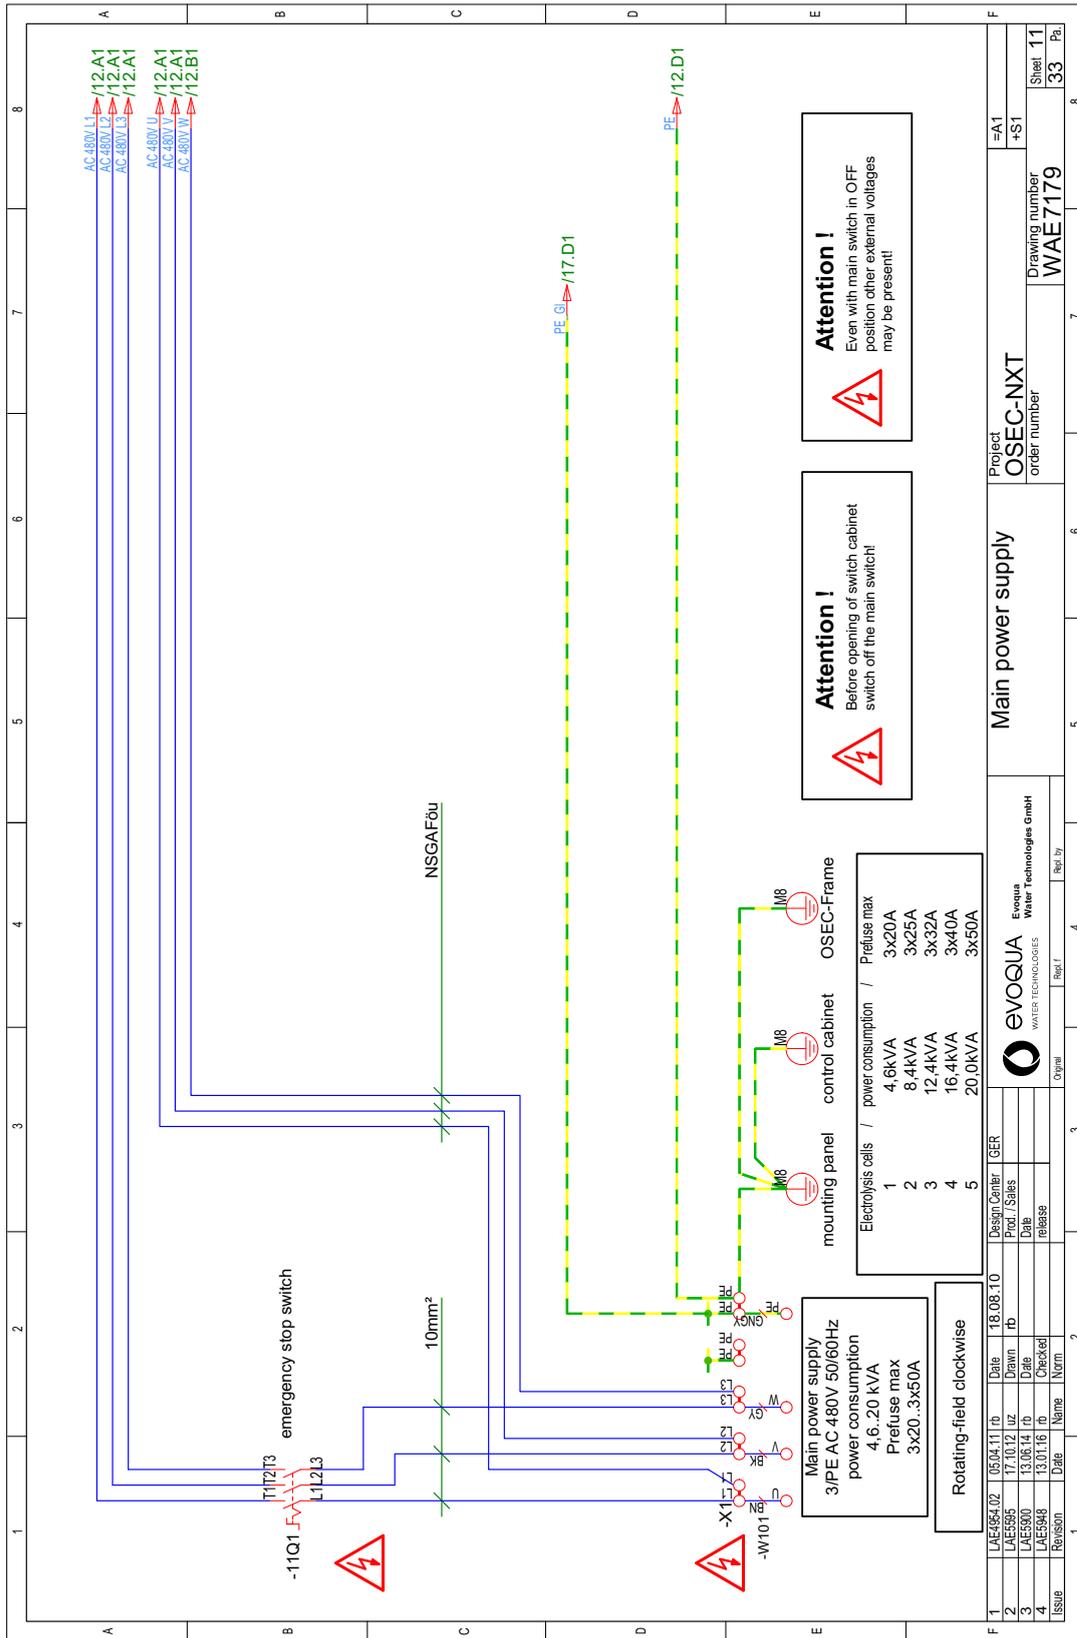

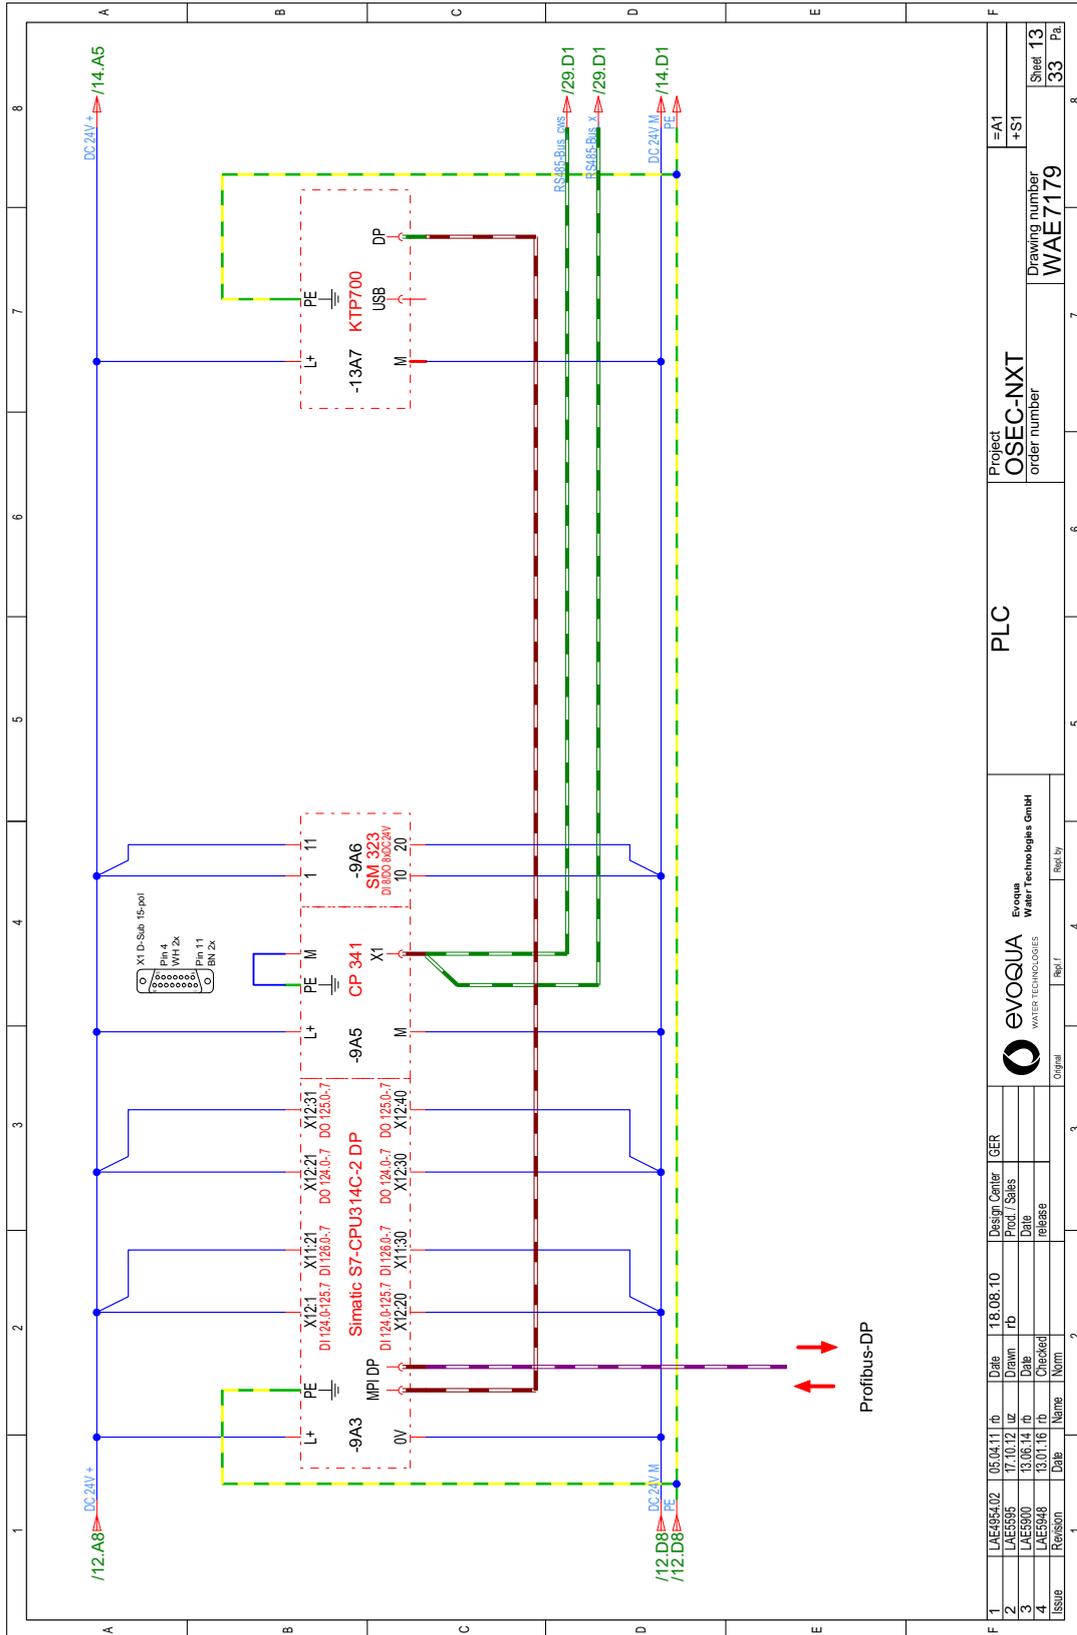


Project		=A1	
OSEC-NXT		+S1	
order number		Drawing number	
WAE7179		Sheet 13	
		33 Pa.	


PLC		8	
EVOQUA		Evoqua Water Technologies GmbH	
WATER TECHNOLOGIES		Original	
Date		18.08.10	
Design Center		GER	
Prof./Sales		rb	
Date		13.06.14	
release			
Date		13.01.16	
Check		Norm	
Name			
Revision			

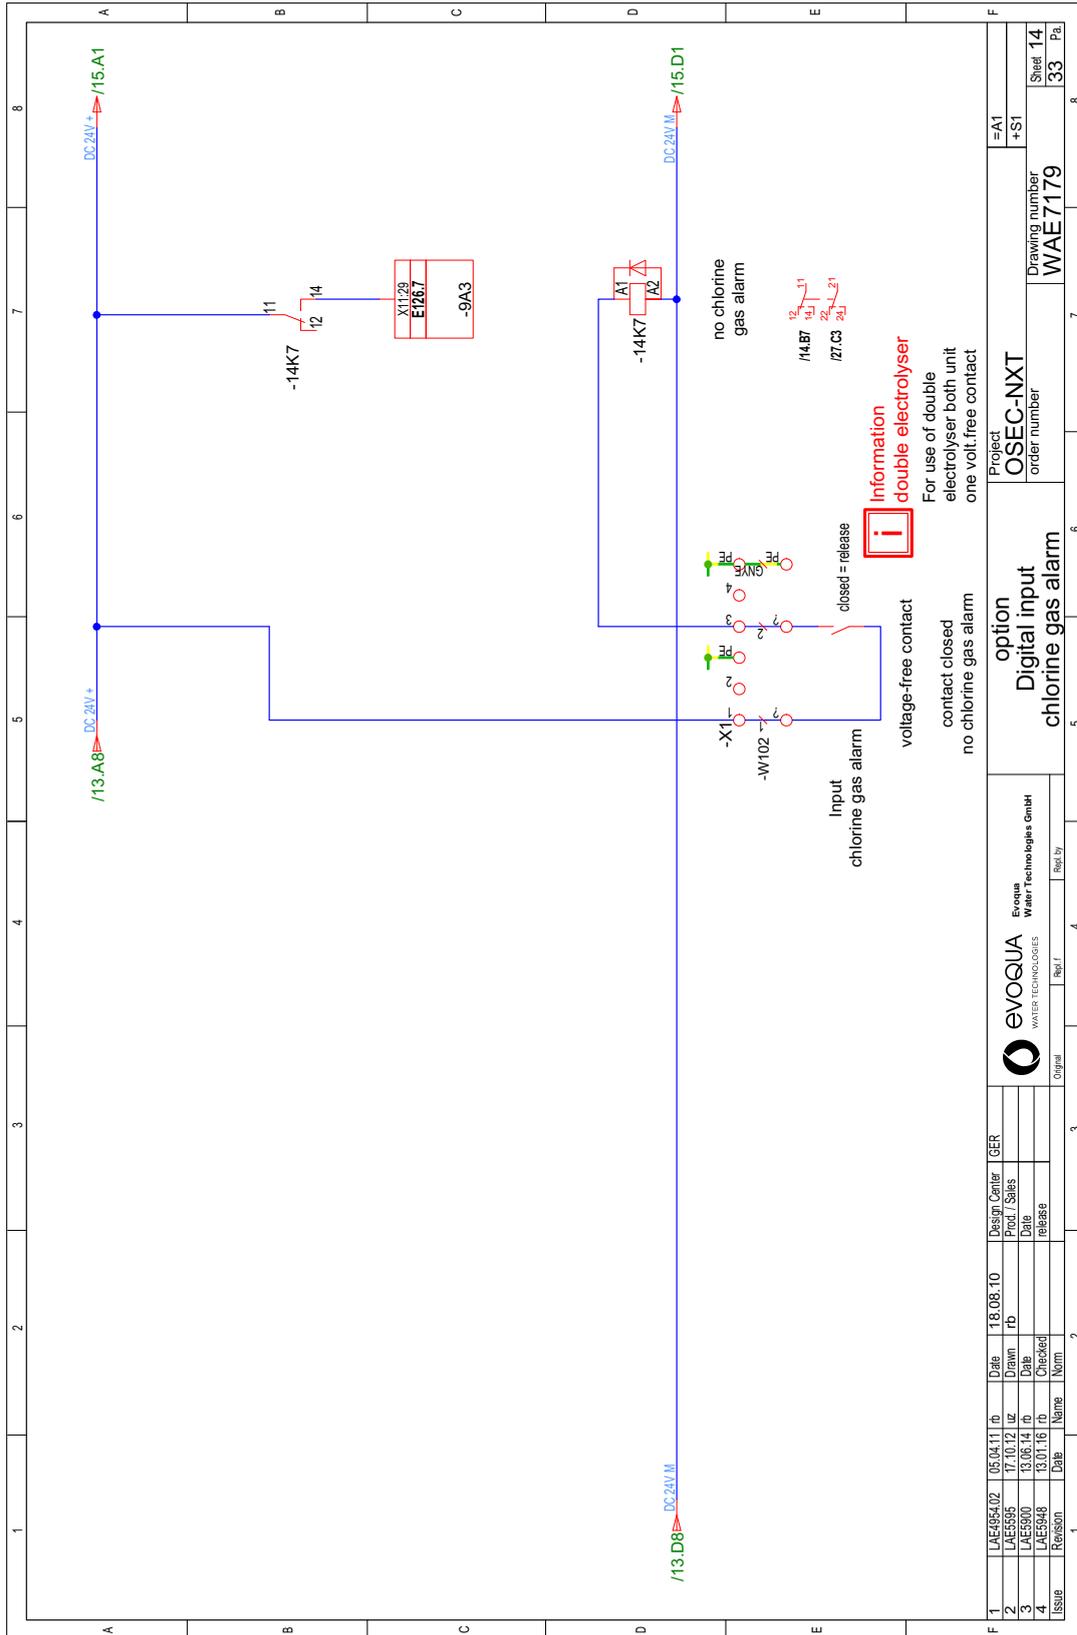

Project		=A1	
OSEC-NXT		+S1	
order number		Drawing number	
WAE7179		WAE7179	
Project		Sheet	
OSEC-NXT		14	
order number		Pa.	
WAE7179		33	

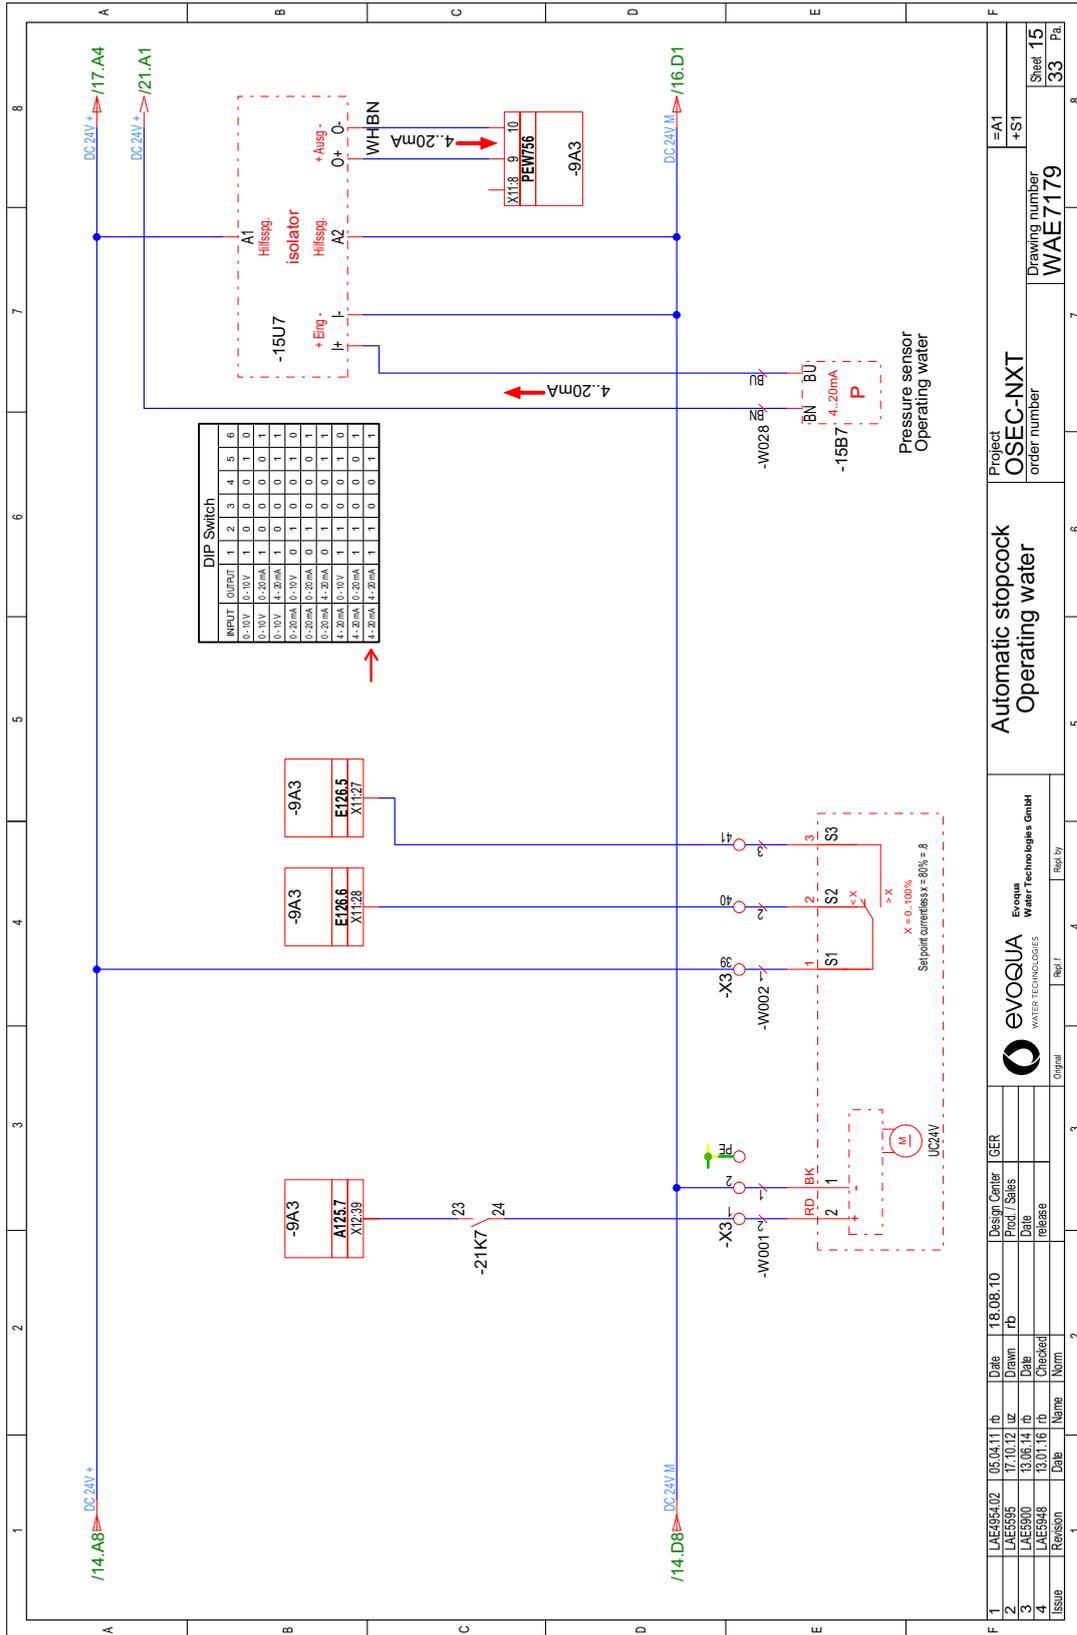


Project		Automatic stopcock		Order number		Drawing number	
OSEC-NXT		Operating water		WAE7179		WAE7179	
Sheet		15		33		Pa.	
Issue		Revision		Name		Date	
1		18.08.10		GER		Design Center	
2		rb		Prof./Sales		Date	
3		17.10.12		uz		Date	
4		13.06.14		fb		Date	
5		13.01.16		fb		Date	
6		13.01.16		fb		Date	
7		13.01.16		fb		Date	
8		13.01.16		fb		Date	
9		13.01.16		fb		Date	
10		13.01.16		fb		Date	
11		13.01.16		fb		Date	
12		13.01.16		fb		Date	
13		13.01.16		fb		Date	
14		13.01.16		fb		Date	
15		13.01.16		fb		Date	
16		13.01.16		fb		Date	
17		13.01.16		fb		Date	
18		13.01.16		fb		Date	
19		13.01.16		fb		Date	
20		13.01.16		fb		Date	
21		13.01.16		fb		Date	
22		13.01.16		fb		Date	
23		13.01.16		fb		Date	
24		13.01.16		fb		Date	
25		13.01.16		fb		Date	
26		13.01.16		fb		Date	
27		13.01.16		fb		Date	
28		13.01.16		fb		Date	
29		13.01.16		fb		Date	
30		13.01.16		fb		Date	
31		13.01.16		fb		Date	
32		13.01.16		fb		Date	
33		13.01.16		fb		Date	
34		13.01.16		fb		Date	
35		13.01.16		fb		Date	
36		13.01.16		fb		Date	
37		13.01.16		fb		Date	
38		13.01.16		fb		Date	
39		13.01.16		fb		Date	
40		13.01.16		fb		Date	
41		13.01.16		fb		Date	
42		13.01.16		fb		Date	
43		13.01.16		fb		Date	
44		13.01.16		fb		Date	
45		13.01.16		fb		Date	
46		13.01.16		fb		Date	
47		13.01.16		fb		Date	
48		13.01.16		fb		Date	
49		13.01.16		fb		Date	
50		13.01.16		fb		Date	
51		13.01.16		fb		Date	
52		13.01.16		fb		Date	
53		13.01.16		fb		Date	
54		13.01.16		fb		Date	
55		13.01.16		fb		Date	
56		13.01.16		fb		Date	
57		13.01.16		fb		Date	
58		13.01.16		fb		Date	
59		13.01.16		fb		Date	
60		13.01.16		fb		Date	
61		13.01.16		fb		Date	
62		13.01.16		fb		Date	
63		13.01.16		fb		Date	
64		13.01.16		fb		Date	
65		13.01.16		fb		Date	
66		13.01.16		fb		Date	
67		13.01.16		fb		Date	
68		13.01.16		fb		Date	
69		13.01.16		fb		Date	
70		13.01.16		fb		Date	
71		13.01.16		fb		Date	
72		13.01.16		fb		Date	
73		13.01.16		fb		Date	
74		13.01.16		fb		Date	
75		13.01.16		fb		Date	
76		13.01.16		fb		Date	
77		13.01.16		fb		Date	
78		13.01.16		fb		Date	
79		13.01.16		fb		Date	
80		13.01.16		fb		Date	
81		13.01.16		fb		Date	
82		13.01.16		fb		Date	
83		13.01.16		fb		Date	
84		13.01.16		fb		Date	
85		13.01.16		fb		Date	
86		13.01.16		fb		Date	
87		13.01.16		fb		Date	
88		13.01.16		fb		Date	
89		13.01.16		fb		Date	
90		13.01.16		fb		Date	
91		13.01.16		fb		Date	
92		13.01.16		fb		Date	
93		13.01.16		fb		Date	
94		13.01.16		fb		Date	
95		13.01.16		fb		Date	
96		13.01.16		fb		Date	
97		13.01.16		fb		Date	
98		13.01.16		fb		Date	
99		13.01.16		fb		Date	
100		13.01.16		fb		Date	

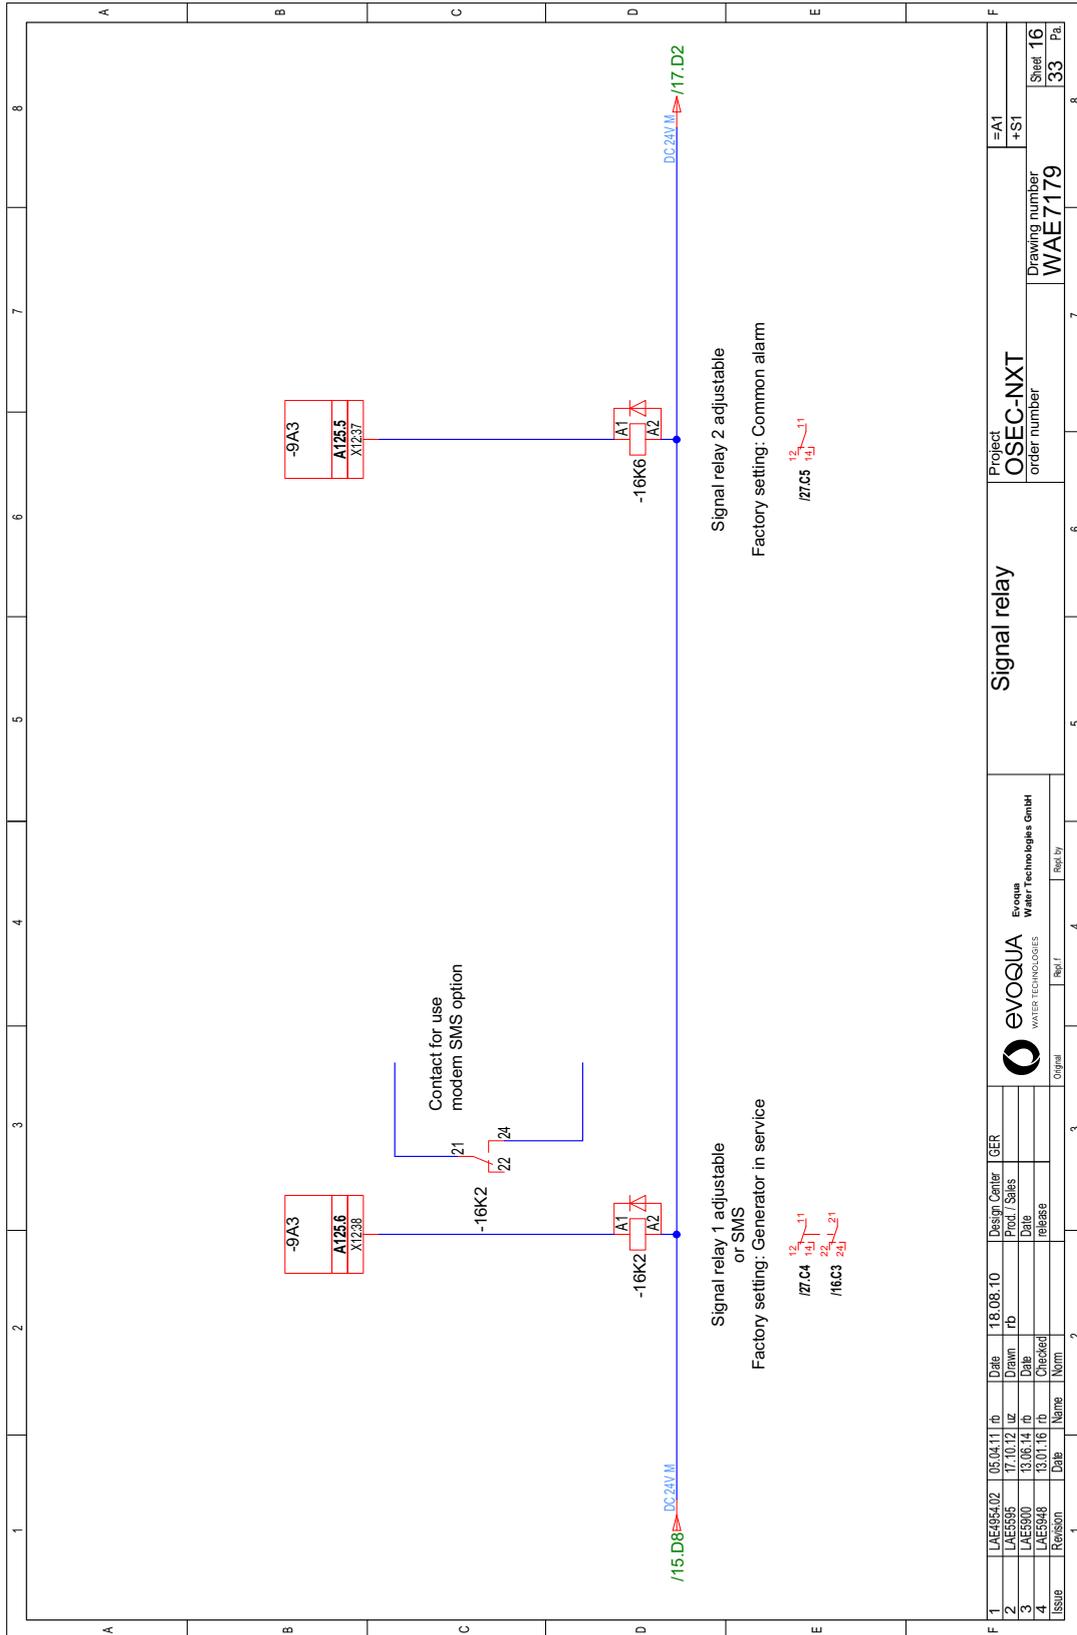


Project		OSEC-NXT		Drawing number		WAE7179	
order number				Sheet		16	
				33		Pa.	


EVOQUA		Evoqua Water Technologies GmbH	
WATER TECHNOLOGIES		Original	
Repl. 1		Repl. 2	


1	LAE4954.02	05.04.11	rb	Date	18.08.10	Design Center	GFR
2	LAE5595	17.10.12	uz	Drawn	rb	Prof. / Series	
3	LAE5900	13.06.14	fb	Date		Date	release
4	LAE5948	13.01.16	fb	Check		Check	
Issue	Revision	Date	Name	Norm			

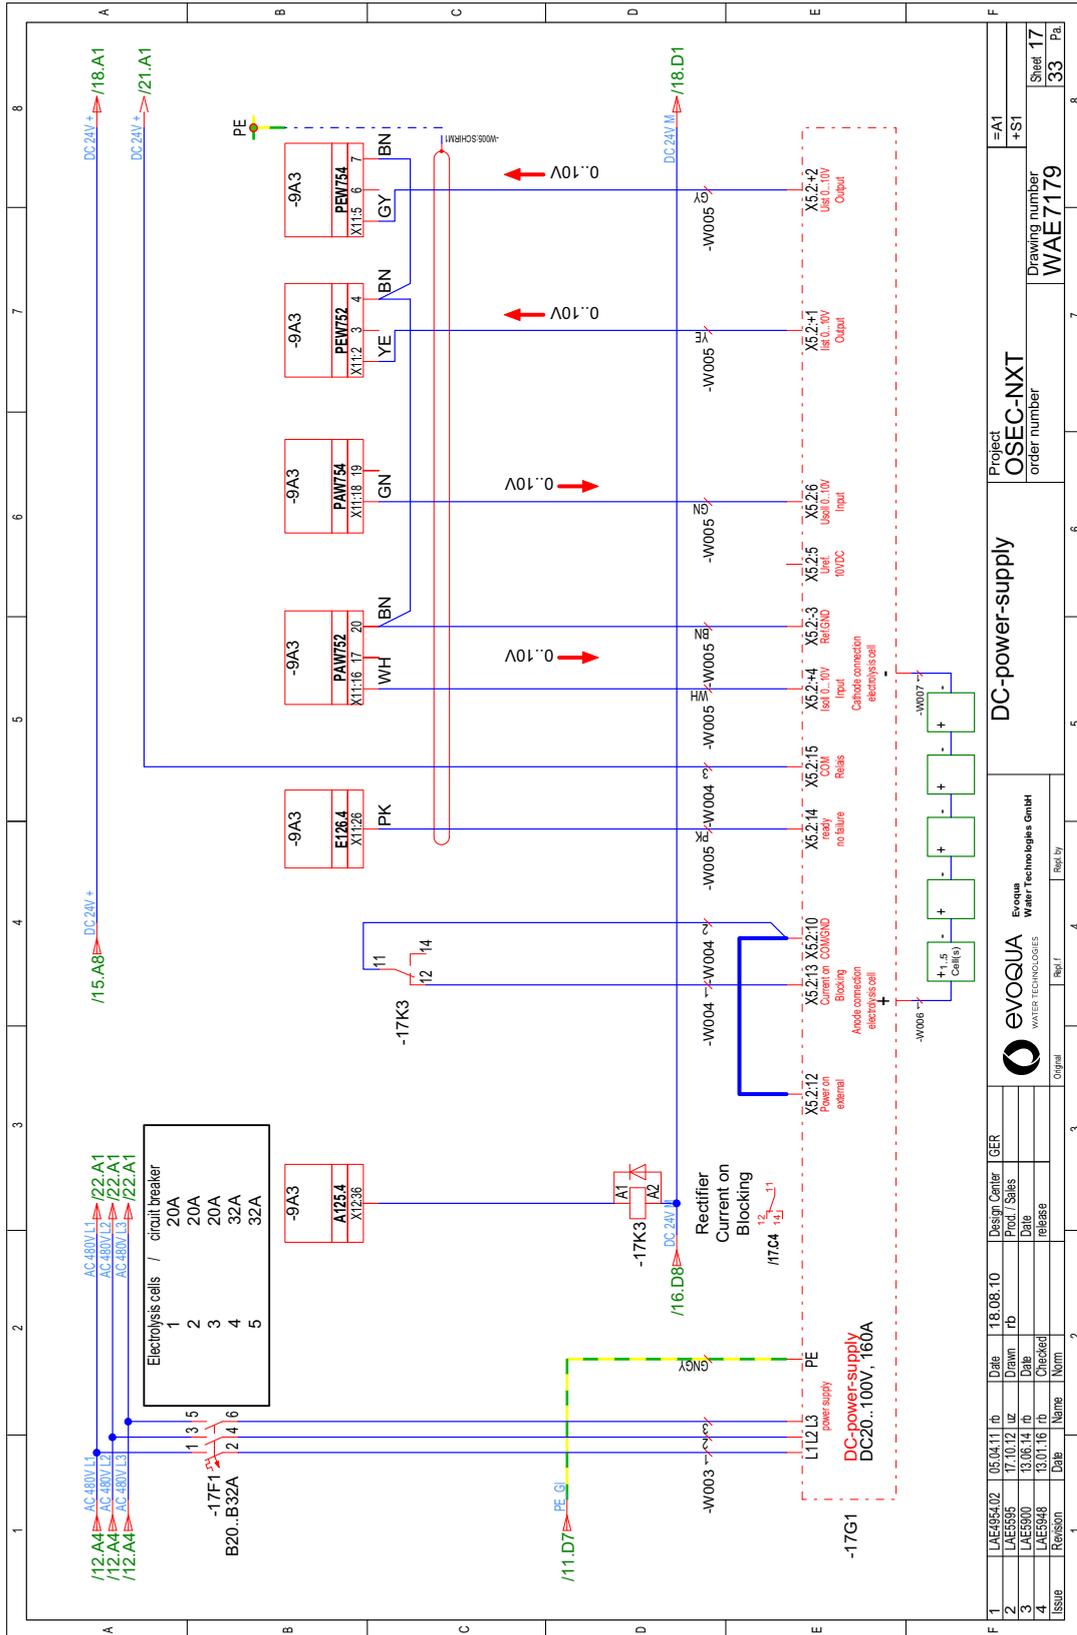


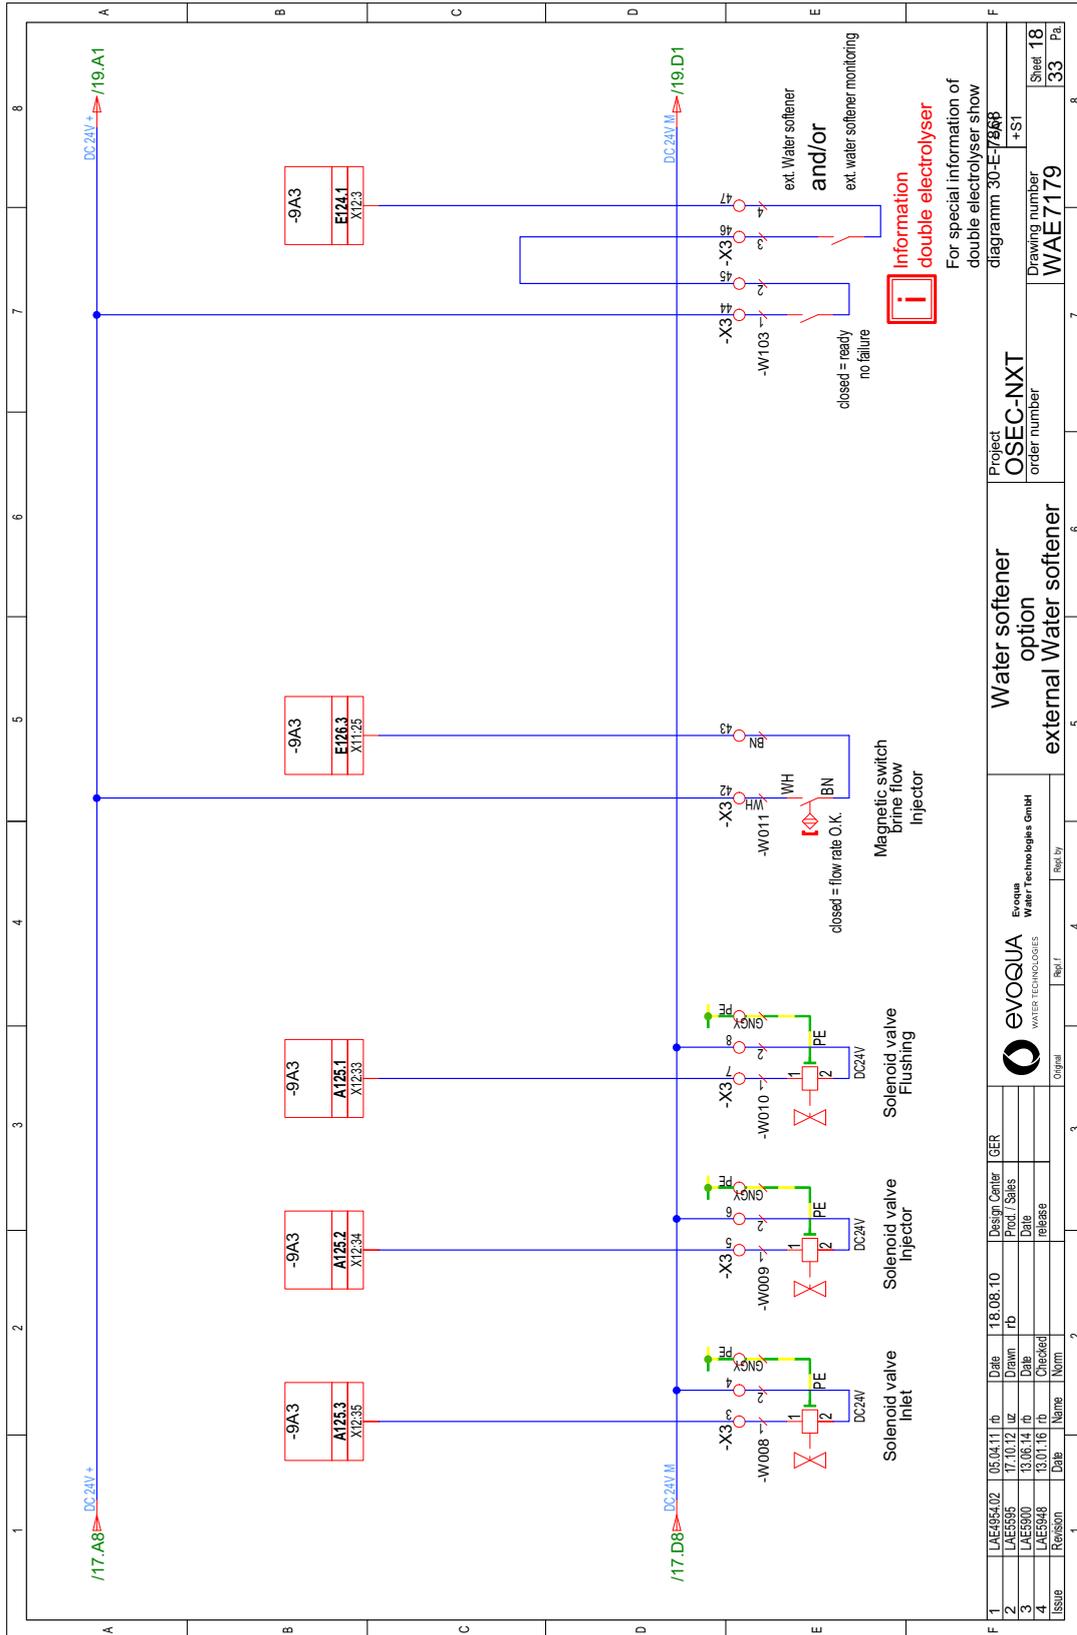


Project		OSEC-NXT		Water softener option		external Water softener	
Order number		WAE7179		Order number		WAE7179	
Drawing number		33		Sheet		18	
Pa.		33		Pa.		18	
Design Center		T GER		Date		18.08.10	
Prof./Sales		rb		Date		17.10.12	
Date		release		Date		13.06.14	
Date		release		Date		13.01.16	
Issue		Revision		Name		Norm	
1		LAE4954.02		05.04.11		ib	
2		LAE5595		17.10.12		uz	
3		LAE5900		13.06.14		ib	
4		LAE5948		13.01.16		ib	

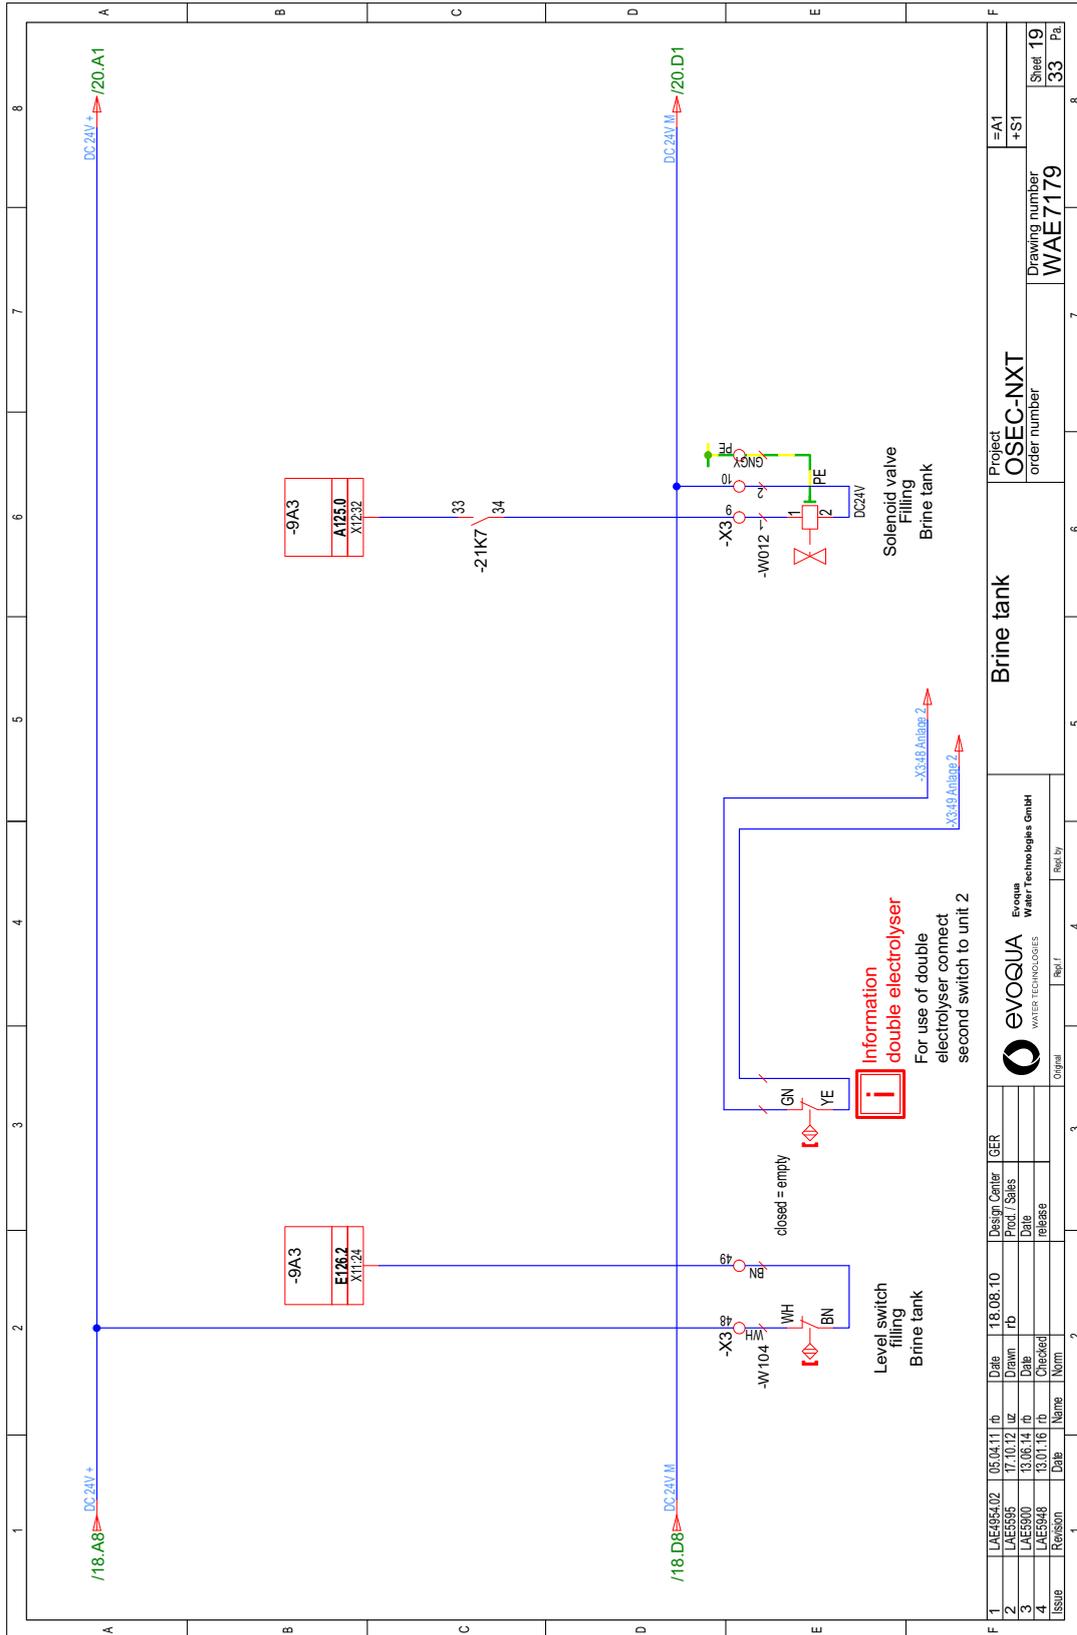


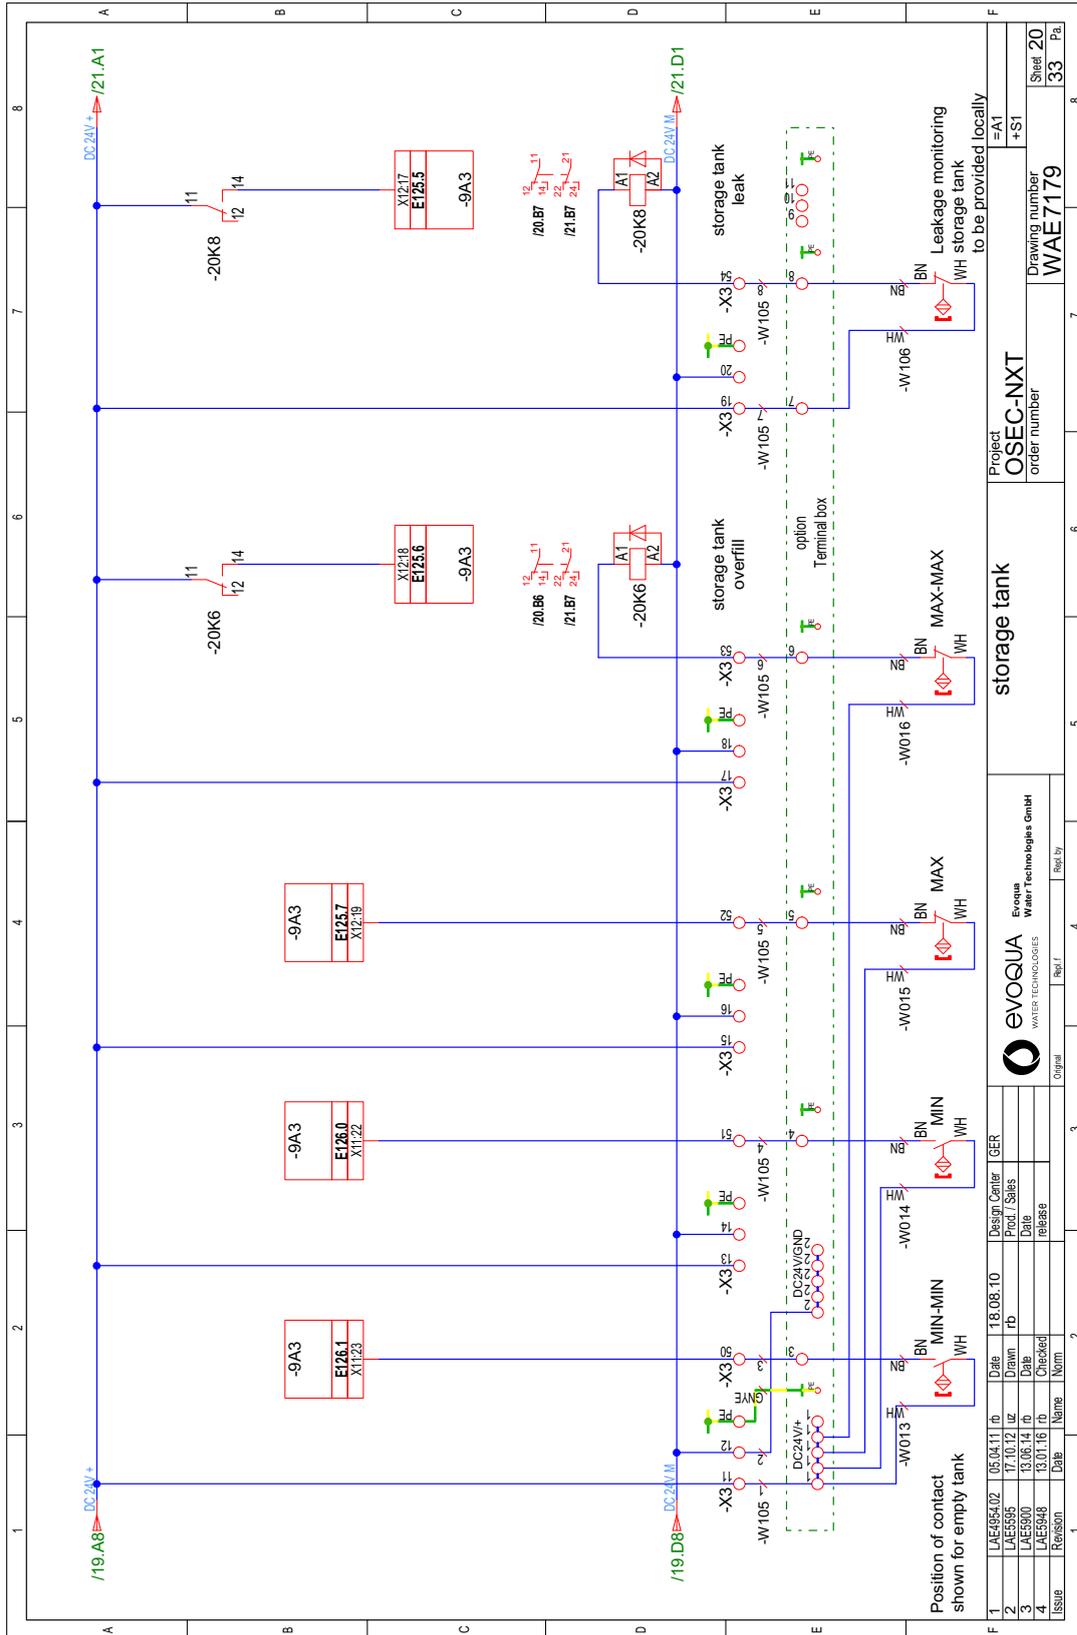

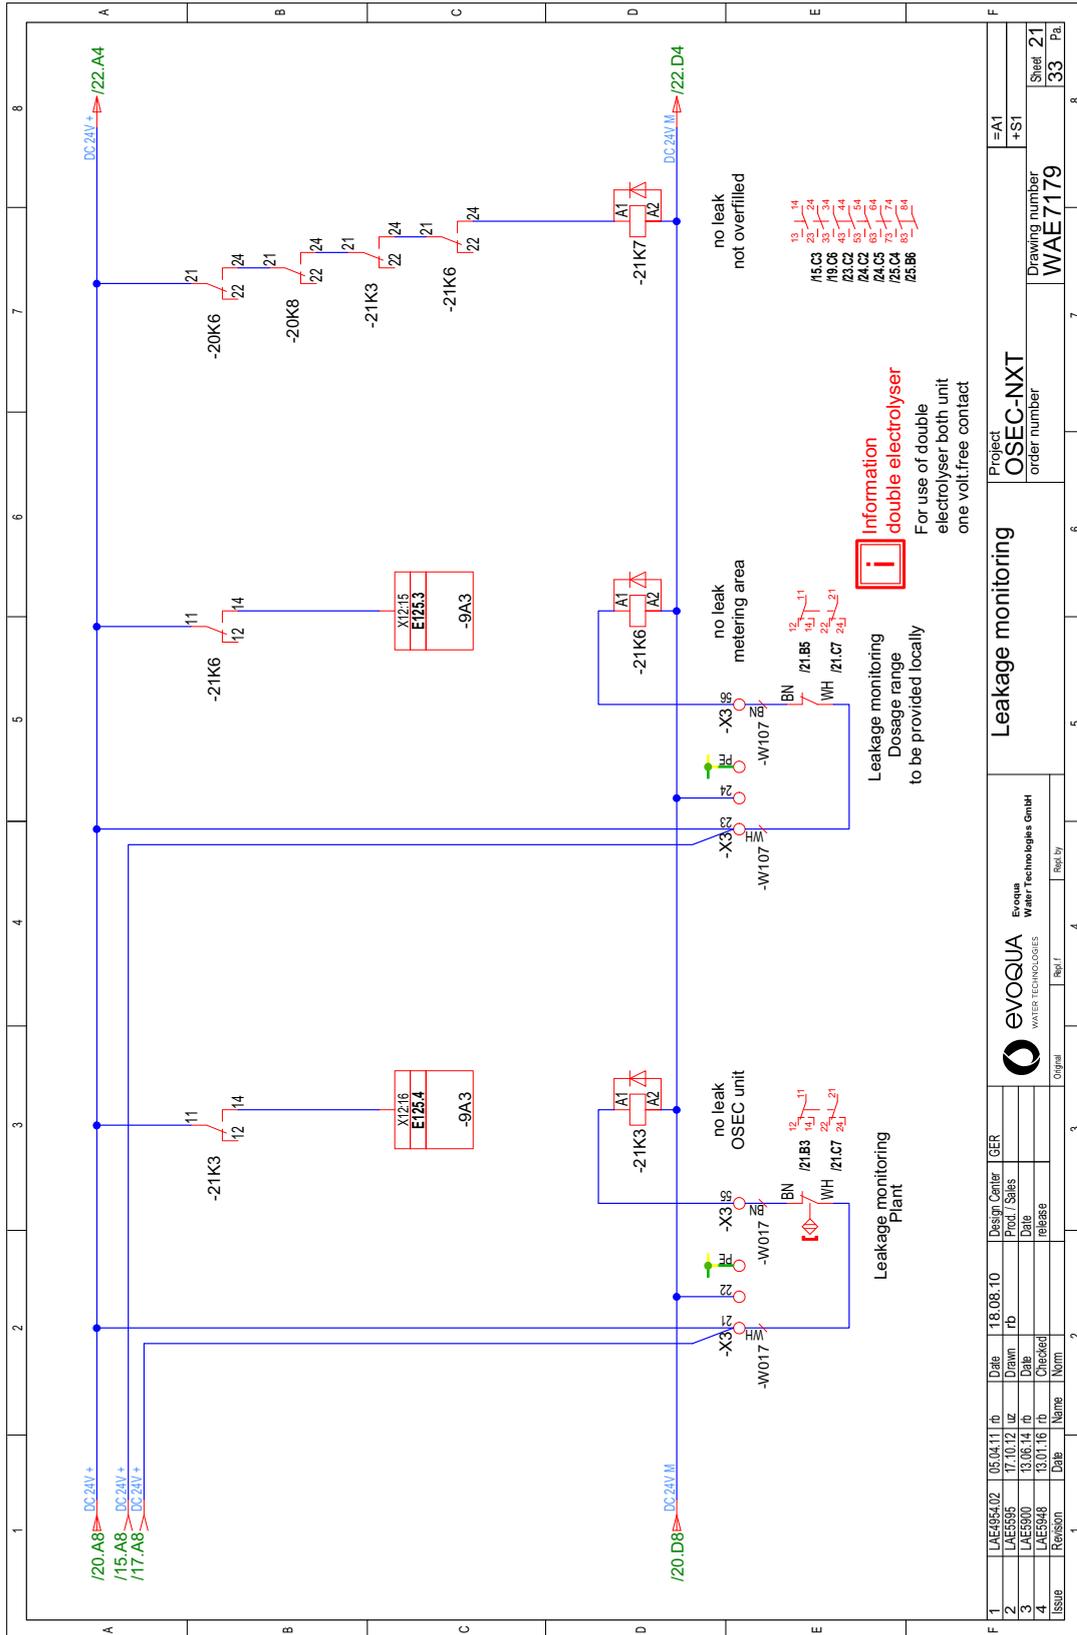

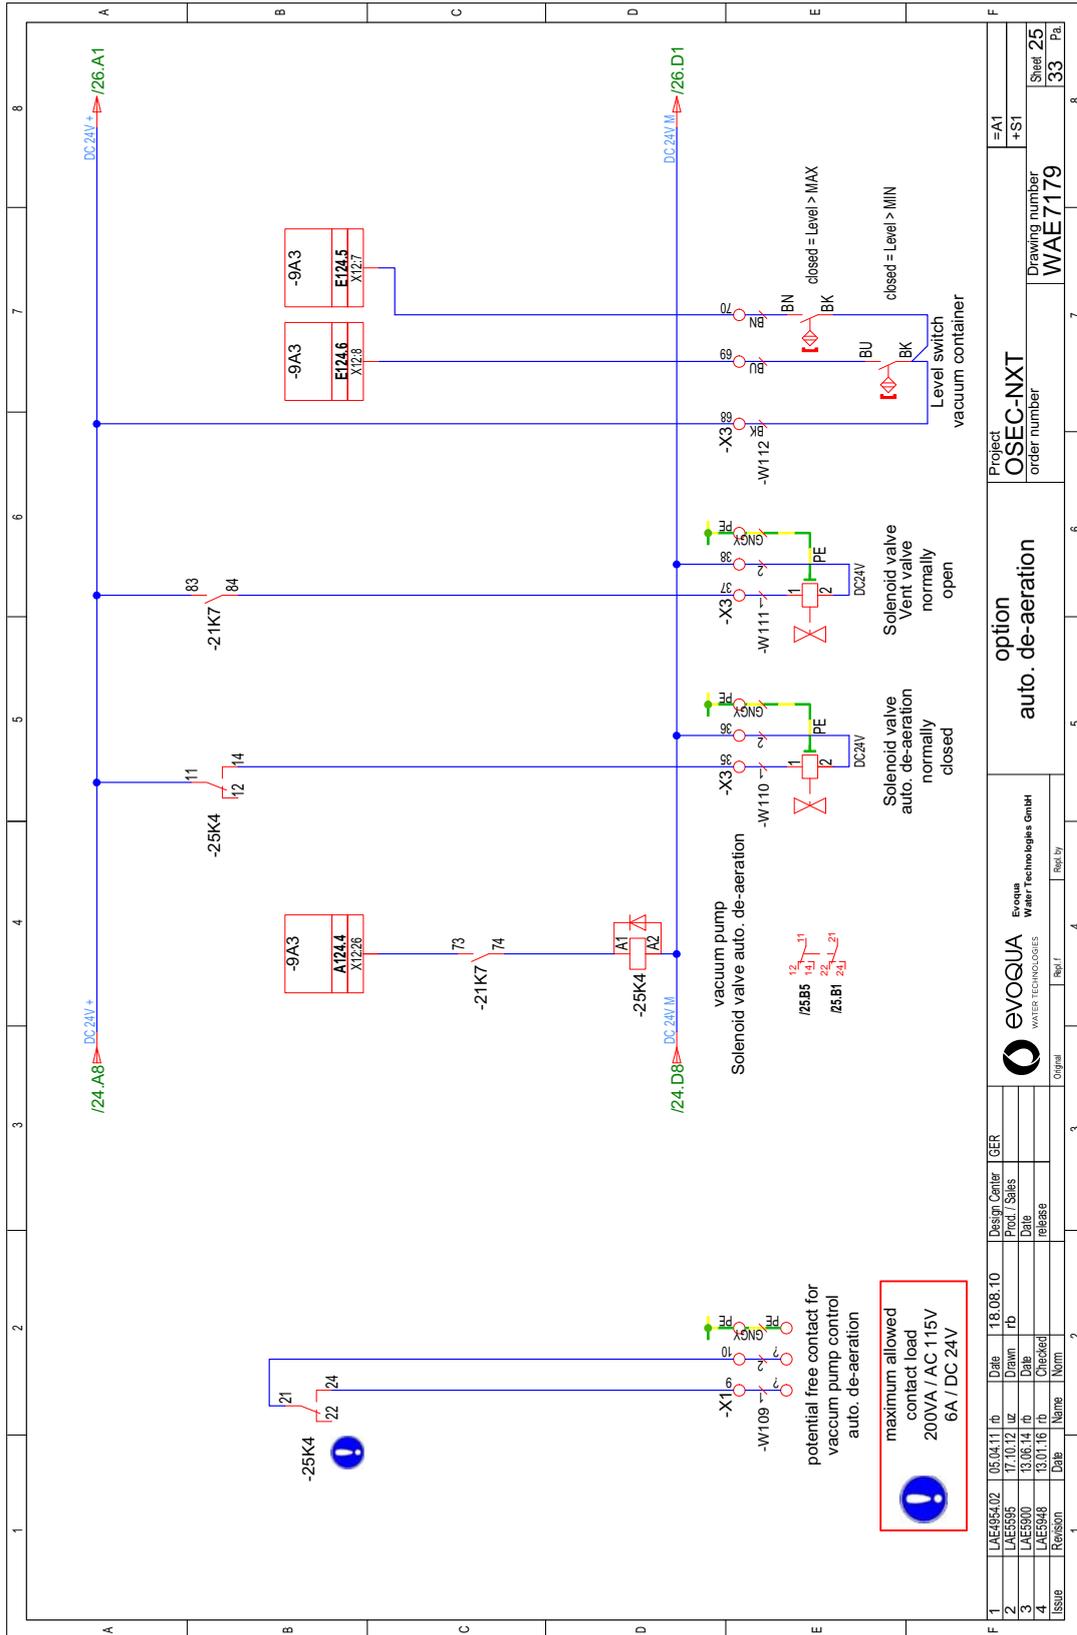

Project		OSEC-NXT		Drawing number		WAE7179	
order number				Sheet		25	
				33		Pa.	
Project		OSEC-NXT		Drawing number		WAE7179	
order number				Sheet		25	
				33		Pa.	
Design Center		GER		Date		18.08.10	
Prof./Sales		rb		Date		release	
Issue		Revision		Name		Norm	
1		LAE494.02		05.04.11		rb	
2		LAE5595		17.10.12		uz	
3		LAE5900		13.06.14		rb	
4		LAE5948		13.07.16		rb	

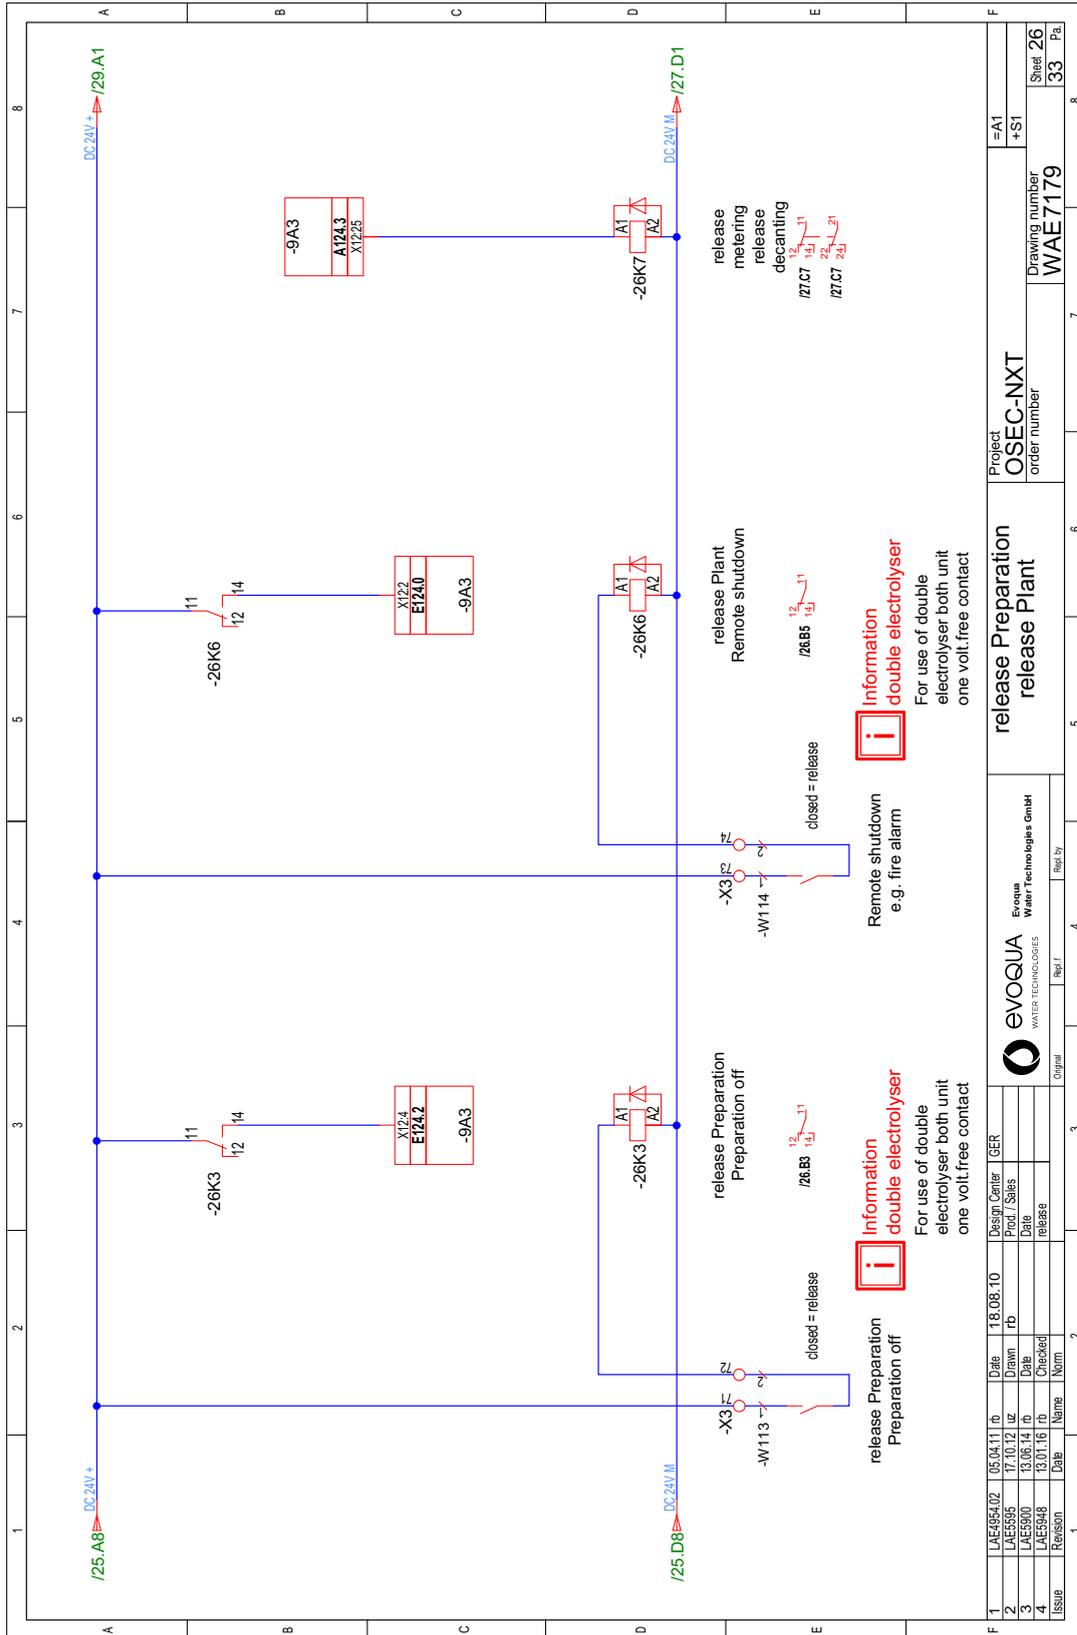


Project		OSEC-NXT		Drawing number		WAE7179	
order number				Sheet		26	
				Pa.		33	

EVOQUA		Evoqua Water Technologies GmbH	
WATER TECHNOLOGIES		Original	
Ref. I.		Ref. J.	
Date		18.08.10	
Design Center		GER	
Drawn		rb	
Prof./Sales		uz	
Date		17.10.12	
Date		13.06.14	
Check		fb	
Date		13.01.16	
Name		fb	
Norm			
Issue		2	

Project		OSEC-NXT	
order number		WAE7179	
=A1		+S1	

This page is left
free intentionally

1	2	3	4	5	6	7	8
A	B	C	D	E	F		
1	2	3	4	5	6	7	8
A	B	C	D	E	F		
1	2	3	4	5	6	7	8
A	B	C	D	E	F		
1	2	3	4	5	6	7	8
A	B	C	D	E	F		
1	2	3	4	5	6	7	8
A	B	C	D	E	F		
1	2	3	4	5	6	7	8
A	B	C	D	E	F		
1	2	3	4	5	6	7	8
A	B	C	D	E	F		
1	2	3	4	5	6	7	8
A	B	C	D	E	F		
1	2	3	4	5	6	7	8
A	B	C	D	E	F		
1	2	3	4	5	6	7	8
A	B	C	D	E	F		
1	2	3	4	5	6	7	8
A	B	C	D	E	F		
1	2	3	4	5	6	7	8
A	B	C	D	E	F		
1	2	3	4	5	6	7	8
A	B	C	D	E	F		
1	2	3	4	5	6	7	8
A	B	C	D	E	F		
1	2	3	4	5	6	7	8
A	B	C	D	E	F		
1	2	3	4	5	6	7	8
A	B	C	D	E	F		
1	2	3	4	5	6	7	8
A	B	C	D	E	F		
1	2	3	4	5	6	7	8
A	B	C	D	E	F		
1	2	3	4	5	6	7	8
A	B	C	D	E	F		
1	2	3	4	5	6	7	8
A	B	C	D	E	F		
1	2	3	4	5	6	7	8
A	B	C	D	E	F		
1	2	3	4	5	6	7	8
A	B	C	D	E	F		
1	2	3	4	5	6	7	8
A	B	C	D	E	F		
1	2	3	4	5	6	7	8
A	B	C	D	E	F		
1	2	3	4	5	6	7	8
A	B	C	D	E	F		
1	2	3	4	5	6	7	8
A	B	C	D	E	F		
1	2	3	4	5	6	7	8
A	B	C	D	E	F		
1	2	3	4	5	6	7	8
A	B	C	D	E	F		
1	2	3	4	5	6	7	8
A	B	C	D	E	F		
1	2	3	4	5	6	7	8
A	B	C	D	E	F		
1	2	3	4	5	6	7	8
A	B	C	D	E	F		
1	2	3	4	5	6	7	8
A	B	C	D	E	F		
1	2	3	4	5	6	7	8
A	B	C	D	E	F		
1	2	3	4	5	6	7	8
A	B	C	D	E	F		
1	2	3	4	5	6	7	8
A	B	C	D	E	F		
1	2	3	4	5	6	7	8
A	B	C	D	E	F		
1	2	3	4	5	6	7	8
A	B	C	D	E	F		
1	2	3	4	5	6	7	8
A	B	C	D	E	F		
1	2	3	4	5	6	7	8
A	B	C	D	E	F		
1	2	3	4	5	6	7	8
A	B	C	D	E	F		
1	2	3	4	5	6	7	8
A	B	C	D	E	F		
1	2	3	4	5	6	7	8
A	B	C	D	E	F		
1	2	3	4</				

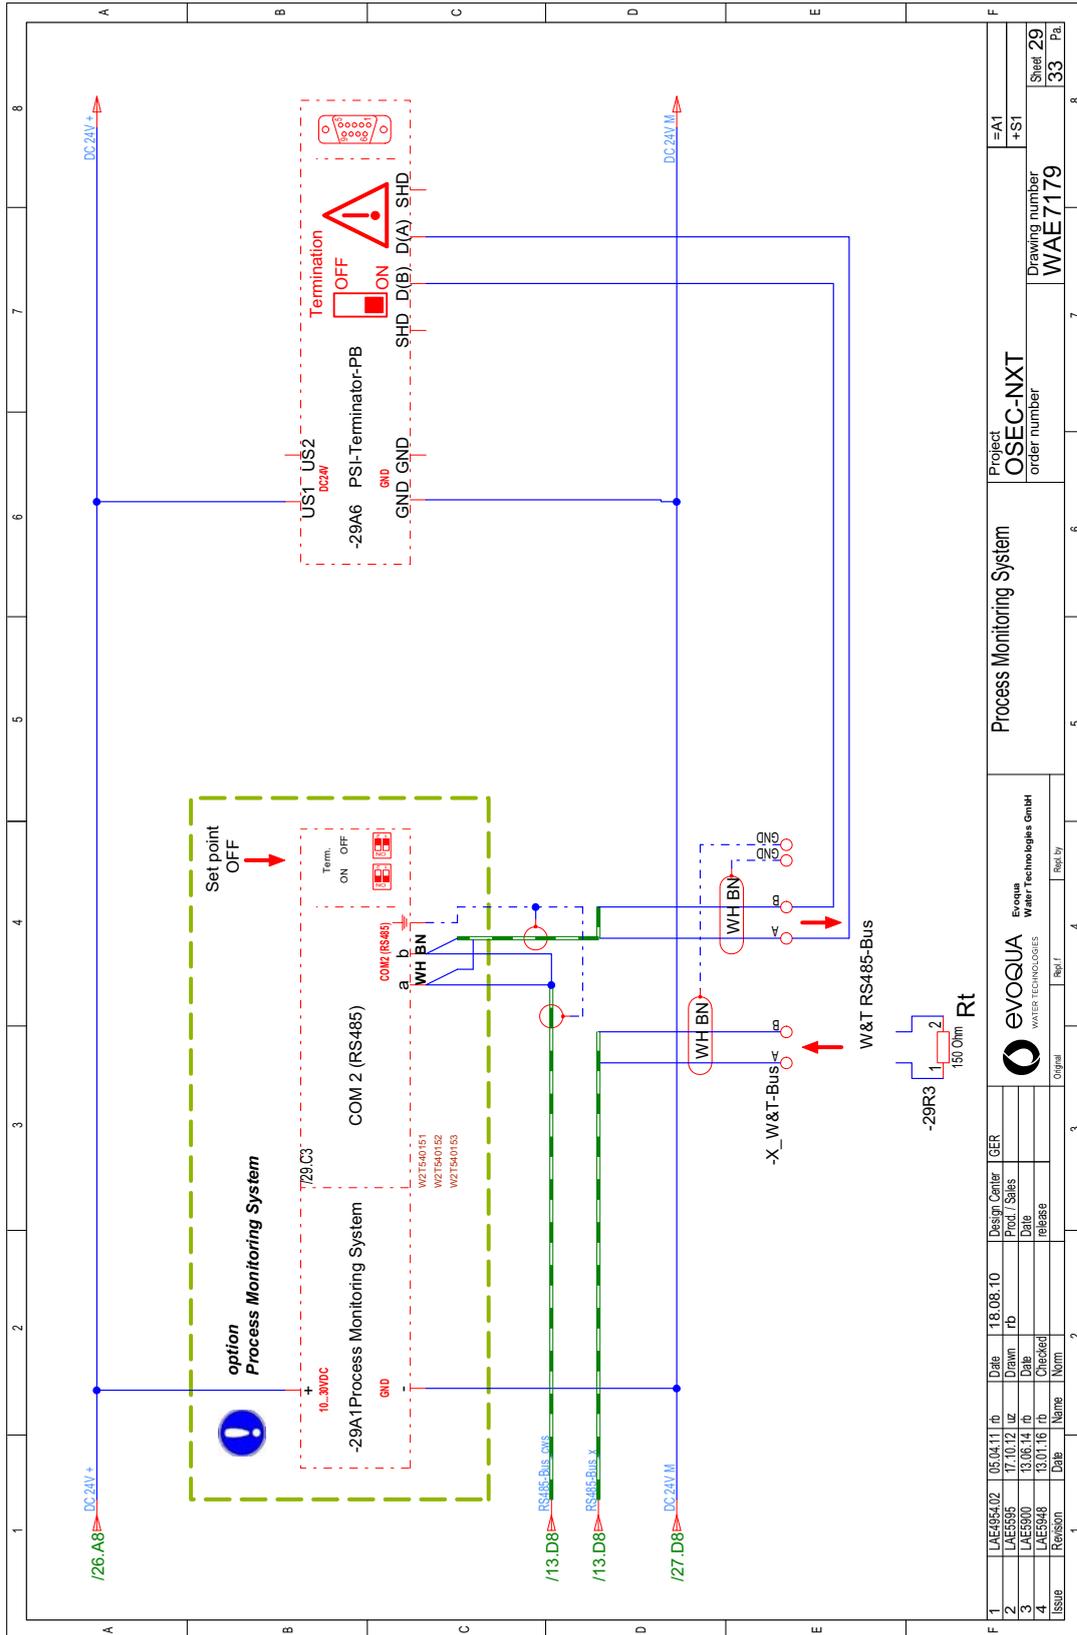

Project		Process Monitoring System		Order number		Drawing number		Sheet		Pa.	
=A1		+S1		WAE7179		WAE7179		29		33	
LAE4954.02		18.08.10		GER		Design Center		Date		18.08.10	
LAE5595		rb		Prof./Sales		Date		17.10.12		uz	
LAE5900		rb		Date		13.06.14		ib		Date	
LAE5948		rb		Date		13.01.16		ib		Date	
Issue		Revision		Name		Norm		Date		Name	
1		2		3		4		5		6	
Original		Ref. J.		Ref. I.		Ref. K.		Ref. L.		Ref. M.	
EVOQUA		WATER TECHNOLOGIES		WATER TECHNOLOGIES GmbH		EVOQUA		WATER TECHNOLOGIES		WATER TECHNOLOGIES GmbH	
Original		Ref. J.		Ref. I.		Ref. K.		Ref. L.		Ref. M.	

bill of materials: W3T168804																																											
Plant: =A1 Place: +S1																																											
No.	Qty.	Equipment identifier	Part-no.	Description	Manufacturer	Order no.																																					
1	1	-29A6	W2T547861	Terminator active, RS485/PROFIBUS																																							
2	1	-21K7	W2T826187	Surpression diode S00																																							
3	1	-11Q1	W2T504311	emergency stop switch 63A 3-p																																							
4	1	-21K7	W2T826713	auxiliary contactor DC24V, 40																																							
5	1	-21K7	W2T826716	auxiliary switch block 40																																							
6	2	-306.18	W2T504634	LIYCY 2x0,25mm² Control cable																																							
7	5	-306.19	W2T505957	LIYCY 8x0,25mm² Control cable																																							
8	1	-30A6	W3T360270	terminal OSEC-NXT 1..5 Zelle/Cell.																																							
9	8	-14K7 -16K2 -20K6 -20K8 -21K3 -21K6 -25K4 -26K7	W2T504096	Switching relays DC24V, 2N0NC																																							
10	5	-16K6 -17K3 -22K5 -26K3 -26K6	W2T504273	Switching relays DC24V, 1N0NC																																							
11	1	-16K2	W2T505796	relay bridge 2N0/NC																																							
12	5	-16K6 -17K3 -22K5 -26K3 -26K6	W2T505827	Relays terminal																																							
13	1	-16K6	W2T506866	relay bridge 1N0/NC																																							
14	1	-22Q1	W2T825469	Auxiliary contact																																							
15	1	-22Q1	W2T825482	circuit breaker 0,7 ..1,0A																																							
16	1	-23F2	W2T504080	circuit breaker C2A, 1-p																																							
17	1	-22F2	W2T504082	circuit breaker C4A, 1-p																																							
18	1	-12F2	W2T504516	circuit breaker C10A, 2-pollig																																							
19	1	-22F2	W2T505237	auxiliary contact 1N0/INC																																							
20	1	-12R7	W3T168604	Resistor P1 100																																							
21	1	-15U7	W2T827016	isolator 24VUC																																							
22	1	-12G2	W2T504499	DC-power-supply SITOP PSU200M DC24V 5A																																							
23	1	-23U4	W2T505772	optical coupler DC24V, 1 channel																																							
24	1	-A1	W3T164920	control cabinet 600x760x210mm																																							
25	2	-6.11 -6.14	W2T504003	outlet filter 148,5mm																																							
bill of materials																																											
<table border="1"> <tr> <td>1</td> <td>LAE49402</td> <td>18.08.10</td> <td>Design Center</td> </tr> <tr> <td>2</td> <td>LAE5595</td> <td>17.10.12</td> <td>Prof./Sales</td> </tr> <tr> <td>3</td> <td>LAE5900</td> <td>13.06.14</td> <td>Date release</td> </tr> <tr> <td>4</td> <td>LAE5948</td> <td>13.07.16</td> <td>Check release</td> </tr> <tr> <td>Issue</td> <td>Revision</td> <td>Date</td> <td>Name</td> </tr> </table>				1	LAE49402	18.08.10	Design Center	2	LAE5595	17.10.12	Prof./Sales	3	LAE5900	13.06.14	Date release	4	LAE5948	13.07.16	Check release	Issue	Revision	Date	Name	<table border="1"> <tr> <td>Original</td> <td>Repl./</td> </tr> </table>		Original	Repl./	<table border="1"> <tr> <td>Repl./</td> <td>Repl./</td> </tr> </table>		Repl./	Repl./	<table border="1"> <tr> <td>Project</td> <td>OSEC-NXT</td> </tr> <tr> <td>order number</td> <td>WAE7179</td> </tr> </table>		Project	OSEC-NXT	order number	WAE7179	<table border="1"> <tr> <td>Sheet</td> <td>31</td> </tr> <tr> <td>Pa.</td> <td>33</td> </tr> </table>		Sheet	31	Pa.	33
1	LAE49402	18.08.10	Design Center																																								
2	LAE5595	17.10.12	Prof./Sales																																								
3	LAE5900	13.06.14	Date release																																								
4	LAE5948	13.07.16	Check release																																								
Issue	Revision	Date	Name																																								
Original	Repl./																																										
Repl./	Repl./																																										
Project	OSEC-NXT																																										
order number	WAE7179																																										
Sheet	31																																										
Pa.	33																																										

bill of materials: W3T168804																																																																																																																							
No.	Qty.	Equipment identifier	Part-no.	Description	Manufacturer	Order no.																																																																																																																	
26	1	-116	W2T507237	label "attention"																																																																																																																			
27	1	-0	W3T168825	label "attention"																																																																																																																			
28	1	-13A7	W2T816358	Operator Panel KTP700 Basic color DP 2nd Gen.																																																																																																																			
29	1	-13A7	W3T160886	PDA pen																																																																																																																			
30	1	-9A3	W2T504304	Memory module 128KB																																																																																																																			
31	1	-9A3	W2T504466	S7-300 CPU314C-2 DP																																																																																																																			
32	1	-9A6	W2T504626	S7-300 SM323 8DI/8DO, DC24V																																																																																																																			
33	1	-9A3	W2T504921	Plug 40 pin																																																																																																																			
34	1	-9A6	W2T504927	Plug 20 pin																																																																																																																			
35	1	-9A3	W2T504928	Plug 40 pin																																																																																																																			
36	1	-9A5	W2T505096	Communications processor CP341																																																																																																																			
37	1	-9A3	W2T506123	Sectional bar																																																																																																																			
38	1	-9A3	W3T162698	Connecting cable S7 AG - HMI 1,6m																																																																																																																			
39	1	-9A5	W3T172486	Connecting cable S7-CP341-RS485-Bus																																																																																																																			
40	1	-22T2	W3T172555	Control transformer 208-550V/115V 250VA																																																																																																																			
41	1	-30W6	W3T172459	wiring bridge OSEC-NT 1..5 Zellen/Cell.																																																																																																																			
42	1	-30W6.1	W3T162910	wiring set OSEC-NXT 1..5 Zellen/Cell.																																																																																																																			
43	1	-306	W2T504177	cable gland M12																																																																																																																			
44	6	-306.1 -306.3 -306.5 -306.7 -306.8	W2T504181	cable gland M32																																																																																																																			
		-306.10																																																																																																																					
45	4	-306.11 -306.13 -306.15 -306.17	W2T504182	cable gland M40																																																																																																																			
46	3	-306.12 -306.14 -306.16	W2T506415	multi cartridge M40																																																																																																																			
47	3	-306.2 -306.4 -306.6	W2T506711	multi cartridge M32																																																																																																																			
48	1	-306.9	W2T506712	multi cartridge M32																																																																																																																			
49	1	-306	W3T160549	hexagon nuts M12																																																																																																																			
50	6	-306.1 -306.3 -306.5 -306.7 -306.8	W3T160553	hexagon nuts M32																																																																																																																			
<table border="1" style="width:100%; border-collapse: collapse;"> <tr> <td colspan="4"></td> <td colspan="2" style="text-align: center;">bill of materials</td> <td colspan="2"></td> <td colspan="2"></td> </tr> <tr> <td colspan="4"></td> <td colspan="2" style="text-align: center;">evoqua WATER TECHNOLOGIES</td> <td colspan="2" style="text-align: center;">Evotec Water Technologies GmbH</td> <td colspan="2" style="text-align: center;">Project OSEC-NXT</td> </tr> <tr> <td colspan="4"></td> <td colspan="2" style="text-align: center;">Original</td> <td colspan="2" style="text-align: center;">Repl.</td> <td colspan="2" style="text-align: center;">Drawing number WAE7179</td> </tr> <tr> <td colspan="4"></td> <td colspan="2" style="text-align: center;">GER</td> <td colspan="2" style="text-align: center;">=A1</td> <td colspan="2" style="text-align: center;">+S1</td> </tr> <tr> <td colspan="4"></td> <td colspan="2" style="text-align: center;">Date</td> <td colspan="2" style="text-align: center;">18.08.10</td> <td colspan="2" style="text-align: center;">Sheet 32</td> </tr> <tr> <td colspan="4"></td> <td colspan="2" style="text-align: center;">Drawn</td> <td colspan="2" style="text-align: center;">rb</td> <td colspan="2" style="text-align: center;">33</td> </tr> <tr> <td colspan="4"></td> <td colspan="2" style="text-align: center;">Date</td> <td colspan="2" style="text-align: center;">13.06.14</td> <td colspan="2" style="text-align: center;">Pa</td> </tr> <tr> <td colspan="4"></td> <td colspan="2" style="text-align: center;">Checked</td> <td colspan="2" style="text-align: center;">rebase</td> <td colspan="2"></td> </tr> <tr> <td colspan="4"></td> <td colspan="2" style="text-align: center;">Date</td> <td colspan="2" style="text-align: center;">13.01.16</td> <td colspan="2"></td> </tr> <tr> <td colspan="4"></td> <td colspan="2" style="text-align: center;">Name</td> <td colspan="2" style="text-align: center;">Norm</td> <td colspan="2"></td> </tr> <tr> <td colspan="4"></td> <td colspan="2" style="text-align: center;">Revision</td> <td colspan="2" style="text-align: center;">Date</td> <td colspan="2"></td> </tr> </table>														bill of materials										evoqua WATER TECHNOLOGIES		Evotec Water Technologies GmbH		Project OSEC-NXT						Original		Repl.		Drawing number WAE7179						GER		=A1		+S1						Date		18.08.10		Sheet 32						Drawn		rb		33						Date		13.06.14		Pa						Checked		rebase								Date		13.01.16								Name		Norm								Revision		Date			
				bill of materials																																																																																																																			
				evoqua WATER TECHNOLOGIES		Evotec Water Technologies GmbH		Project OSEC-NXT																																																																																																															
				Original		Repl.		Drawing number WAE7179																																																																																																															
				GER		=A1		+S1																																																																																																															
				Date		18.08.10		Sheet 32																																																																																																															
				Drawn		rb		33																																																																																																															
				Date		13.06.14		Pa																																																																																																															
				Checked		rebase																																																																																																																	
				Date		13.01.16																																																																																																																	
				Name		Norm																																																																																																																	
				Revision		Date																																																																																																																	

11.Index

A

Abbreviations 46, 56, 118, 161, 211
Accessories 28, 39
Accessory set 39
Accident 18
Additional tools 177
Adjust date/time 152
Admission pressure
 Operating water 43
Air exchange 42
Air flow monitor 39
 Connect input 53
 Fault 174
 Install 51
 Test 63
Alarm horn 31
Alarm light 31
Alarm relay 54
 Function 139
Alarm relay assignment 135
Alarm relay function 139
Ambient conditions 11, 19, 42
Analog inputs 146
Analog outputs 146
Anode 21, 25
Anode chamber 21, 25
Anolyte 15, 17, 21, 23, 25
Anolyte circuit 189
Answer frame 95
Automatic mode 109, 168, 174
 Automatic mode 111
 Turning on 111
Automatic siphoning 30, 31, 53
Automatic stopcock 31, 58, 173
 Will not close 173
 Will not open 173

B

Brine 17, 21, 43, 56, 65
 Hose connection 211
Brine flow

 Fault 176
Brine pump 19, 23, 24, 25, 30, 150
 Errors 173
 Fault 173
 Maintenance 195
 Manual brine pump 155
Buttons 106

C

Calibrate electrolysis water 165
Calibrate electrolysis water flow meter 165
Calibrate operator display 152
Cathode 21, 24
Cathode inlet
 Ball valve 211
Cell voltage 31, 34, 35, 36
 Reading 133
 Too high 171
Change display language 152
Check byte 91
Check operating water pressure 59
Checking and cleaning the
 Filter 166
Chemicals 14
ChemWeb-Server 31
Chlorine gas 15, 17, 21, 23, 25, 189
Chlorine gas alarm 31, 175
Chlorine separator 21, 23, 24, 25, 31
 Brine inlet 211
 Drain 211
Chlorine separator level switch
 19
Clean display 151
Clean the
 Injector 196
Collecting basin 29, 49
Communication protocol 90
Completing the acceptance certificate 55
Connecting the inputs 52
Connecting the interfaces 55
Connecting the outputs 54
Connections 46

- Electrical 52
- Electrolysis cell 24
- Hose connections 211
- Mechanical 29, 50
- Sodium hypochlorite storage tank 29
- Control and display unit 105
- Control cabinet 13, 24, 26, 42
 - Electrical installation 52
 - Wiring diagram 213
- Control unit 24, 26, 30
- Cooling water 23, 30, 31
 - Ball valve drain 211
 - Check flow rate 127
 - Errors 171
 - Limit value sensor 211
 - Membrane valve 211
 - Outlet 45, 50, 211
 - Quantity 34, 35, 36
 - Set flow rate 59
 - Solenoid valve 211
- Correcting
 - Faults 170
- Correcting faults 170
- Cover 24
- Customer services 177
 - Operating journal 247, 248

- D**
- Data check (DC) 92
- Data unit (DU) 92
- Description 21
- Description of the frame bytes 91
- Destination address (ZA) 91
- Diagnostics 140
- Digital inputs 52, 144
- Digital outputs 54, 145
- Dilution air 23
- Dimensions 34, 35, 36
- Display 30, 105
- Display contrast 151
- Display unit 24, 26
- Disposal 13, 18
- Dosing ball valve
 - Electrolysis water 60, 211
- Dosing leak 174
- Dosing pump 22, 174
- Drawings
 - Arrangement of components 209
 - Component Parts List 211
- Drinking water 21, 24, 43
- Drum pump 39, 57

- E**
- Electrical installation 52
- Electrolysis 149
- Electrolysis cell 19, 21, 23, 24
 - Pro-Rata 20
 - Replacing 20
- Electrolysis current 30, 31, 34, 35, 36
 - Reading 133
- Electrolysis current too low 171
- Electrolysis power 69, 119
- Electrolysis water 30, 31, 34, 35, 36, 141, 154
 - Calibrate 150
 - Check flow rate 126
 - Dosing ball valve 211
 - Fault 176
 - Flow meter 176, 211
 - Set flow rate 60
 - Solenoid valve 211
- Electrolysis water flow meter 211
- EMERGENCY STOP 31, 53, 175
- Empty
 - Anode chamber 188, 189, 203
 - Cathode chamber 188
 - Empty the anode chamber 203
 - Empty the cathode chamber 203
 - Emptying the cathode chamber 62
- End byte (EB) 92
- Error message log 143
- Error messages 30, 68, 131, 170, 171, 174, 176
- EU Safety Data Sheet 18
- External release 121
- External water softener 52, 172

- F**
- Fan 19, 22, 23
- Fan failure 174
- Faults 168
- Fill level
 - Chlorine separator 67, 118
 - Salt dissolving tank 57, 61
 - Sodium hypochlorite storage tank 109
- Filter 19, 160, 166
 - Pressure reducing valve drain tap 211
- Final tasks 69
- First aid 18
- Flow meter 211
- Fluid level measuring tube 49, 65
- Frame check (FC) 92
- Functions 32

H

Handling chemicals 14
Heat emission 42
Heat exchanger 23, 24, 25
Hinged feet 39, 41, 47
Hose connections 46, 49, 211
Hydrogen 15, 16, 21, 23, 24, 31
Hydrogen vent hose 19, 197
Hydrogen vent pipe 42, 44, 50, 63, 159, 197
Hypochlorite pipe 50

I

Info 143
Information signs 14, 39
Installation 39

- Chlorine membrane electrolysis system 47
- Electrical 52
- Mechanical 46
- Personnel 12, 19
- Salt dissolving tank 48, 50, 52
- Sodium hypochlorite storage tank 49

Installation of the connections 50
Installation room 42, 48
Interface 139
Interface connection 88
Interfaces 31

L

Language

- Setting 58

Leaks 15, 45, 161, 168
Level probe 23

- Chlorine separator 25
- Salt dissolving tank 187
- Sodium hypochlorite storage tank 49

Level switch

- Chlorine separator 155
- Salt dissolving tank 52
- Sodium hypochlorite storage tank 49, 65

Liability for defects 19, 177
Log in 107

M

Main menus 134

- Diagnostics 140
- Manual functions 153
- Outputs 135
- Service 147
- System 151

Main screen 106

Main switch 19, 26, 55, 58, 168
Mains connection 34, 35, 36
Maintenance 11, 19, 47, 142, 148

- Additional tools 45
- Annual 124
- Checklist 178
- Customer services 177
- Level 1 159
- Level 2 159
- Monthly 124
- Operator 159
- Personnel 12
- Protective clothing 14
- Wear parts 19

Maintenance contract 20
Maintenance overview 159
Maintenance part sets

- 1 year 180
- 2 years 181
- 5 years 182
- Pump head service set 183
- Rectifier 183

Maintenance parts sets 177, 179
Maintenance work 185

- Brine pump maintenance 195
- Checking the product concentration 186
- Checking the product temperature 186
- Checking the salt dissolving tank level probe 187
- Cleaning the water softener injector 196
- Empty and rinse the anode chamber 189
- Empty and rinse the cathode chamber 188
- Measuring individual cell voltage 185
- Measuring the cell current 185
- Replace the hydrogen vent hose 197
- Replace the paddle switch 199
- Replacing the rectifier 198
- Replacing wear parts 190

Manual brine pump 155
MANUAL Cooling water 122
MANUAL Electrolysis water 122, 154
Manual functions 122, 153
Manual functions brine filling On 155
Manual functions Cooling water On 154
Manual functions Electrolysis water On 154
Manual keys

- Brine pump 155
- Cooling water 154
- Electrolysis water 154

MANUAL Top-up brine 122
Measure air flow 69
Measure air flow rate 160
Measure operating water hardness 61, 164
Measure softened water hardness 60, 163

- Measuring the cell current 185
- Measuring the water hardness 60, 61
- Mechanical installation 46
- Membrane 20, 188, 189
- Menu selection 134
- Menus 134

- N**
- NaClO dosing pump 23
- NaClO level probes plausibility 172
- Negative confirmation 96
- Number byte (AB) 92

- O**
- Opening 44
- Operating data 140
- Operating hours 140
- Operating journal 19, 176
- Operating messages 30, 115, 156
- Operating water 23, 43, 159
 - Ball valve 211
 - Connection 50
 - Hose connection 211
 - Pressure reducing valve 211
- Operating water hardness 61
- Operation 105
- Operator training 70
- Outlet hardness 160
- Outputs 54, 135
- Overfilled 31, 52, 53
- Overflow 29, 49
- Overflow mechanism 48

- P**
- Packing plate 29
- Parameter reset 149
- Parameters 19
- Password
 - Password 107
 - Password levels 32
 - Password protection 107
- Perform annual maintenance 124
- Perform monthly maintenance 124
- Performance
 - Electrical 34, 35
 - electrical 36
 - Nominal system performance 27, 34, 35, 36
- Personnel 7, 12, 19, 159
- Plant leak 174
- Plausibility
 - Cooling water 176
 - Flow meter 176
- Potentially isolated RS485 bus system 89
- Potentially non-isolated RS485 bus system 89
- Power consumption 34
- Power off 41, 129
- Power supply 41, 52, 53, 55, 203
 - Connect 55
- Preparation 118
 - Ext. locked! 121
 - Manual preparation 113
 - Preparation manually 114
- Preparation active 109, 118
- Preparation count 140
- Preparation off 116
- Preparation running 119
- Preparation shut down 119
- Preparation standby 117
- Pressure reducing valve
 - Electrolysis water 59, 159
 - Filter 167
 - Operating water 59, 159
- Prevention of risks 18
- Process 21
 - Description 21
 - diagram 23
- Profibus DP 31
 - Configuring the Profibus DP master 73
 - Connecting Profibus DP 55, 71
 - Connecting to Profibus DP 71
 - Data exchange table 77
 - Data formats 84
 - Setting the Profibus DP slave 86
 - Technical data 37, 71
- Protection type 34, 35, 36
- Protective clothing 14, 15, 18
- Protective voltage 129, 133

- R**
- Reactor 21, 23, 25
- Reading the cell voltage and electrolysis current 133
- Rectifier 24, 26, 31, 173
- Reduced brine 17, 21
- Regenerating the water softener 156
- Release
 - Dosing/decanting 54
 - Preparation 53
 - System EMERGENCY STOP 53, 175
- Remove the seal on the main switch 58
- Replace electrolysis cell 200
- Replacement components 190
- Replacement of components 13

- Replacement of electrolysis cell 20
- Replacing the electrolysis cell 200
- Replacing wear parts 190
- Replenish
 - Salt 162
- Request frame 93
- Rinse
 - Anode chamber 189
 - Cathode chamber 188
- Rinse the anode
 - Chamber 189
- Rinse the anode chamber 203
- Rinse the cathode chamber 203
 - With acid 66, 201
- Run time
 - Autom. Siphoning 170
 - Brine pump 173
- Run-up 69, 109, 118

- S**
- Safety 11
 - Chemicals 14
 - General safety instructions 12
 - Handling chemicals 12
 - Intended use 11
 - Personnel 12
 - Safety instructions 8, 12
- Salinometer 45, 57, 65, 177
- Salt 19, 28, 43, 57, 160, 162
 - Salt pellets 19
- Salt dissolving tank 21, 23, 28, 31, 39, 43, 147
 - filling 61
 - Filling time exceeded 172
 - Level probe 187
 - Level switch 52
 - Preparation 57
 - Replenishment 30
 - Setup 48
- Salt dissolving tank filling 50, 211
- Salt dissolving tank filling time 172
- Salt dissolving tank replenishment 30, 31
- Sample tap 65, 160, 211
- Saturated brine 21, 23, 25
- Scope of supply 39
- Separator 21, 23, 24, 25, 31
- Serial number 143
- Service 147, 177
 - Personnel 12
- Service Brine pump 150
- Service Electrolysis 149
- Service Maintenance 148
- Service Operating water 150
- Service Parameter reset 149
- Setting the electrolysis water flow rate 60
- Setup 47
- Shut-down 41, 111, 176, 203
- Shutdown period 20, 41, 176, 203
- Signage 14, 39
- Signal contact 54
- Siphon device plausibility 170
- Siphoning 30, 31, 53
- Slave address (SA) 91
- Sodium hydroxide 15, 16, 21, 23, 24, 57
- Sodium hydroxide solution 16
- Sodium hypochlorite 15, 18, 22, 23
 - Disposal 49
 - Manual request 113, 117
 - Preparation 109, 119
- Sodium hypochlorite storage tank 22, 29, 44
 - Level switch 49, 65
 - Setup 49
- Sodium thiosulphate 189
- Softened water 21, 23, 24, 160
- Software 143
 - Version 143
- Solenoid valve 19
 - Cooling water 154, 211
 - Electrolysis water 154, 211
 - Salt dissolving tank filling 211
 - Water softener flushing 211
 - Water softener injector 211
 - Water softener water inlet 163, 211
- Spare parts 13, 200
- Special case 92
- Specification of the bus interface 90
- Spiral hose 19, 50, 197
- Standby 115
 - Operating state 109
- Stands 39, 41, 47
- Start byte (SB) 91
- Start preparation 113
- Start up
 - Overview 57
- Starting the system up again 205
- Start-up 56
 - Additional tools 45
 - Overview 178
 - Personnel 12, 19
 - Prepare the salt dissolving tank 57
 - Process 57
 - Starting the system up again 205
 - Tools 57
- Storage 40
- Storage tank 22, 23, 29, 39, 44, 49

- Empty 52, 53, 124
 - Leak 174
 - Level switch 49, 65
 - Overfilled 52, 53, 174
 - Setup 49
 - Supply 40
 - Synchronisation bytes 91
 - System 151
 - System adjust date/time 152
 - System calibrate operator display 152
 - System change display language 152
 - System Clean display 151
 - System configuration 24
 - System Display contrast - / + 151
 - System Info 143
- T**
- Target groups 7
 - Technical data 34
 - Temperature gradient 42, 48
 - Temporary parts 19, 20
 - Test flushing system 157
 - Test injector 158
 - Test inlet 157
 - Test kit 39, 57, 60, 163, 164
 - Titration 45, 177, 186
 - Touch Panel 30, 105
 - Training and instructing operators 70
 - Transmission medium 87
 - Transport 40
 - Transport and storage 40
 - Transport plugs 49
 - Transport rollers 47
 - Turning on the chlorine membrane electrolysis system 58
- U**
- Unpacking 40
 - Using the maintenance part sets 184
- V**
- Ventilation hood 39, 41, 48
- W**
- W&T RS485 Bus 55
 - W&T RS485 bus interface 31
 - Warning message log 142
 - Warning messages 30, 123
 - Warranty 19, 177
 - Water hardness 160
 - Operating water 164
 - Soft water 163
 - Water hardness of softened water 60
 - Measuring 160
 - Water hardness test kit 39, 57, 60, 163
 - Water softener 21, 23, 24, 30, 31, 156
 - Brine flow rate too low 128
 - Clean the injector 196
 - Electrical installation 52
 - Fault 172
 - Regeneration 24, 31, 121
 - Water softener plausibility 176
 - Water softener regeneration 24, 31, 121
 - Water softener test flushing system 157
 - Water softener test Inlet 157
 - Wear parts 19
 - Weight 34, 35, 36
 - Wiring diagram 13, 213



Wallace & Tiernan® Products worldwide

Australia
+61 3 8720 6597
info.au@evoqua.com

Canada
+1 905 944 2800
canadainfo@evoqua.com

China
+86 10 57076305
sales.cn@evoqua.com

France
+33 1 41 15 92 20
wtfra@evoqua.com

Germany
+49 8221 9040
wtger@evoqua.com

Singapore
+65 6830 7165
sales.sg@evoqua.com

UK
+44 1732 771777
info.uk@evoqua.com

USA
+1 856 507 9000
wt.us@evoqua.com



Wallace & Tiernan®
an EVOQUA brand



Auf der Weide 10, 89312 Günzburg, Germany

+49 (8221) 904-0 www.evoqua.com

DEPOLOX, OSEC, Barrier, Chem-Ad and Wallace & Tiernan are trademarks of Evoqua, its subsidiaries or affiliates, in some countries.

All rights, especially those to duplication and distribution as well as translation, are reserved. No part of this document may be reproduced in any form (printing, photocopying, microfilm or any other method) or saved, processed, duplicated or distributed by the use of electronic systems without the express written consent of Evoqua Water Technologies GmbH.

All information presented herein is believed reliable and in accordance with accepted engineering practices. Evoqua makes no warranties as to the completeness of this information. Users are responsible for evaluating individual product suitability for specific applications. Evoqua assumes no liability whatsoever for any special, indirect or consequential damages arising from the sale, resale or misuse of its products.

© 2014 Evoqua Water Technologies GmbH Subject to change without notice WT.085.140.000.DA.IM.0916
W3T185931 Issue 05-0916