




evoqua
WATER TECHNOLOGIES

IONPURE® CONTINUOUS ELECTRODEIONIZATION (CEDI)

THE WORLD'S FIRST CHOICE FOR CEDI TECHNOLOGY



WHAT IS CONTINUOUS ELECTRODEIONIZATION (CEDI)?

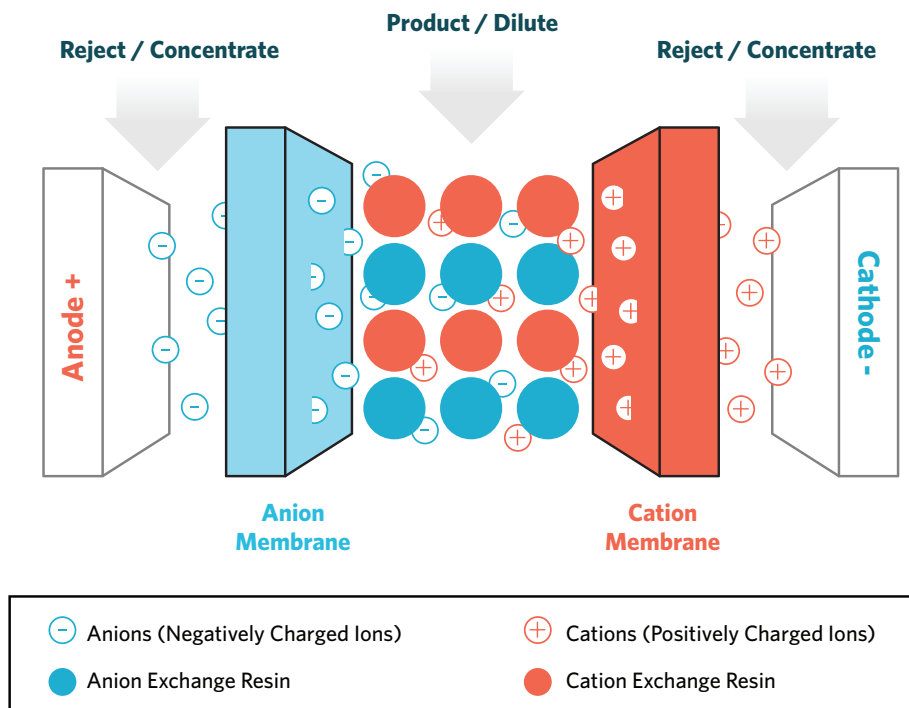


CEDI is a chemical-free, self-regenerating technology used to provide a consistent flow of high-quality deionized water.

With the growing costs of chemicals for regeneration and waste neutralization, and heightened safety concerns with handling hazardous chemicals, many industrial customers began seeking an alternative to cost-prohibitive, on-site regenerable ion exchange for creating ultrapure water. IONPURE®, an Evoqua brand, offers that solution. The first to commercialize CEDI in 1987, we have provided thousands of modules that deliver ultrapure water at capacities ranging from 0.013 m³/h (0.06 gpm) to 22.7 m³/h (100 gpm).

In short, CEDI is a water treatment process that uses a combination of ion-exchange resins, ion-exchange membranes, and direct current to continuously deionize water without the need for chemicals. The avoidance of chemicals helps to reduce the systems' operating and maintenance costs and, therefore, improve your bottom line.



CEDI OR MIXED-BED DEIONIZATION (MBDI)

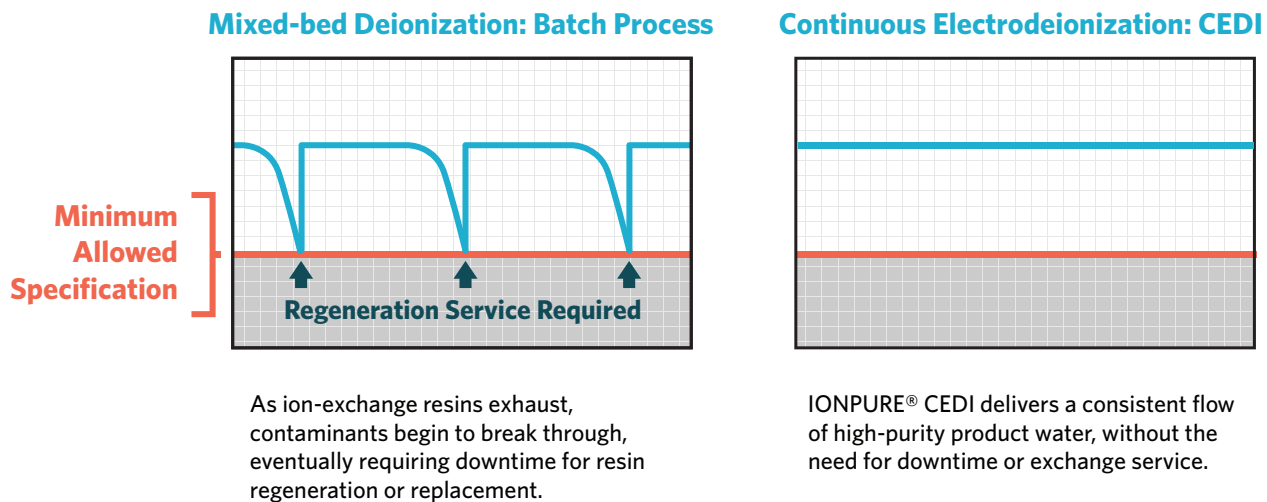


Since its commercialization, the use of CEDI technology has grown in popularity. In fact, the sale of EDI systems sold worldwide increased from 20% to 30% in 2017. Some of the major advantages of CEDI over traditional mixed-bed deionization systems include:

- No acid or caustic bulk storage, pumping, waste neutralization, or disposal issues
- Lower operating costs due to lower manpower requirements, as well as lack of chemical regeneration
- Smaller footprint
- Safer, more consistent operation

While both ion exchange and EDI use ion-exchange resins, the removal mechanisms are quite different. Conventional ion exchange utilizes chemically regenerated ion-exchange resins, which function in a capture (exhaustion cycle) and discharge (regeneration cycle) mode. This results in a breakthrough of ions at the end of the service cycle and a rinse out of regenerant at the beginning of the next service cycle. Capacity and selectivity are the most important resin properties in the mode of operation.

CEDI uses a reaction/transport mechanism to remove ions through resin under influence of a DC field. This requires a continuous path of like-charge resin beads. The transport is largely across the surface of the resin beads. Transport through resin bead (particle diffusion) can be limiting.

IONPURE: CEDI Flow Range

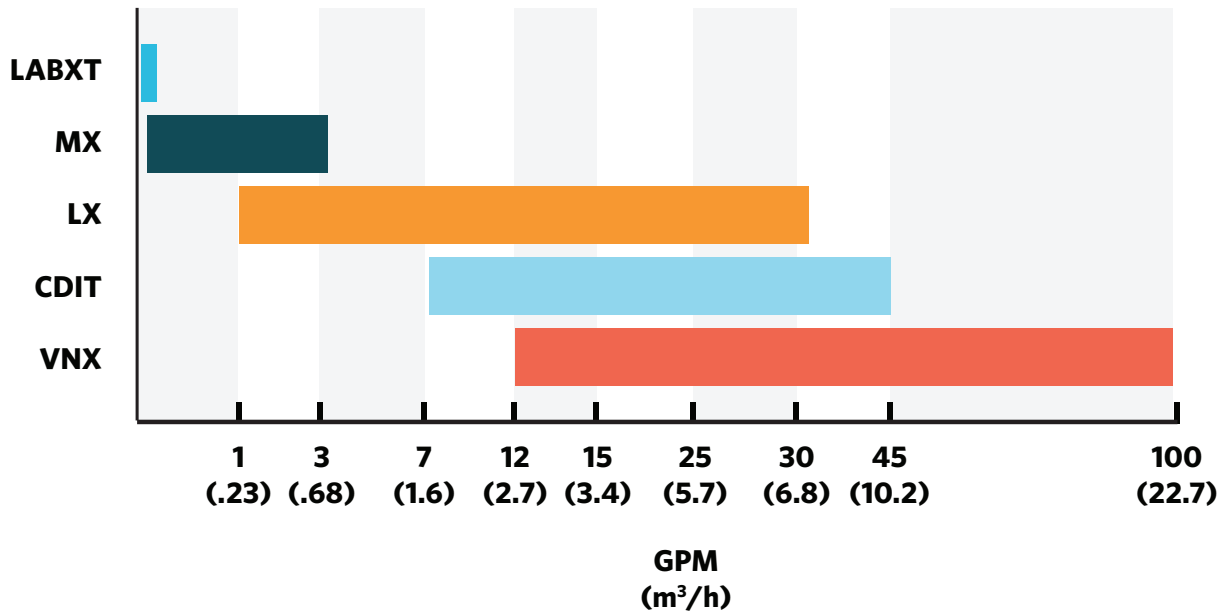

IONPURE® PRODUCT OVERVIEW

We have a full line of products varying in size to meet your requirements. Our product lines include:

VNX - high-flow applications; flow rates of 5.7 m³/h (25 gpm) to 22.7 m³/h (100 gpm)

LX - medium-flow applications; flow rates of 0.23 m³/h (1 gpm) to 7.7 m³/h (33.8 gpm)

LabXT & MX - low-flow and laboratory-flow applications; flow rates of .003 m³/h (0.013 gpm) to 0.75 m³/h (3.3 gpm)

Whether you want to eliminate chemical handling and regenerant waste or just need a system to help purify water for your supercritical boiler, rest assured that one of our CEDI modules will meet your needs. In addition, we're continuously developing new products or improving our existing modules to better serve our customers' needs. We also have an entire team of technical support experts available to troubleshoot any problems you may run into.

DISTRIBUTION

IONPURE CEDI modules and power products are distributed through a large base of highly trained and knowledgeable Original Equipment Manufacturers (OEMs), who know the ins and outs of our technologies. Our OEMs bid on projects and provide in-depth project specifications detailing the predicted performance of IONPURE CEDI modules for the application.

ADVANTAGES:

Product - The most robust CEDI device with the simplest operation and maintenance

- The best product for your application

Experience - IONPURE has the most experience in CEDI with proven reliability worldwide in Power, Microelectronics, Pharmaceutical, and many other markets.

Support - Local support via our local OEM network with IONPURE factory and local technical experts

- The support you need when you need help



MARKET OVERVIEW

POWER GENERATION:

Power plants worldwide are switching out their conventional MBDI for IONPURE CEDI modules to feed boilers for steam generation. Designed similarly to reverse osmosis (RO) systems, they're used in conjunction with RO as a polishing step for boiler feed water and cooling tower applications. For boilers, the modules provide deionized water to create the steam that turns the turbines. The following products are used for power generation:

- VNX-EP, VNX-Max/Mini, and VNX-CDIT
- LX-X and LX-Z

MICROELECTRONICS:

Manufacture of semiconductor devices needs the highest purity water of nearly every industry, requiring extremely low levels of contaminants such as sodium, silica, and boron. The microelectronics industry demands low-maintenance technology that will operate efficiently with minimal downtime. Safety is also an industry concern, which is why more and more companies desire a system that will reduce its chemical usage. IONPURE VNX-EX and VNX-E modules are designed to deliver a continuous supply of ultra pure water without the use of chemicals or downtime due to service exchange.

BIOPHARMACEUTICAL:

Did you know that most major multinational pharmaceutical company uses CEDI technology? The majority of the top 10 companies own and operate multiple hot water sanitizable LX-HI units. The IONPURE LX CEDI modules are the only ones on the market that allow instantaneous hot water sanitization without temperature ramping, continuous operation at up to 60° C (140° F) and 2 bar/30 psi feed pressure during sanitization. There's no need to re-torque these modules after installation/startup. IONPURE LX-X and LX-EU CEDI modules are also available for pharmaceutical applications where hot water sanitization is not required.

LOW-FLOW APPLICATIONS

Our low-flow modules are used in laboratories, hospitals and universities for a wide range of applications, including:

- Central water system for lab
- Tabletop high-purity water systems for laboratory use
- Feed to equipment such as autoclaves and clinical analyzers

BULK DEIONIZATION/GENERAL INDUSTRIAL:

IONPURE CEDI products are used in a variety of general industrial applications to provide high-quality demineralized water.

LX & VNX PRODUCT SPECIFICATIONS

FEED WATER SPECIFICATIONS

Feed Water Conductivity Equivalent (FCE)	< 40 $\mu\text{S}/\text{cm}$
Operation Temperature	41 - 113°F (5 - 45°C)
Inlet pressure	< 100 PSI (6.9 bar)

TYPICAL PRODUCT PERFORMANCE

Product Resistivity at Nominal Flow Rate	15-18 $\text{M}\Omega\text{-cm}$
Recovery	90-95%
Silica (SiO_2) removal	90-95%

SPECIALTY PRODUCT SPECIFICATIONS

LX-HI

FEED WATER SPECIFICATIONS

Feed Water Conductivity Equivalent (FCE)	< 40 $\mu\text{S}/\text{cm}$
Operation Temperature	41 - 140°F (5 - 60°C)
Sanitization Temperature at 30 psi (2.0 bar)	185F (85°C) \pm 5°C

TYPICAL PRODUCT PERFORMANCE

Product Conductivity at Nominal Flow Rate	< 0.1 $\mu\text{S}/\text{cm}$
Recovery	90-95%
Silica (SiO_2) removal	90-99%

VNX-EX

FEED WATER SPECIFICATIONS

Feed Water Conductivity Equivalent (FCE)	< 10 $\mu\text{S}/\text{cm}$
Operation Temperature	68 - 113°F (20 - 45°C)
Inlet pressure	30 - 100 psi (2.1 - 6.9 bar)

TYPICAL PRODUCT PERFORMANCE

Product Resistivity (DI feed)	> 18.0 $\text{M}\Omega\text{-cm}$
Product Resistivity (2-pass RO Feed)	> 17.5 $\text{M}\Omega\text{-cm}$
Sodium (Na) and Chloride (Cl) Removal	> 99.99%
Silica (SiO_2) and Boron removal	99%

VNX-HH

FEED WATER SPECIFICATIONS

Feed Water Conductivity Equivalent (FCE)	< 40 $\mu\text{S}/\text{cm}$
Operation Temperature	41 - 113°F (4 - 45°C)
Total Hardness (as CaCO_3)	up to 2 ppm

TYPICAL PRODUCT PERFORMANCE

Product Resistivity at Nominal Flow Rate	> 16 $\text{M}\Omega\text{-cm}$
Recovery depending on hardness	80-90%


VNX-CDIT

FEED WATER SPECIFICATIONS

Feed Water Conductivity Equivalent (FCE)	< 100 $\mu\text{S}/\text{cm}$
Operation Temperature	41 - 113°F (4 - 45°C)
Total Hardness (CaCO_3)	Up to 4 ppm
Silica (SiO_2)	Up to 2 ppm

TYPICAL PRODUCT PERFORMANCE

Product Conductivity at Nominal Flow Rate	< 0.1 $\mu\text{S}/\text{cm}$
Recovery	90-95%

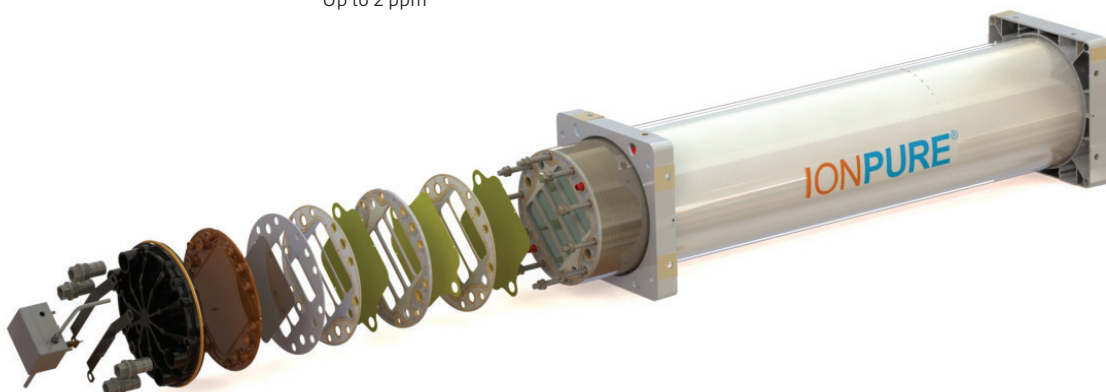

CEDI POWER PRODUCTS

PROVIDING TOTAL SOLUTIONS FOR ORIGINAL EQUIPMENT MANUFACTURERS (OEMS)

IONPURE's DC3 Power Supply

For your convenience, we're proud to provide a complete CEDI solution - including the power supply required to power your system. IONPURE recently launched the DC3 Power Supply, which provides constant control of current, voltage and/or power to our CEDI modules, as well as NEXED® EDR modules. To put it simply, the DC3 Power Supply is designed to optimize performance, which ultimately allows for a more cost-effective and simplified solution for electrical system design. Some of the benefits of the DC3 include, but are not limited to:



- Allows direct connection from power line, so no separate isolation transformer is required
- Features a high-efficiency, 3-phase switch mode design to reduce power consumption vs. traditional SCR power products
- Features on-board diagnostics and alarms
- Features LED power and status indicators
- MODBUS® TCP ethernet connection

Digital Communication Rectifiers Available

In addition to the DC3 Power Supply, IONPURE offers Digital Communication Rectifiers (DCRs). Like the DC3, these products also allow for constant control of power of CEDI modules. The DCR is compact, reliable, single-phase DC power controller designed with a high-performance microprocessor. It also features on-board digital communication to ensure easy integration with existing PLC/HMI with the use of MODBUS or 4-20mA signals. A separate external isolation transformer is required for the DCR.




Touch Panel Display

An optional 4.3" touchscreen HMI is available for use with the DCR-M or DC3.

IP-PRO ONLINE

ACCURATELY PREDICT MODULE PERFORMANCE WITH AN ONLINE TOOL

In addition to manufacturing and providing the products needed to power CEDI modules, IONPURE has developed a tool—IP-Pro Online—to help you predict the performance of our modules. Simply enter the information, including anions, cations, flow rate, application type, etc., and our online projection software will determine which module(s) will best suit your needs. To use the tool, you must first register for an account. Existing users must login prior to use.

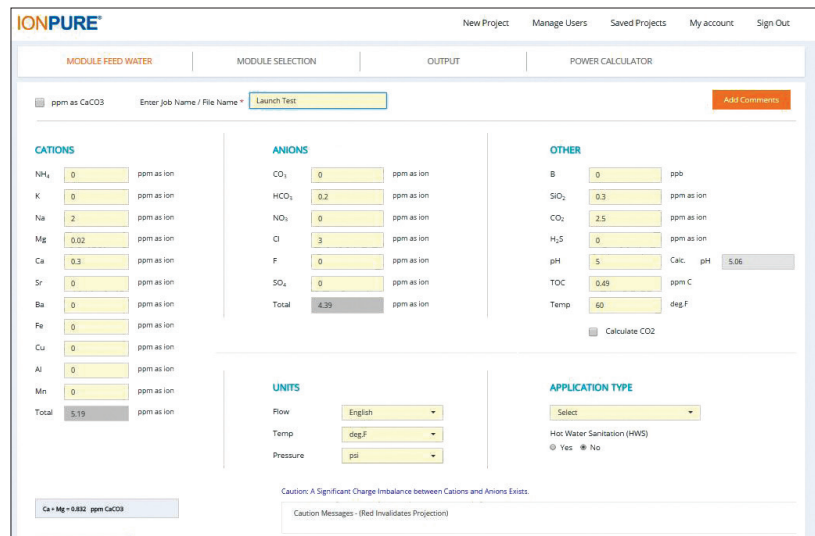

www.ippro.evoqua.com

www.evoqua.com/ionpure

@IONPURE_CEDI



**FIND YOUR LOCAL IONPURE SALES AND
TECHNICAL SUPPORT SPECIALIST**



210 Sixth Avenue, Suite 3300, Pittsburgh, PA 15222

Email: IONPURE@EVOQUA.COM www.evoqua.com/ionpure

Ionpure is a trademark of Evoqua, its subsidiaries or affiliates in some countries.

The information provided in this literature contains merely general descriptions or characteristics of performance which in actual case of use do not always apply as described or which may change as a result of further development of the products. An obligation to provide the respective characteristics shall only exist if expressly agreed in the terms and of the contract.

© 2018 Evoqua Water Technologies LLC Subject to change without notice ION-CEDI-BR-0918